

Manual de usuario de FW5850

Parte 1

(Descripción del producto)

Versión 3.0

20 de septiembre de 2008

INTPLUS S.L.

www.superinventos.com

www.flexwatch.es

Contenidos

1.	Descripción general del producto.....	5
1.1.	FlexWATCH®	5
1.2.	FW-5850	5
1.3.	Funciones principales del FW-5850	6
1.4.	Especificaciones técnicas de FW-5850.....	7
1.5.	Lista de empaquetado	9
2.	Descripción del hardware.....	10
2.1.	Vista del panel frontal de FW-5850	10
2.2.	Panel trasero de FW-5850.....	12
2.2.1.	Descripción del puerto COM	14
3.	Instalación del hardware y configuración básica del FW-5850.....	15
3.1.	Antes de la instalación, ...	15
3.2.	Condición de valores de fábrica	15
3.3.	Instalación del hardware de FW-5850.....	15
3.3.1.	Montaje del disco duro del FW-5850	16

Notas

- Los materiales de este documento tienen sólo fines informativos y pueden someterse a cambios sin previo aviso. Aunque se han hecho todos los esfuerzos razonables en la preparación de este documento para asegurar su precisión y exactitud, el fabricante no se responsabiliza de los errores resultantes ni de las omisiones de este documento; o del uso de la información contenida en este manual.
- Seyeon Tech. se reserva el derecho de realizar modificaciones al diseño del producto sin notificación previa a sus usuarios.

Copyright

Copyright© 1999-2008 Seyeon Tech Co., Ltd. Reservados todos los derechos.

Queda prohibida toda reproducción, almacenamiento o transmisión de cualquier forma o medio, ya sea electrónico, mecánico, fotocopiado, grabación, etc, sin el consentimiento previo y por escrito de Seyeon Tech Co., Ltd.

Copyright 1999-2008 Seyeon Tech Co., Ltd.

810-12 Yeok Sam-dong, Kang Nam-gu, SEOUL, 135-081, KOREA

TEL : 82 2 3017 0855 / FAX : 82 2 3017 0843

URL : <http://www.flexwatch.com>

Advertencia

Para evitar el riesgo de electrocución, **nunca** retire la carcasa del sistema. Cualquier reparación o modificación del producto deberá ser realizado únicamente por técnicos cualificados y autorizados.

Evite el contacto de la unidad con agua o humedad.

No instale el producto en áreas peligrosas en las que se almacenan o utilizan materiales altamente combustibles o explosivos.

Información importante

- Antes de la instalación, le recomendamos que lea atentamente este manual de instrucciones y respete las instrucciones y advertencias contenidas en este manual. Para futuras referencias, le aconsejamos que mantenga este manual en un lugar seguro y accesible para los usuarios.
- Compruebe que la caja contiene todos los componentes del equipo. En caso de que faltara alguno, no dude en ponerse en contacto con su distribuidor local.
No instale ni utilice el servidor FlexWATCH® en caso de faltar algún componente.
Contacte con nosotros lo antes posible.
- Anote la información siguiente para obtener **soporte técnico o realizar seguimiento** en caso de pérdida o robo. El número de serie puede encontrarse en la parte inferior del

servidor FlexWATCH®.

Garantía

- 2 años (garantía limitada).
- Producto : Network Video Recorder
- Nombre de modelo: FW-5480
- Número de serie: _ _ _ _
- Fecha de compra : _____ (aa/mm/dd)

Fabricante

Seyeon Tech Co., Ltd.

TEL : +82-2-3017-0855

FAX : +82-2-3017-0843

<http://www.seyeon.co.kr>

<http://www.flexwatch.com>

Distribuidor en España y Portugal

INTPLUS S.L.

www.intplus.es

TEL: +34 95 4186632

FAX: +34 95 5601570

1. Descripción general del producto

1.1. FlexWATCH®

FlexWATCH® es un servidor web de vídeo que digitaliza el vídeo analógico de las cámaras CCD y transmite la señal digital a través de Internet.

Los usuarios pueden supervisar el vídeo en tiempo real sin necesidad de utilizar un software adicional a través de un explorador de Internet estándar como MS Internet Explorer o Netscape Communicator.

1.2. FW-5850

FlexWATCH® 5850 es un servidor y grabador de vídeo digital por red totalmente autónomo que proporciona todas las funcionalidades de un servidor web de vídeo y un grabador digital de vídeo avanzado.

FlexWATCH® 5850 tiene un funcionamiento triplex (transmisión de vídeo en tiempo real, grabación de vídeo en el disco duro interno y reproducción remota). Proporciona una grabación y acceso remoto simultáneos a las imágenes en tiempo real y reproducción de las imágenes grabadas procedentes de hasta 12 canales de vídeo de cámaras IP o servidores web de vídeo FlexWATCH diferentes y hasta 8 cámaras analógicas. Transmite hasta 240 imágenes por segundo a través de la red de Internet existente.



Figura 1 : FW-5850

1.3. Funciones principales del FW-5850

- Servidor web de vídeo autónomo
- Detección automática de Ethernet 10M/100M
- Configuración y control de los dispositivos a través de un explorador Web
- Velocidad máxima de transmisión de 120 imágenes por segundo en red TCP/IP (NTSC@CIF, MPEG4@GOP4)
- Ancho de banda efectivo y control de tasa de bits en modo MPEG4 (VBR/CBR)
- Compatible con usuarios de IP dinámica IP a través del Servidor AOIP SPAIN
- Compatible con múltiples dispositivos PTZ (Pan/Tilt/Zoom)
- Compatible con entrada de sensores, salida digital
- Compatible con modo transparente
- Codificación de 8 canales de voz / Decodificación de 1 canal de voz
- Función de encriptación para la autenticación de usuarios
- Compatible con módem (llamada saliente/entrante)
- Transmisión de imágenes a través de FTP, Email
- Disco duro para guardar las imágenes de 8 cámaras analógicas y cámaras FW. Se puede ampliar el almacenamiento
- Grabación por detección de movimiento
- Búsqueda fácil en los archivos archivados
- Conversión de archivos a formato AVI
- 1 canal de salida de vídeo para visualización en modo QUAD en un monitor analógico

1.4. Especificaciones técnicas de FW-5850

Nombre de modelo	FW-5850
Hardware	CPU integrada de 32bits Memoria Flash de 8Mbytes /SDRAM: 64Mbytes Sistema operativo Linux versión 2.4.xx Batería de respaldo para reloj de tiempo real
Compresión de vídeo	Motion JPEG, MPEG-4
Resolución	NTSC: 704x480,704x240,352x240,176x112 PAL: 704x576,704x288,352x288,176x144
Tasa de frames (por canal)	Motion JPEG: Hasta 3,75/3,12 ips en D1 / [3.75/3.12 x 8=30/25] MPEG-4: Hasta 3,75/3,12 ips a D1 / [3,75/3,12 x 8=30/25] en GOP 4
Fuente de vídeo	Fuente de vídeo dual seleccionable Seleccionable entre MJPEG y MPEG-4 Tasa de imágenes y ancho de banda
Configuración de imagen	Niveles de compresión: 1 (Motion JPEG) / 6 (MPEG-4) Color: color, blanco y negro
Grabación	Tasa de imágenes de grabación en 2 pasos (Rápida/Lenta por evento en modo de grabación continua) Sistema de archivos Linux Compatible con más de 1 disco duro IDE de 500GB Sistema antichoque
Transmisión o grabación (Modo Simplex)	Rendimiento (100Base-T / LAN) Transmisión: hasta 120 Ips(NTSC)/100 Ips (PAL) Grabación : hasta 120 Ips(NTSC)/100 Ips (PAL) en modo Simplex con 4 canales en CIF (8Kbyte/Imagen)
Transmisión o grabación (Modo Duplex)	Rendimiento (100Base-T / LAN) Transmisión: hasta 80 ips(NTSC)/70 ips (PAL) Grabación : hasta 90 ips(NTSC)/80 ips (PAL) en modo Duplex con 4 canales en CIF (8Kbyte/Imagen)
Transmisión, grabación y reproducción (Modo Triplex)	Rendimiento (100Base-T / LAN) Transmisión: hasta 60 ips(NTSC)/50 ips (PAL) Grabación : hasta 70 ips (NTSC)/60 ips (PAL) Reproducción: hasta 70 ips(NTSC)/60 ips (PAL) en modo Triplex con 4 canales en CIF (8Kbyte/Imagen)
Audio	Tasas de muestreo de G.723 4bit 8KHz Audio Canal de entrada y 1 canal de salida
Interfaz LAN	Detección automática 10/100BaseT Ethernet
Interfaz de E/S de alarma	4x2 entradas optoacopladas y 4x2 salidas de relé
Entrada de vídeo	4x2 canales de entrada de vídeo compuesto
Salida de Quad	1 canal de salida de vídeo para Quad (dividido en 9)
Interfaz serie	Dos puertos serie para consola. Módem (PSTN & GSM), dispositivo de salida/entrada serie, puerto com para control PTZ a través de RS-232, puerto AUX configurable como RS-232, RS-485 Tasa de baudios máxima: 115200 bit/s
Funciones de seguridad	Protección de usuarios basada en varios niveles para acceder a las cámaras, PTZ, E/S de alarma
Servicios avanzados	Memoria de hasta 19,2M para el búfer de pre/postalarma e-mail, FTP, búfer de alarma por evento y agenda notificación de IP, notificación de alarma por e-mail, llamada CGI por evento o agenda
Detección de movimiento integrada	Precisión: 12x12=144 bloques Sensibilidad de movimiento: -100 ~ 100 100 es la sensibilidad máxima
Control PTZ y UART	Protocolo integrado de control de dispositivos PTZ desde hasta 35 protocolos PTZ diferentes entre los que se

	incluyen Pelco "P", "D", Vicon, Samsung, Kalatel, Sony, Panasonic, Canon, Honeywell. Control de dispositivos X10 para controlarlos a través de la alimentación. Llamada saliente/entrante a través de módem PSTN o GSM
Otros	Estampación de hora sobre el vídeo Transmisión de datos por puerto de entrada serie con el vídeo Notificación de IP por e-mail
Gestión	Configurable por puerto serie, web o telnet Actualización remota del sistema a través de telnet, FTP o web.
Plataforma de desarrollo	Compatible con HTTP CGI API Kit de desarrollo de control ActiveX
Alimentación	Entrada SMPS : 100~240 V CA, 1,5 A Salida: 12 Voltios CC, 5 A, SMPS
Consumo	12 Voltios CC 3 A
Condiciones ambientales	Temperatura: 5° ~ 50°C Humedad: 20 ~ 80% RH (sin condensación)
Accesorios	Cable de consola para configurar el sistema Cable de prueba de red local CD ROM manual de usuario, asistente de instalación y notas técnicas Guía de Instalación Rápida
Varios	Software NDVR (Reproductor del servidor-grabador) para reproducir el vídeo de múltiples servidores-grabadores. Compatible con herramientas de conversión a formato AVI en FW-Voyager Compatible con programa de gestión de cámaras FWManager Compatible con IP dinámicas a través AOIP SPAIN.
Usuarios	32 usuarios simultáneos
Instalación, gestión y mantenimiento	Cd de instalación y configuración basada en Internet Copia de seguridad de configuración y restauración Actualización de firmware a través de HTTP o FTP. Actualizaciones de firmware disponibles en http://www.flexwatch.es/kernel.htm
Acceso al vídeo a través de explorador Web	Acceso al vídeo desde explorador Web
Requisitos mínimos para el visionado a través de páginas Web	CPU Pentium III de 500 MHz o superior Windows XP, 2000, NT4.0*, Internet Explorer 6.x o posterior
Integración de sistemas compatibles	API potente para la integración de software disponible en http://www.flexwatch.com , inclusive Simple Viewer API, FlexWATCH Control SDK, datos de activación de eventos en la fuente de vídeo, control y acceso integrado de periféricos por puerto serie a través de HTTP/TCP Los usuarios pueden instalarse el programa de notificación de eventos o envío de imágenes. Sistema operativo integrado: Linux 2.4
Protocolos compatibles	HTTP, TCP/IP, FTP, Telnet, RARP, PPP, PAP, CHAP, DHCP, SMTP client(e-mail), NTP, Java
Aplicaciones (no incluidas)	FlexWATCH Manager 16/32/128/256
Accesorios incluidos	Fuente de alimentación de 12 V CC, soportes de montaje, kit de conectores, Guía de instalación, CD con herramienta de instalación, software y manual de usuario.
Accesorios no incluidos	Kit de montaje en rack de 19"
Normativas	FCC : Clase A CE : Clase A MIC : (Preliminar) RoHS: Apto
Dimensiones (HxAxD) y peso	Tamaño: 280 mm(L) x 215mm(A)X 45mm(H) Peso: 1.71 Kg sin alimentador.

Tabla 1 : Especificaciones de FW-5850

1.5. Lista de empaquetado

El paquete del FW-5480 incluye los siguientes elementos.


FW-5850	1	
Alimentador (Cable de alimentación y adaptador SMPS 12 Voltios CC 5A)	1	
Cable serie RS-232 (Cable cruzado, DB9 hembra)	1	
Cable de red LAN	1	
CD (Manual de usuario, asistente de instalación y fotos)	1	
Disco duro	1	

Tabla 2 : Lista de empaquetado de FW-5850



Asegúrese de que el paquete incluye todos los componentes detallados anteriormente. Si faltase alguno de ellos, no dude en ponerse en contacto con nosotros.

2. Descripción del hardware

2.1. Vista del panel frontal de FW-5850

Figura 2 : Panel frontal de FW-5850

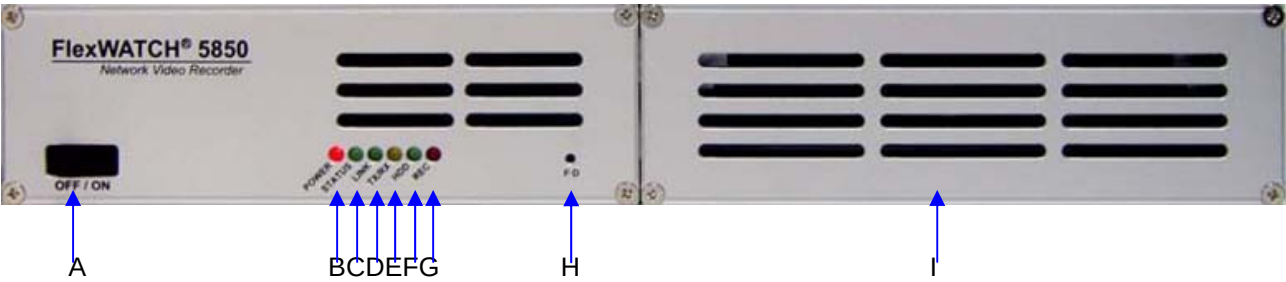


Figura 3 : Indicadores luminosos del panel frontal del FW-5850

	Nombre	Descripción
A	Encendido/Apagado	Para encender/apagar la unidad.
		 Debe utilizar el interruptor para apagar la unidad y nunca desconectar directamente el cable de alimentación de lo contrario podría dañarse el disco duro de forma irremediable.
B	LED DE ALIMENTACIÓN (POWER)	Parpadea el indicador rojo cuando se alimenta la unidad.
C	LED DE ESTADO (STATUS)	El indicador rojo parpadea después de reiniciar la unidad.
D	LED DE CONEXIÓN LAN (LINK)	El indicador verde parpadea cuando la red local (LAN) está físicamente conectada.
E	LED LAN(Tx/Rx)	El indicador verde parpadea cuando hay transmisión de datos en la red LAN conectada.
F	LED DE DISCO DURO (HDD)	El indicador verde parpadea cuando el disco duro se está formateando o cuando se está grabando en el disco duro..
G	LED DE GRABACIÓN (RECORDING)	El indicador rojo parpadea cuando el disco duro está grabando.
H	Interruptor de restauración de valores de fábrica (F-D)	Este botón se puede utilizar para restaurar los valores de configuración de fábrica en el sistema. Se suele hacer cuando un usuario ha perdido su nombre /contraseña de administrador o cuando el sistema está dando algún fallo. - Después de reiniciar el sistema, deberá esperar hasta oír dos bips. - Mantenga presionado el botón FD durante 5~10 segundos hasta oír

		tres bips durante este proceso. El sistema se reiniciará automáticamente cuando se haya terminado el proceso.
I	Rejillas de ventilación del disco duro	Rejillas de ventilación para el disco duro.  <i>Asegúrese de que las rejillas estén siempre limpias y libres de obstáculos.</i>

Tabla 3 : Descripción del panel frontal de FW-5850


* Descripción de los bips

	Nombre	Descripción
1	Encendido	Bip corto al encender la unidad.
2	Sistema preparado	Dos bips cuando la unidad se ha reiniciado correctamente.
3	Apagado	Dos bips (0,5 seg.) al apagar la unidad.
4	Error en disco duro	Bips continuos durante 5 segundos cuando el disco duro tienen un error. Para desactivar la notificación de este error, deberá configurarlo en el menú de administración.
5	Botón FD	Un bip (0,5 seg.) después de 3 segundos y después tres bips cortos después de otros 3 segundos.

Tabla 4 : Descripción de los bips del FW-5850

2.2. Panel trasero de FW-5850

Imagen 4 : Vista del panel trasero de FW-5850

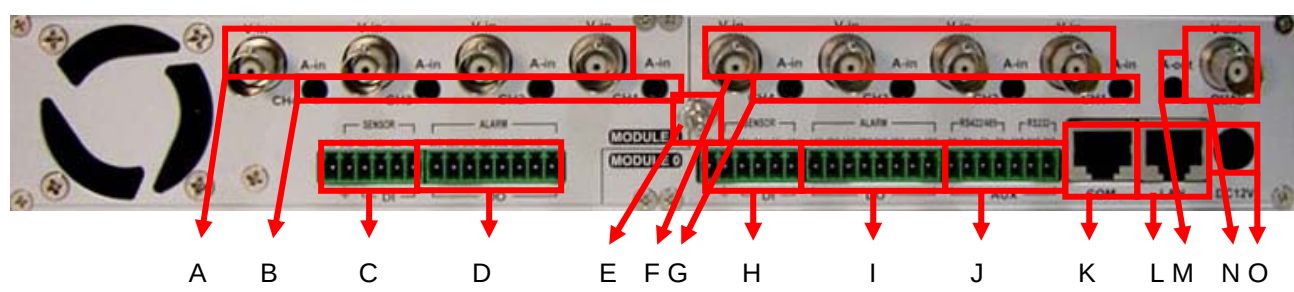

 FW-5850 incluye el Módulo 0 y 1. Cada módulo tiene 4 entradas de vídeo, 1 entrada de audio, DI y DO.

	Nombre	Descripción
A	Mod1, Video In 1	Puerto de cable BNC para entrada de vídeo de cámara 1 del módulo 1.
	Mod1, Video In 2	Puerto de cable BNC para entrada de vídeo de cámara 2 del módulo 1.
	Mod1, Video In 3	Puerto de cable BNC para entrada de vídeo de cámara 3 del módulo 1.
	Mod1, Video In 4	Puerto de cable BNC para entrada de vídeo de cámara 4 del módulo 1.
B	Mod1, Audio In 1	Puerto de cable estéreo para entrada de audio de cámara 1 del módulo 1. (Clavija de audio de 3,5 mm)
	Mod1, Audio In 2	Puerto de cable estéreo para entrada de audio de cámara 2 del módulo 1. (Clavija de audio de 3,5 mm)
	Mod1, Audio In 3	Puerto de cable estéreo para entrada de audio de cámara 3 del módulo 1. (Clavija de audio de 3,5 mm)
	Mod1, Audio In 4	Puerto de cable estéreo para entrada de audio de cámara 4 del módulo 1. (Clavija de audio de 3,5 mm)
C	Mod1/DI	Puertos de entrada de señal para el sensor y contacto para módulo 1.
D	Mod1/DO	Puertos de entrada de señal para la alarma y luz para módulo 1.
E	Ground	Conector de tierra.
F	Mod0, Video In 1	Puerto de cable BNC para entrada de vídeo de cámara 1 del módulo 0.
	Mod0, Video In 2	Puerto de cable BNC para entrada de vídeo de cámara 2 del módulo 0.
	Mod0, Video In 3	Puerto de cable BNC para entrada de vídeo de cámara 3 del módulo 0.
	Mod0, Video In 4	Puerto de cable BNC para entrada de vídeo de cámara 4 del módulo 0.
G	Mod0, Audio In 1	Puerto de cable estéreo para entrada de audio de cámara 1 del módulo 0. (Clavija de audio de 3,5 mm)
	Mod0, Audio In 2	Puerto de cable estéreo para entrada de audio de cámara 2 del módulo 0. (Clavija de audio de 3,5 mm)
	Mod0, Audio In 3	Puerto de cable estéreo para entrada de audio de cámara 3 del módulo 0. (Clavija de audio de 3,5 mm)

	Mod0, Audio In 4	Puerto de cable estéreo para entrada de audio de cámara 4 del módulo 0. (Clavija de audio de 3,5 mm)
H	Mod0/DI	Puertos de entrada de señal para el sensor y contacto para módulo 0.
I	Mod0/DO	Puertos de entrada de señal para la alarma y luz para módulo 0.
J	AUX	Puertos RS-422/485 para PTZ, UART-Out/In. El PTZ debe estar conectado sólo al puerto Aux.
K	COM	Puertos RS-232 para los dispositivos de entrada serie, Módem o Consola (Hyperterminal)
L	LAN	Puerto de red LAN para autodetección 10/100M Base T.
M	Salida de audio	1 puerto de salida de audio.
N	Salida de vídeo Mux	Puerto de salida de vídeo para visión en Quad
O	Alimentación	Puertos de entrada de alimentación para 12V DC 5A. (Use el alimentador original incluido en el paquete)

Tabla 5 : Descripción del panel trasero de FW-5850

2.2.1. Descripción del puerto COM

Información de la disposición de pines del puerto COM.

Los puertos RS-232 sirven para conectar dispositivos de entrada serie, el módem o la consola (conexión por Hyperterminal).

Para una conexión RS-232, se utiliza RXD, TXD y GND. Para la conexión con el PC, RXD se utiliza TXD. Cada RXD se conecta con cada TXD a través del cable cruzado.



Imagen 5 : Pines del puerto COM

3. Instalación del hardware y configuración básica del FW-5850

3.1. Antes de la instalación,

- Lea atentamente el Manual de usuario
- Compruebe si la red eléctrica del lugar donde va a conectar la unidad es estable
- Compruebe la red del usuario (dirección IP, máscara de red y puerta de enlace predeterminada)

3.2. Condición de valores de fábrica

La siguiente tabla muestra las configuraciones de fábrica de la unidad. Consulte esta tabla cuando necesite cambiar los valores en el menú de administración

	Valores de fábrica
Admin ID (Id de administrador)	root
Admin password (Contraseña de administrador)	root
IP address (Dirección IP)	10.20.30.40
Network mask (Máscara de red)	255.255.255.0
Gateway (Puerta de enlace)	10.20.30.1

Tabla 6 : Configuración de fábrica



*El ID y contraseña de administración de fábrica se escriben siempre en **minúsculas**. Sin embargo, puede cambiarlos a mayúsculas como prefiera.*

3.3. Instalación del hardware de FW-5850

Los pasos para instalar físicamente el modelo FW-5850 son los siguientes.

1. Instale las cámaras CCTV en la posición necesaria.
2. Conecte los cables BNC entre las cámaras CCTV y las entradas/salidas de vídeo del FW-5850.
3. Conecte el cable de red LAN entre el FW-5850 y la roseta de conexión a Internet.
4. Conecte el cable de alimentación de FW-5850.

A continuación, deberá seguir los siguientes pasos por este orden:

- Configuración de la red utilizando la herramienta FW-installer.
- Configuración de las cámaras utilizando FW-installer o el menú de administración.
- Configuración de los servicios utilizando FW-installer o el menú de administración.




Para la configuración de la dirección IP, consulte "Capítulo 2. Configuración de red" en el Manual de usuario - Parte 2.


3.3.1. Montaje del disco duro del FW-5850

Para almacenar el vídeo en su FW-5850, debe instalar el disco duro. Una vez finalizada la instalación, debería comenzar la configuración del menú Admin de la página web. Consulte la parte II de este manual para realizar las configuraciones. Lo primero que tiene que configurar son los ajustes de red.

Se puede utilizar un disco duro de 3,5" del tipo S-ATA y se conecta al panel frontal y a la bahía del disco duro.

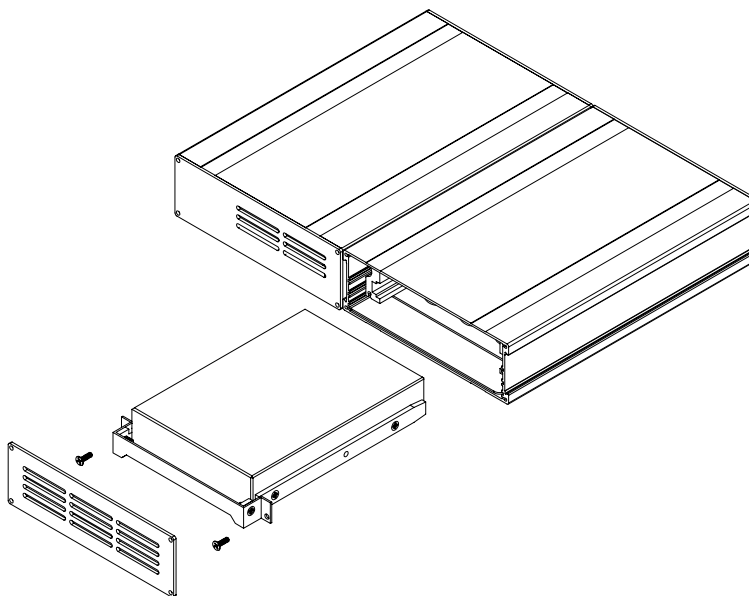

- A. Quite los 4 tornillos del panel frontal.

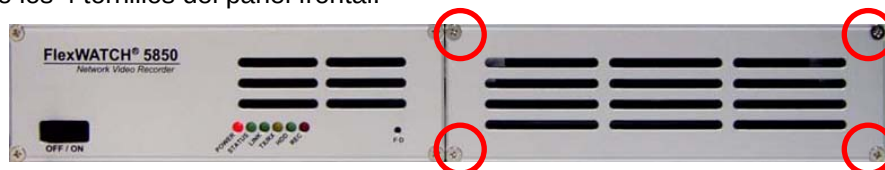

- B. A continuación, quite los tornillos que fijan el disco duro y extraiga la bahía de disco duro.



- C. Coloque el disco duro en la bahía.



- D. Insértelo hasta el final de la bahía del FW-5850.
 E. Atornille los tornillos para fijar el disco duro. Inserte la bahía.
 F. Acople el panel frontal y coloque los tornillos de fijación.

FlexWATCH User Manual

Part 2

(Network Configuration and FlexWATCH Setting)

Version 3.0

August 13, 2007

Seyeon Technology Co., Ltd

www.seyeon.co.kr

www.flexwatch.com

Contents

1.	Network Diagram.....	6
1.1.	Private Network	6
1.2.	Leased Line Network	6
1.3.	Cable/xDSL Modem Network with Static IP	7
1.4.	Cable/xDSL Modem Network with Dynamic IP	7
1.5.	PSTN Modem with Dial-out	7
1.6.	PSTN Modem with Dial-in.....	8
2.	Network Configuration.....	8
2.1.	Through FlexWATCH Installer.....	9
2.1.1.	What is FlexWATCH Installer?	9
2.1.2.	Installation of FlexWATCH Installer	9
2.2.	How to Use FlexWATCH Installer	10
2.2.1.	How to Run FlexWATCH Installer.....	10
2.2.2.	Program Menu Description	11
2.2.3.	Right Mouse Button Menu	12
2.3.	IP Assignment.....	12
2.3.1.	Diagram between FlexWATCH and PC.....	13
2.3.2.	Static IP assignment	13
2.3.3.	DHCP IP Assignment.....	17
2.3.4.	IP Assignment by PPPoE	19
2.4.	Network configuration through Hyper Terminal mode.....	21
2.4.1.	Hyper Terminal Installation Wizard Program	21
2.4.2.	System Login and Network Configuration by Hyper Terminal.....	23

2.4.3.	Connection to Home Page	25
3.	Introduction to FlexWATCH.....	26
3.1.	“Home” screen	26
3.2.	“Live View” menu	26
3.3.	“Player” Menu (FW-5400 Series only)	30
3.4.	“Admin” Menu	30
3.5.	“Contact Us” Menu.....	¡Error! Marcador no definido.

Figures

Figure 1 Private Network Diagram.....	6
Figure 2 Leased Static IP Diagram.....	6
Figure 3 ADSL/Cable Modem (Static IP) Diagram	7
Figure 4 ADSL/Cable Modem (dynamic IP) Diagram.....	7
Figure 5 Dial Out Connection (Modem) Diagram	8
Figure 6 Dial in Connection (Modem) Diagram	8
Figure 7 FlexWATCH Installer First Installation Screen	9
Figure 8 FlexWATCH Installer Folder Selection.....	10
Figure 9 FlexWATCH Installer Installation Completion.....	10
Figure 10 FlexWATCH-Installer How to Run	11
Figure 11 FlexWATCH Installer's First Screen	11
Figure 12 FlexWATCH Installer Menu	12
Figure 13 Connection through a HUB.....	13
Figure 14 Connection FlexWATCH to PC	13
Figure 15 In case of selecting 1 server for Static IP Assignment	14
Figure 16 In case of selecting 2 or more servers for Static IP Assignment.....	15
Figure 17 In case of selecting 1 server for Automatic Static IP Assignment	16
Figure 18 In case of selecting 1 server for DHCP IP Assignment.....	18
Figure 19 In case of selecting 2 or more servers for DHCP IP Assignment.....	19
Figure 20 In case of selecting 1 server for PPPoE IP Assignment.....	20
Figure 21 Hyper Terminal Program Location.....	21
Figure 22 COM Port Connection Description	22

Figure 23 COM Port Connect To Information	22
Figure 24 COM Port Settings	23
Figure 25 FlexWATCH Main page	26
Figure 26 Windows 2000 Security Warning screen	27
Figure 27 Windows XP Security Warning screen	27
Figure 28 FlexWATCH LiveView Screen (FW5450)	27
Figure 29 Player	30

1. Network Diagram

FlexWATCH® products work under IP network such as leased line, cable model, xDSL modem, PSTN modem. FlexWATCH can also work under public network or private network. The network environment will vary with users' goals and needs; however, basic applications with FlexWATCH® products can be followings.

1.1. Private Network

- Private network without Internet connection.

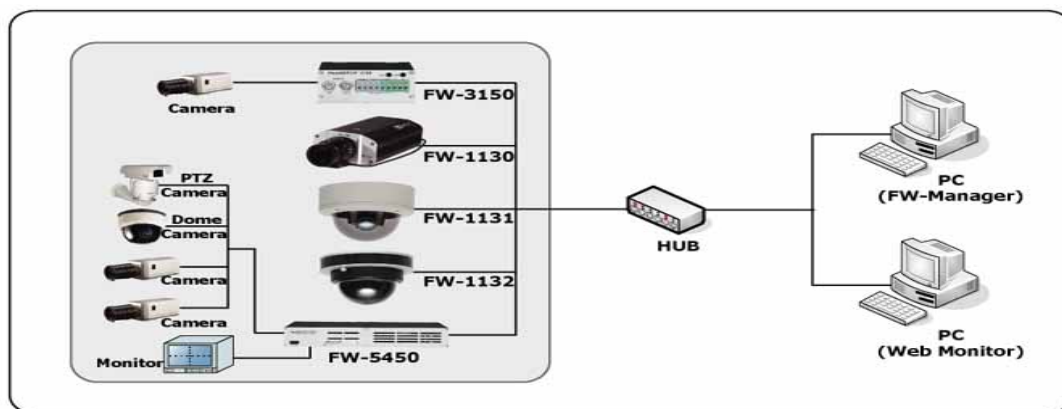


Figure 1 Private Network Diagram

1.2. Leased Line Network

- In case of leased line, most users use Public static IP, they assign public static IP to FlexWATCH server and they can view the images from FlexWATCH locally or remotely via Internet.

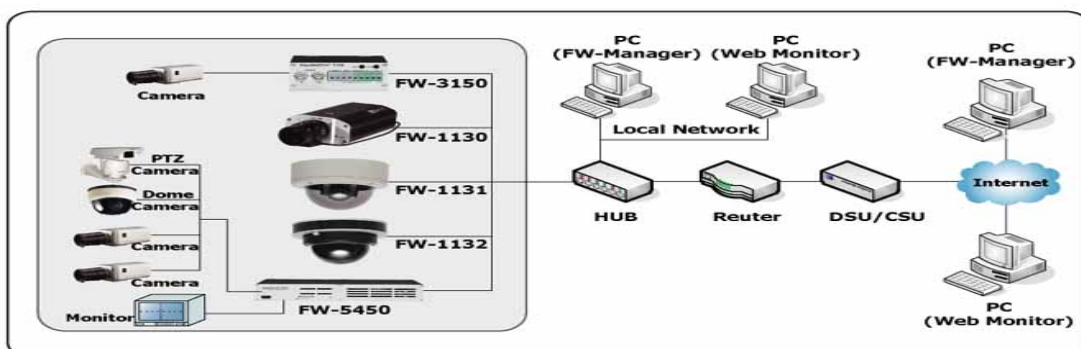


Figure 2 Leased Static IP Diagram

1.3. Cable/xDSL Modem Network with Static IP

- You can use Static IP through cable/xDSL modem to view the images from FlexWATCH.

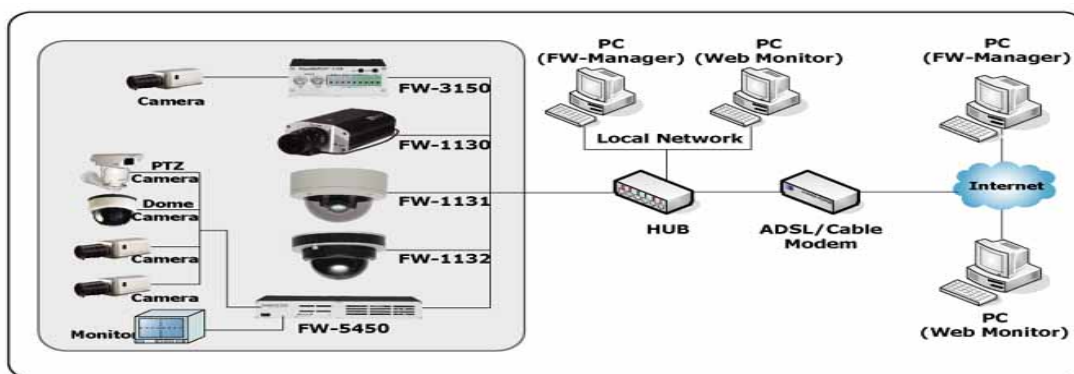


Figure 3 ADSL/Cable Modem (Static IP) Diagram

1.4. Cable/xDSL Modem Network with Dynamic IP

- You can use Dynamic IP through cable/xDSL modem to view the images from FlexWATCH. In this case, you need to register for AOIP service provided by Seyeon Tech.

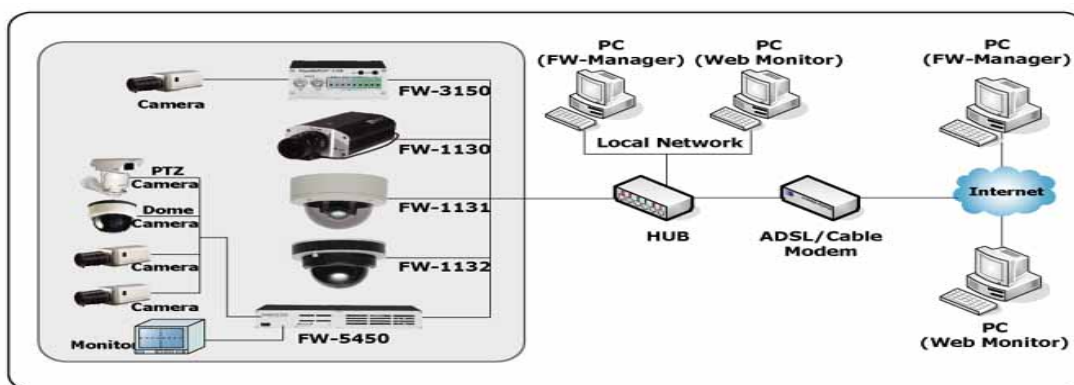


Figure 4 ADSL/Cable Modem (dynamic IP) Diagram

1.5. PSTN Modem with Dial-out

You can use PSTN modem to have FlexWATCH server connected to the Internet. FlexWATCH makes a call to ISP (Dial-out) and gets connected to the Internet. In this case, the assigned IP by ISP is Public Dynamic IP. Thus, you can view the images from FlexWATCH servers by AOIP service provided by Seyeon Tech.

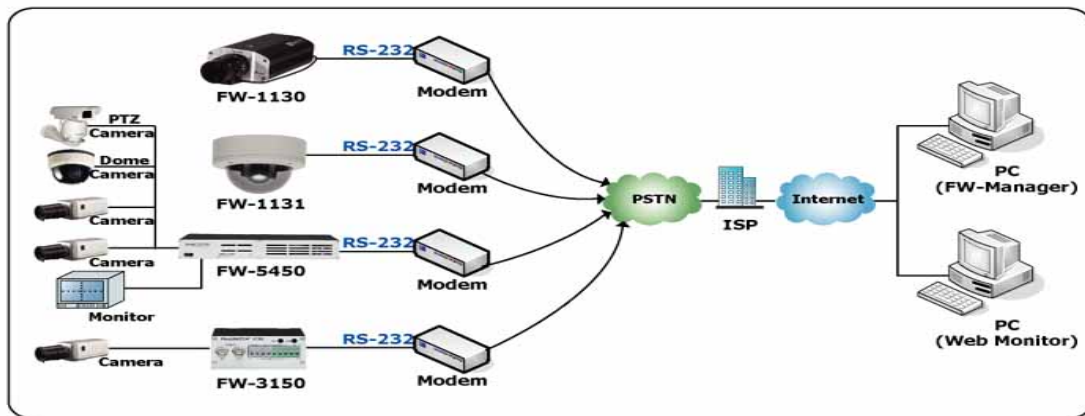


Figure 5 Dial Out Connection (Modem) Diagram

1.6. PSTN Modem with Dial-in

You have FlexWATCH server connected to PSTN modem and remote PC can connect to this PSTN modem. Then, FlexWATCH accepts the call from remote PC (Dial-in).

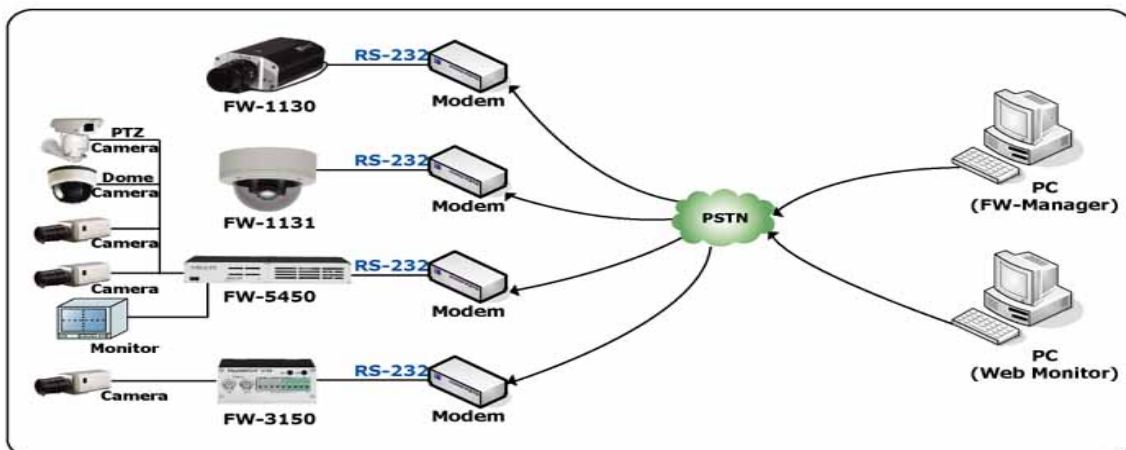


Figure 6 Dial in Connection (Modem) Diagram

2. Network Configuration

The very first thing you need to do for using FlexWATCH is proper IP assignment for your FlexWATCH servers. After this, you can go on to the next steps. There are two methods can be used. The first method is to use FlexWATCH Installer included in CD and the other method is to use terminal emulation program (ex. Microsoft Windows's Hyper Terminal).

2.1. Through FlexWATCH Installer

2.1.1. What is FlexWATCH Installer?

FlexWATCH Installer is a program which enables you to simply configure the FlexWATCH Products such as IP setting, server and camera setting, firmware update, and so on. Please refer to FlexWATCH Installer manual included in CD-ROM provided with the product you purchased and you may want to refer to latest available documents on our website (<http://www.flewatch.com>). FlexWATCH Installer manual has been written on the assumption that you are familiar with basic network knowledge such as IP address, LAN, HUB, Router, and so on. For the basic network knowledge, please refer to the related books, or you may ask your network service provider or network administrator.

FlexWATCH Installer can be used for FlexWATCH Linux series (FlexWATCH 1110 / 1120 / 1130 / 1161 / 2140 / 2150 / 3110 / 3150 / 3440 / 3450 / 5000 / 5440 / 5450) products; however, there may be some differences based on models.

2.1.2. Installation of FlexWATCH Installer

1. Please double click on the FlexWATCH Installer  Icon.
2. Click Next.
3. Please Check the version of FlexWATCH Installer and if you want to install it, please click Next.



Figure 7 FlexWATCH Installer First Installation Screen

4. Select the installation location, please click Install.

The default location is C:\ProgramFiles\FlexWATCH\FlexWATCH Installer, and if you want to change the location, you may click Browse and select the desired folder.

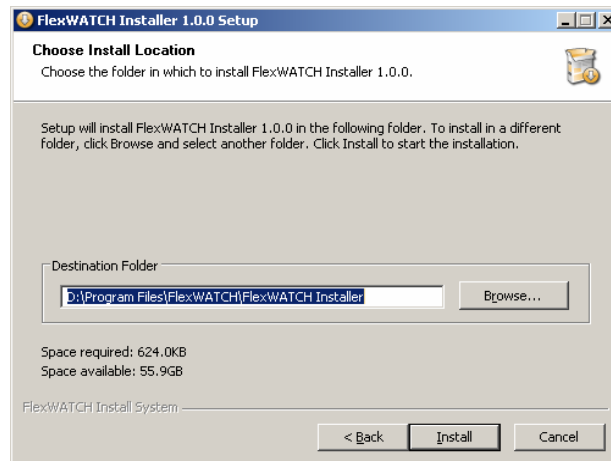


Figure 8 FlexWATCH Installer Folder Selection

5. Click Finish (Installation Completion)

All the required files will be installed and the installation will be done by clicking Finish.

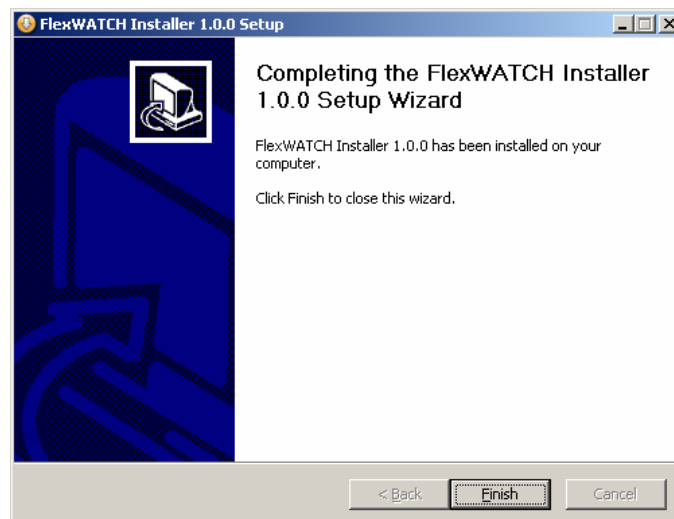


Figure 9 FlexWATCH Installer Installation Completion

2.2. How to Use FlexWATCH Installer

2.2.1. How to Run FlexWATCH Installer

To run FlexWATCH Installer, please double-click FlexWATCH Installer icon in desktop screen or click the icon located in Programs shown as below.



Figure 10 FlexWATCH-Installer How to Run

2.2.2. Program Menu Description

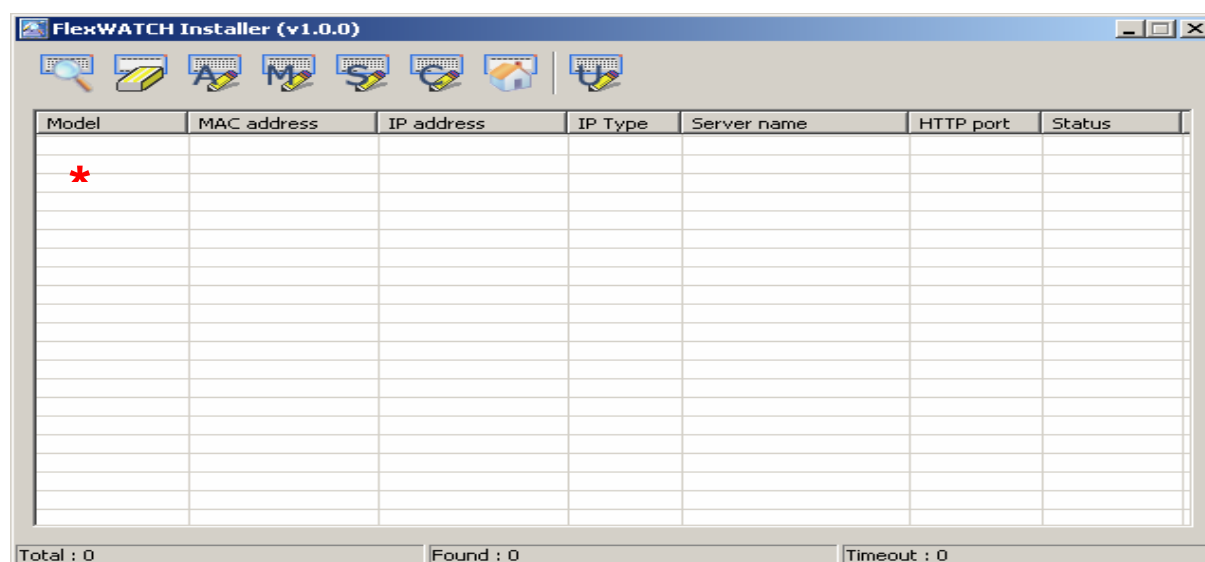


Figure 11 FlexWATCH Installer's First Screen

Menu	Description
Search FlexWATCH	Search and show the list of FlexWATCH Linux series installed in the same LAN of your PC.
Clear FlexWATCH list	Clear all the list of FlexWATCH products.
Automatic IP setup	FlexWATCH Installer will check the network information and you can set up IP automatically. TIP) IP address will be also assigned automatically by adding 1.
Manual IP setup	You can set up IP manually.
Server Setup	Configure the FlexWATCH server.
Camera Setup	Configure the FlexWATCH camera
Connect FlexWATCH	Connect to Homepage of selected FlexWATCH Notice) Class of IP address should be the same between PC and FlexWATCH server.
Update firmware	Update the firmware of FlexWATCH.
*Searched Result List	Shows searched list of FlexWATCH
Total	Shows the total number of searched FlexWATCH servers.

Found	Shows the total number of searched FlexWATCH servers with normal respond.
Timeout	Shows the total number of FlexWATCH servers with no response on search again.

2.2.3. Right Mouse Button Menu

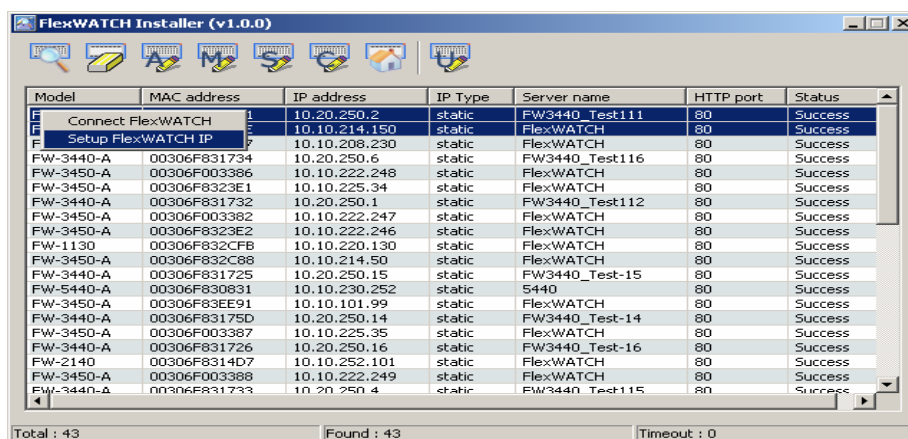


Figure 12 FlexWATCH Installer Menu

Select one of the searched products and click Right Mouse Button for menu.

Menu	Description
Connect FlexWATCH	Connect to the Homepage of selected FlexWATCH server. Notice) Class of IP address should be the same between PC and FlexWATCH.
Setup FlexWATCH IP	Configure the network setting of the selected FlexWATCH server.

TIP) More information on IP setting will be further discussed in 2.3 IP assignment.

2.3. IP Assignment

There are three different ways of IP setup for the network connection of your FlexWATCH server.

1. Static IP Assignment

General IP assignment method, to setup public or private static IP address.

2. IP Assignment by DHCP

IP assignment method, using DHCP to connect FlexWATCH by cable modem or VDSL.

3. IP Assignment by PPPoE

IP assignment method using PPPoE to connect FlexWATCH by xDSL.

2.3.1. Diagram between FlexWATCH and PC

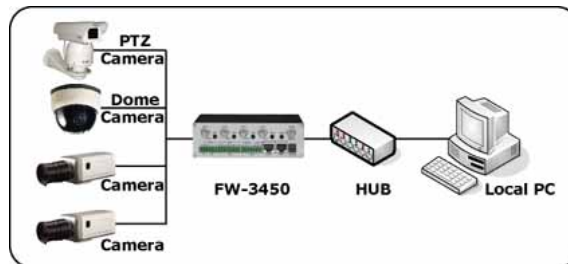


Figure 13 Connection through a HUB

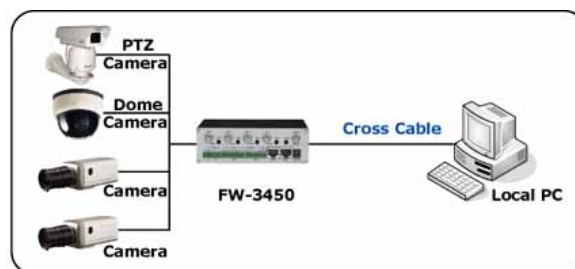


Figure 14 Connection FlexWATCH to PC

Please use Direct Cable when you use a Hub while you use Cross-Over Cable for direct connection between FlexWATCH and PC.

2.3.2. Static IP assignment

2.3.2.1. Manual IP Assignment

There are two types of static IP including public IP or private IP in LAN with an IP sharer or a router.

1. Please run FlexWATCH Installer, and search to see available FlexWATCH servers on the list. Then, please select the server from the list and click on IP Setup button or IP Setup from the right mouse button menu.
 - In case of selecting 1 server from the list

Network Setup

MAC Address: 00306F003387

IP Type: ☒ Static ☐ DHCP ☐ PPPoE

☒ Server Name: FlexWATCH

☒ Network

IP Address: 10 . 10 . 225 . 35

Netmask: 255 . 255 . 0 . 0

Default Gateway: 10 . 10 . 1 . 1

DNS1: 168 . 126 . 63 . 1

DNS2: 168 . 126 . 63 . 2

☒ HTTP Port: 80

PPPoE User Name:

PPPoE Password:

PPPoE Confirm:

Authentication Key

Root password:

Save Configuration Option

☒ Save Configuration ☐ Not Saving

Set Cancel

Figure 15 In case of selecting 1 server for Static IP Assignment

Menu	Description
MAC Address	MAC address of selected FlexWATCH
IP Type	Please select Static for Static IP Assignment
Server Name	Assign a name to selected FlexWATCH
Network	Setting for the general Network Information
IP Address	Enter IP address for FlexWATCH server
Netmask	Netmask is for dividing IP classes. Please ask the network administrator before setting.
Default Gateway	Default gateway will be automatically searched by FlexWATCH Installer.
DNS1, DNS2	Please enter proper DNS (Domain Name Service) address in DNS1 and DNS2. If you don't know this, please ask the network administrator.
HTTP Port	Default web port for FlexWATCH. Default value is 80.
Root password	Password for FlexWATCH server to authenticate a valid user. The default password for FlexWATCH is root.
Save Configuration Option	

Save Configuration	All the changes will be stored in Flash Memory.
Not Saving	All the changes will not be stored in Flash Memory. Notice) If you choose “Not Saving”, all the adjusted settings will not be saved, Therefore, after rebooting, new change won't be applied.

- In case of selecting 2 or more servers from the list

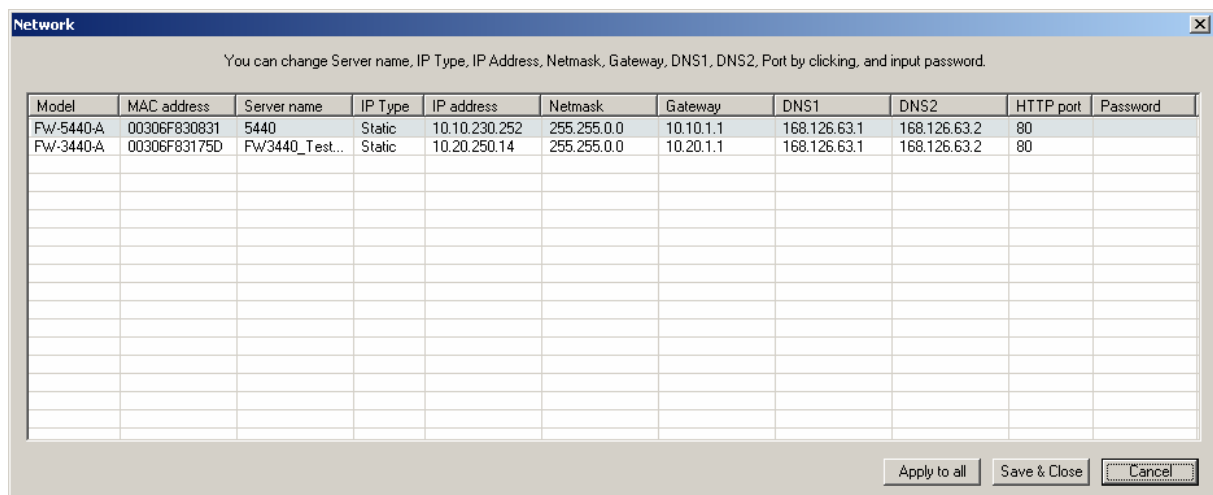


Figure 16 In case of selecting 2 or more servers for Static IP Assignment

Menu	Description
Model	Model name of selected FlexWATCH.
MAC address	MAC address of selected FlexWATCH
Server name	Assign a name to selected FlexWATCH
IP Type	Please select Static for Static IP Assignment
IP address	Enter proper IP address for FlexWATCH server
Netmask	A Netmask is used to divide an IP address into subnets and specify the network available hosts. Contact your network administrator for more details.
Gateway	Default gateway will be automatically searched by FlexWATCH Installer.
DNS1, DNS2	Please enter proper DNS (Domain Name Service) address in DNS1 and DNS2. If you don't know this, please ask the network administrator.
HTTP port	Default web port for FlexWATCH. Default value is 80.
Password	Password for FlexWATCH server to authenticate a valid user. The default password for FlexWATCH is root.

Apply to all	Please use this button when you enter the same values for multiple servers. Please click one of the listed servers and make changes as you wish. The values of rest of FW servers will be changed accordingly. However, server names will be in the format of "your chosen server name"+ascending number. And IP address will be also assigned automatically by adding 1.
Save & Close	Will save all the changes to FlexWATCH servers and close network setting window. (All the adjusted settings will be stored in Flash Memory)
Cancel	Cancel the all the adjusted setting and close the network setting window.

2. After IP configuration, click "Connect" icon to access FlexWATCH. See live view of FlexWATCH or specify system configuration on admin menu. Please refer to chapter 3.2 Live View and "User Manual for FlexWATCH" for more details of system configuration and live view.

2.3.2.2. Automatic IP Assignment

FlexWATCH Installer can automatically find available IP address from the network in which FlexWATCH Installer is being used. You can use the IP address searched by FlexWATCH Installer or you may change the IP by yourself.

Notice) Any of the auto-assigned IP may cause a network collision and problem if it's already assigned to another device in the same network. Auto-assigned IP is assigned based on C-Class or its Subnet.

1. Please run FlexWATCH Installer, and search to see available FlexWATCH servers on the list. Then, please select the server from the list and click on Automatic IP Setup button.
2. In case of selecting 1 server from the list

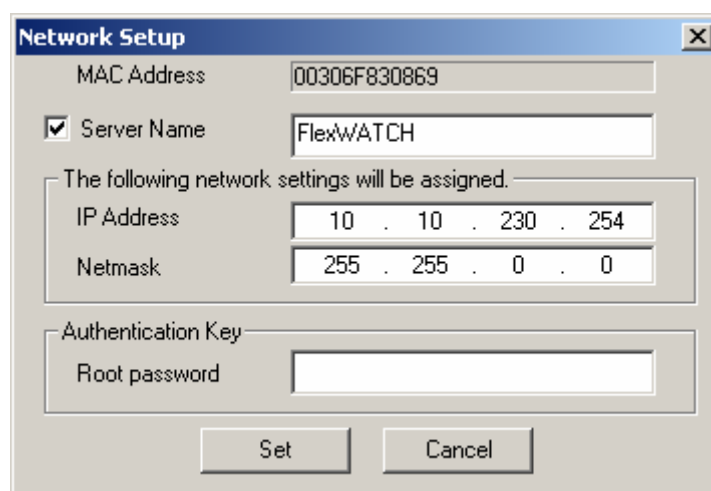


Figure 17 In case of selecting 1 server for Automatic Static IP Assignment

Menu	Description
Server Name	Assign a name to selected FlexWATCH
Network	Setting for the general Network Information
IP Address	Automatic assigned IP will be shown. You may use or change it. Notice) In case of IP conflict, you shall assign proper IP to FlexWATCH server.
Netmask	Automatic assigned Netmask will be shown. You may use or change it. Netmask is for dividing IP classes. Please ask the network administrator for more info.
Root password	Password for FlexWATCH server to authenticate a valid user. The default password for FlexWATCH is root.

- In case of selecting 2 or more servers from the list

TIP) Please refer to 2.3.2.1 Manual IP Assignment

2.3.3. DHCP IP Assignment

When your local network is managed by DHCP server, cable modem, or VDSL, DHCP IP Assignment is used. xDSL with auto-dial up also needs DHCP IP Assignment.

1. Connect your PC and FlexWATCH server in the network. Setup a static IP address according to the steps in chapter '2.3.2. Static IP Assignment'
2. After IP setup, check out if you can access to the homepage of FlexWATCH server by clicking "Connect" icon.

TIP) Please enable AOIP option in Admin menu if you want to have FlexWATCH server to be accessible by remote users.

3. Run FlexWATCH Installer again, and select FlexWATCH on the search list, Click IP Setup button and specify DHCP option.
- In case of selecting 1 server

Figure 18 In case of selecting 1 server for DHCP IP Assignment

Menu	Description
IP Type	Select 'DHCP'
Server Name	Assign a name to selected FlexWATCH
HTTP Port	Default web port for FlexWATCH. Default value is 80.
Root password	Password for FlexWATCH server to authenticate a valid user. The default password for FlexWATCH is root.
Save Configuration Option	
Save Configuration	All the changes will be stored in Flash Memory.
Not Saving	All the changes will not be stored in Flash Memory. Notice) If you choose "Not Saving", all the adjusted settings will not be saved, Therefore, after rebooting, new change won't be applied.

- In case of selecting 2 or more servers for DHCP IP Assignment

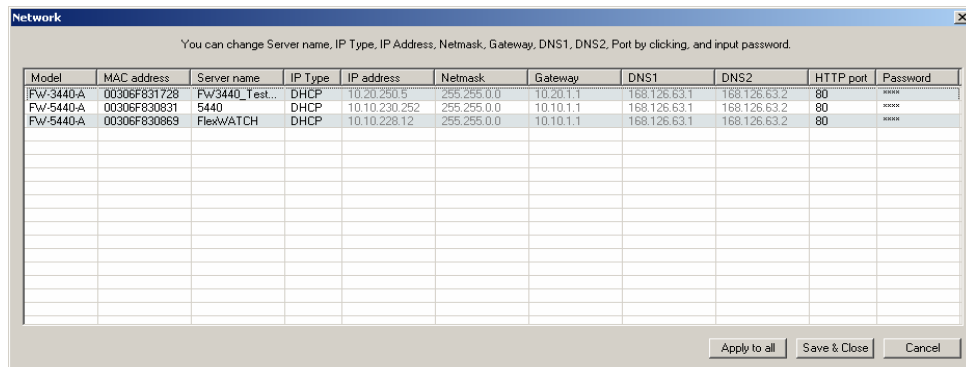


Figure 19 In case of selecting 2 or more servers for DHCP IP Assignment

TIP) In case of multiple DHCP settings, you can't set IP address, Netmask, Gateway, DNS1, 2. Please refer to Static Manual IP Assignment.

4. Check out if your DHCP setup is correctly applied; please connect FlexWATCH to VDSL or Cable Modem. If your server is under Local network, please connect FlexWATCH to a HUB in Local Network.

2.3.4. IP Assignment by PPPoE

1. Connect your PC and FlexWATCH server in the network. Setup a static IP address according to the steps in chapter '2.3.2. Static IP Assignment'.
2. After IP setup, check out if you can access to the homepage of FlexWATCH server by clicking "Connect" icon.

TIP) Please enable AOIP option in Admin menu if you want to have FlexWATCH server to be accessible by remote users.

3. Run FlexWATCH Installer again, and select FlexWATCH on the search list, Click IP Setup button and specify PPPoE option.

The image shows a 'Network Setup' dialog box with the following fields and options:

- MAC Address: 00306F83041E
- IP Type: ☐ Static ☐ DHCP ☒ PPPoE
- ☒ Server Name: FlexWATCH
- ☒ Network:
 - IP Address: 10 . 10 . 214 . 150
 - Netmask: 255 . 255 . 0 . 0
 - Default Gateway: 10 . 10 . 1 . 1
 - DNS1: 168 . 126 . 63 . 1
 - DNS2: 168 . 126 . 63 . 2
- ☒ HTTP Port: 80
- PPPoE User Name: [Empty field]
- PPPoE Password: [Empty field]
- PPPoE Confirm: [Empty field]
- Authentication Key:
 - Root password: [Field with 'xxxx' placeholder]
- Save Configuration Option:
 - ☒ Save Configuration
 - ☐ Not Saving
- Buttons: Set, Cancel

Figure 20 In case of selecting 1 server for PPPoE IP Assignment

Menu	Description
IP Type	Select 'PPPoE'
Server Name	Assign a name to selected FlexWATCH
HTTP Port	Default web port for FlexWATCH. Default value is 80.
PPPoE Setup	<i>Notice) You can check out the correct ID/Password from your ISP.</i>
PPPoE User Name	Enter PPPoE ID
PPPoE Password	Enter PPPoE Password
PPPoE Confirm	Enter PPPoE Confirmed Password
Root Password	Password for FlexWATCH server to authenticate a valid user. The default password for FlexWATCH is root.
Save Configuration Option	
Save Configuration	All the changes will be stored in Flash Memory.

Not Saving

All the changes will not be stored in Flash Memory.
Notice) If you choose "Not Saving", all the adjusted settings will not be saved, Therefore, after rebooting, new change won't be applied.

4. Check out if your PPPoE setup is correctly applied; please connect FlexWATCH directly to xDSL modem.

Notice) No multiple PPPoE setting is supported.

2.4. Network configuration through Hyper Terminal mode

Microsoft Windows provides Terminal emulation program, named Hyper Terminal. For HyperTerminal connection, Power, RS-232 Cable and LAN cable must be connected to FlexWATCH server with user's PC. LAN cable is to run Web browser after configuration using HyperTerminal. You can continue below configuration after Network setting, and the next process will be same as using Installation Wizard Program.

2.4.1. Hyper Terminal Installation Wizard Program

1. Link up with the provided serial cable between COM port at FlexWATCH server and COM1 or COM2 at user's PC.
2. Run Hyper Terminal Program on user's PC.

Window start → All Programs → Accessories → Communications → Hyper Terminal

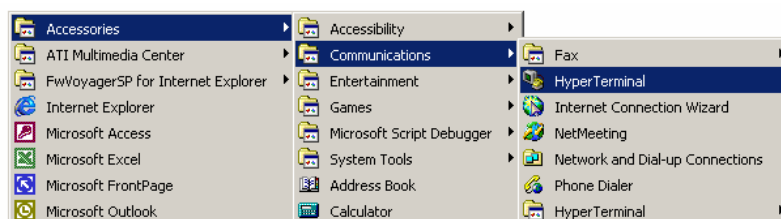


Figure 21 Hyper Terminal Program Location

3. If Hyper Terminal window come up as below, input HyperTerminal name (ex. FlexWATCH) and press 'OK' button.

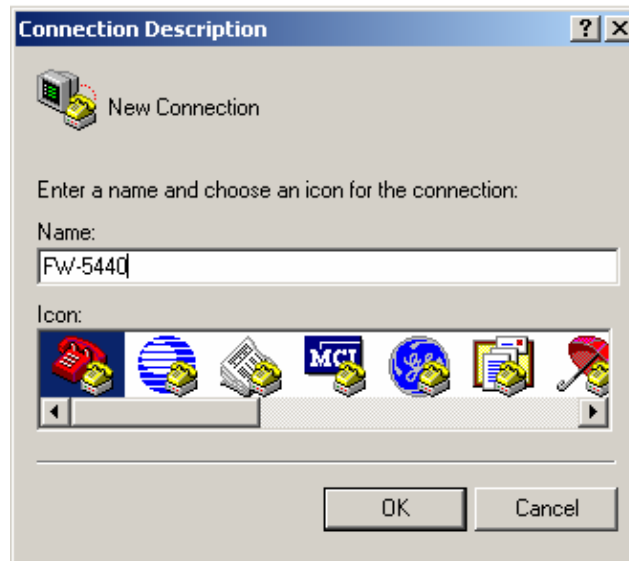


Figure 22 COM Port Connection Description

4. Select the connected COM port with serial cable and press OK button.



Figure 23 COM Port Connect To Information

5. When 'Port Settings' window shows up, input each values from the table below.

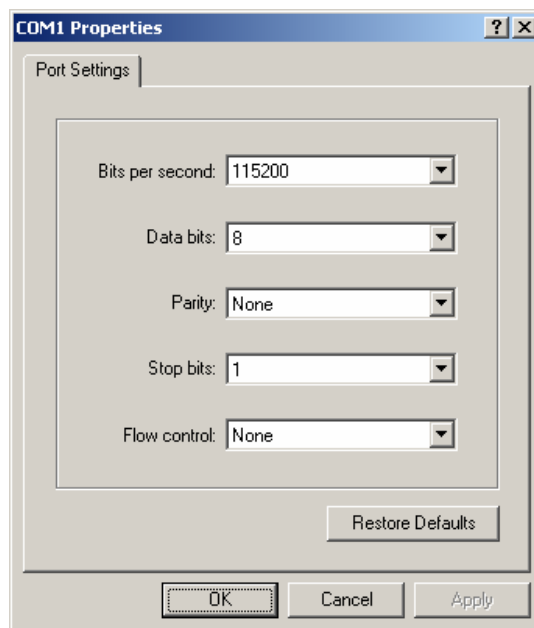


Figure 24 COM Port Settings

Serial Port Settings	Value
Bits per Second	115200
Data bits	8
Parity	None
Stop bits	1
Flow control	None

2.4.2. System Login and Network Configuration by Hyper Terminal

1. After setting Hyper Terminal, press Enter key several times and then you can see messages below. Enter Login ID and Password. (Factory defaults for Admin ID and Password is root/root.)

```
Seyeon Tech Co., Ltd. 2001-2003
Linux Kernel 2.4.21-syl1
FlexWATCH login:
```

2. If you correctly enter ID and Password, 'bash#' prompt will show up as below.

```
FlexWATCH login: root
Password: root

-----
SYSTEM      : FlexWATCH
VERSION     : 3.0.070327-mpeg
MODEL       : FW-5450-S
-----

login[504]: root login on `ttyS0'

bash#
```

3. Input 'netconfig eth1 IP, SubnetMask, Gateway', and press Enter key as below.
(e.g. bash# netconfig eth1 192.168.0.253 255.255.255.0 192.168.0.1)

```
bash# netconfig eth0 192.168.0.253
255.255.255.0 192.168.0.1
Your network configuration was changed.
Shutting down interface ppp2 [ OK ]
Shutting down interface ppp1 [ OK ]
Shutting down interface eth1 [ OK ]
Shutting down interface eth0 [ OK ]
Disabling IPv4 packet forwarding [ OK ]
Setting network parameters [ OK ]
Bringing up interface lo [ OK ]
Bringing up interface eth0 [ OK ]
Bringing up interface eth1 [ OK ]
Bringing up interface ppp1 [ OK ]
Your new network configuration was applied.
bash#
```

TIP) 'Eth1' is to set up IP at 'WAN Port'. If you type in eth0, it will set up IP at 'LAN Port.'

4. Please save all the changed settings for IP, subnet mask and Gateway into flash memory by 'savecfg' shown as below.

```
bash#
bash# savecfg
Saving a current config to flash memory
[ OK ]
Updated flash
bash#
```

5. To check whether your Network configuration is correctly applied or not, press 'ifconfig' command, then following messages will show up. On the second line of the 'eth1' message, you can check the assigned IP and Mask values. Gateway value is not seen here. If the values are different from what you want to set-up, try again the Network configuration from step 4.

```

Bash# ifconfig
eth0      Link encap:Ethernet  HWaddr 00:30:6F:48:64:86
          inet addr:10.20.30.40  Bcast:10.20.30.255
          Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:0 errors:0 dropped:0 overruns:0 frame:0
          TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:100
          Interrupt:9
eth1      Link encap:Ethernet  HWaddr 00:30:6F:48:E4:86
          inet addr:192.168.0.253  Bcast:10.255.255.255
          Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:1453 errors:0 dropped:0 overruns:0 frame:0
          TX packets:62 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:100
          Interrupt:10 Base address:0x2100
lo        Link encap:Local Loopback
          inet addr:127.0.0.1  Mask:255.0.0.0
          UP LOOPBACK RUNNING  MTU:16436  Metric:1
          RX packets:309 errors:0 dropped:0 overruns:0 frame:0
          TX packets:309 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:0

```

2.4.3. Connection to Home Page

Run Internet Explorer Browser and enter the IP address. Then it will connect to the homepage of FlexWATCH server.

3. Introduction to FlexWATCH

3.1. “Home” screen

After network configuration from previous steps, users can access the FlexWATCH server through the web browser on the PC shown as below.

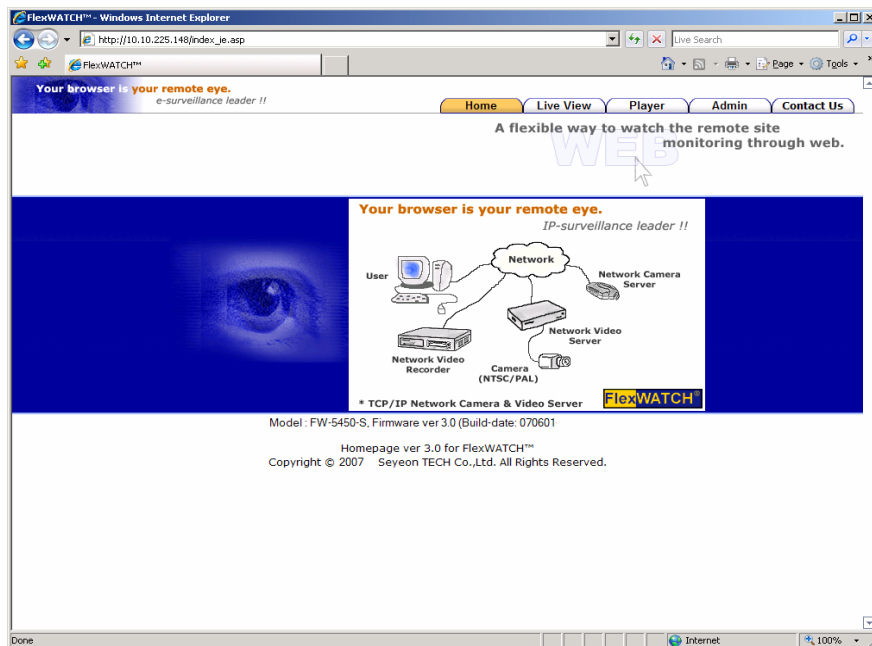


Figure 25 FlexWATCH Main page (FW-5450)

Move the cursor to the menu tabs on screen. The tab menu varies based on the models.

3.2. “Live View” menu

After connection to homepage, to view the images, please click on **Live View** tab. Then a security warning message window will be pop-up. Click ‘Yes’ then live view will be displayed. (Installation of ActiveX Control is needed to show live view when using windows XP).

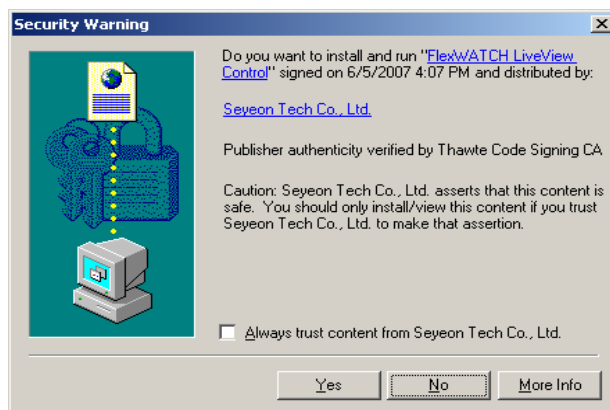


Figure 26 Windows 2000 Security Warning screen

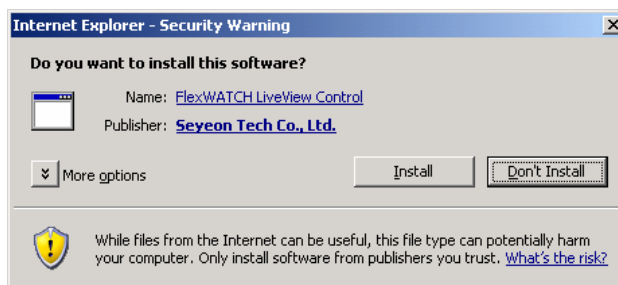


Figure 27 Windows XP Security Warning screen

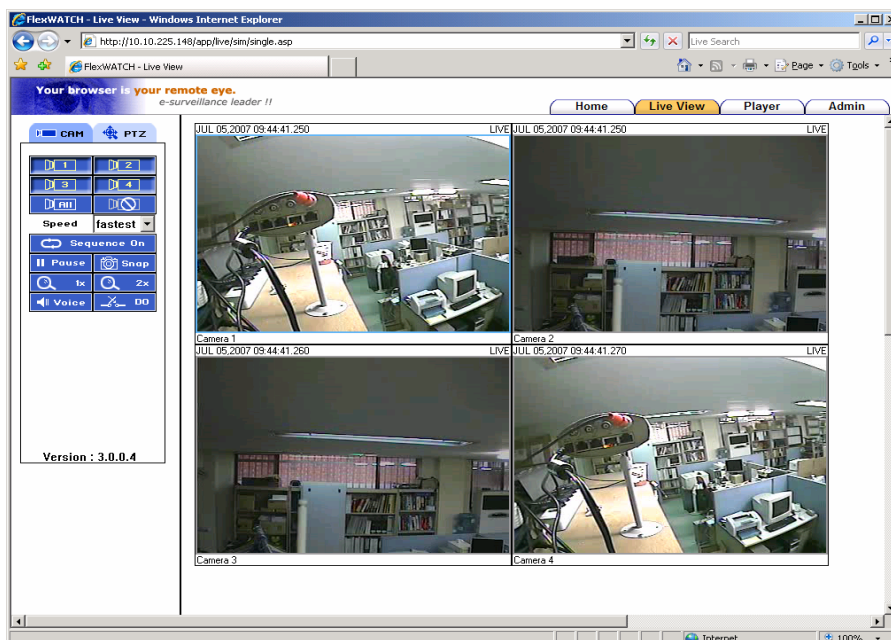

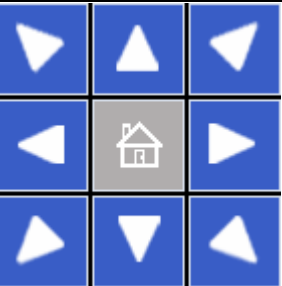



Figure 28 FlexWATCH LiveView Screen (FW5450)

Menu Description	
Image	Description
	Camera Control menu
	It shows the camera numbers. By clicking the camera number you can get any number of cameras displayed on the same screen. Camera 1,2,3,4, and all cameras can be displayed together.
	Display all channels together
	Hide current displaying channels
Speed 	Control Frame speed.
 	Toggle button to pause or play current camera screen
 	To view selected cameras sequentially by 4sec.
	You can take snapshots of video while viewing the live video as jpeg file format. It is named as "Year,Month,Day_Hour,Min,Sec_cam1.jpg"
	Enable two way voice communication
	Control DO for signal from DI

Camera Control Button description

Menu Description	
Image	Description
	PTZ Control menu button. Control menu will be displayed and enabled if a PTZ device is properly installed.
Speed 	Control PTZ speed.
	You can control PTZ device in 8 directions.
	Home function button. In case of Home function enabled PTZ camera, if you click this Home button, the camera will automatically move to Home position.
 	You can control Zoom function
 	You can control Focus of camera.
 	You can control Autopan function.

Preset Call 	Calling preset position by selecting Preset # or name. You can set various preset positions and rename them in Admin menu.
PTZ Move Mode 	You can change PTZ control mode to Step or continuous. It may not work if your PTZ camera doesn't support this function.

PTZ Control button

Menu Description	
Image	Description
	It will show you more functions for PTZ or Receiver.
	You can run or stop preset Group. If your PTZ camera or Receiver doesn't support Group function, it will not be shown.
	You can run or stop Tour function of your PTZ camera. If your PTZ camera or Receiver doesn't support Tour function, it will not be shown.
	PTZ Power on/off button. If your PTZ camera or Receiver doesn't support this function, it will not be shown.
	Light on/off button. If your PTZ camera or Receiver doesn't support this function, it will not be shown.
	AUX1 on/off button. If your PTZ camera or Receiver doesn't support this function, it will not be shown.
	AUX2 on/off button. If your PTZ camera or Receiver doesn't support this function, it will not be shown.

PTZ Expand Control Button

3.3. “Player” Menu (FW-5400 Series only)

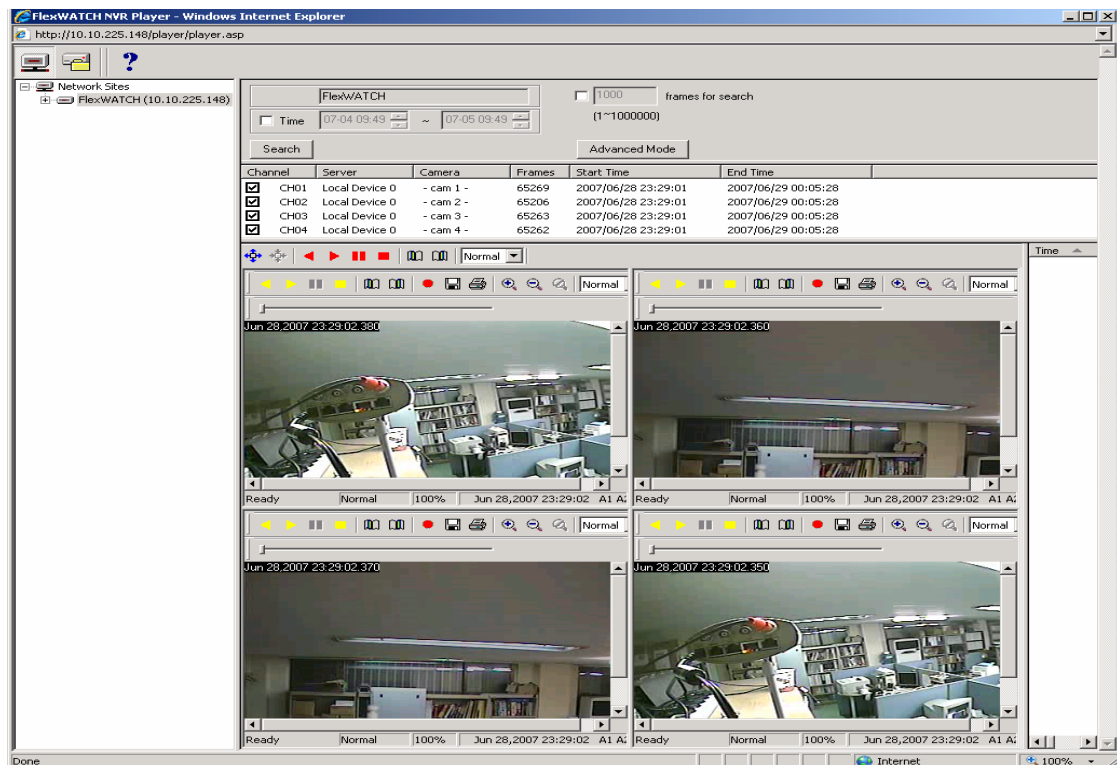


Figure 29 Player

This player supports remote playback for FW5400 series and local playback for your PC. If you click “Player” tab, FlexWATCH NVR Player S/W will be downloaded in client's viewing PC, once Client's PC is connected to the Internet. If it is not connected to the Internet, you need to install the NVR S/W manually. NVR software is provided in the product CD or can be downloaded from <http://www.flexwatch.com>. After the installation of FlexWATCH NVR Player, you can playback the recorded video from FW-5400 series, or if you have recorded data in your PC, you can also playback the recorded video from your PC. (default ID:root, Password:root)

Please refer to Player User Manual for more detailed information.

3.4. “Admin” Menu

This menu is the administration menu for a user to manage all the functions of FlexWATCH and you need the administrator ID and Password for this menu.

Factory default Admin ID is “root” and Password is “root” and you can change the Password in Admin Menu. (Admin ID can't be changed.)

Please refer to FlexWATCH User Manual Part III for more detailed information.

FlexWATCH User Manual

Part 3

(Admin Menu of FW Web page)

Version 3.0

October 22, 2007

Seyeon Technology Co., Ltd

www.seyeon.co.kr

www.flexwatch.com

Contents

1.	Admin Menu.....	5
1.1.	Access to Admin Menu	5
1.2.	Admin Menu Structure	6
2.	System Configuration Menu	8
2.1.	System Information	8
2.1.1.	Server Name Configuration.....	8
2.2.	Date & Time	9
2.2.1.	Date & Time Configuration.....	10
2.3.	Admin Password	11
2.3.1.	Admin Password Configuration.....	11
2.4.	Access permission	12
2.4.1.	How to set Access permission	12
2.5.	User Registration	13
2.5.1.	Add	13
2.5.2.	Edit	15
2.5.3.	Delete	15
2.6.	Rx Module Registration [FW-5450 Only]	16
2.6.1.	Addition of Rx Server Module	17
2.7.	Tx Module Registration [FW-3450 & FW-1130 & FW-3150 Only]	20
2.7.1.	Tx Module Change	21
3.	Network Configuration	24
3.1.	Network Configuration	24
3.1.1.	Static IP Configuration	24
3.1.2.	DHCP Client Configuration	25
3.2.	PPPoE Configuration	25
3.3.	Network Ports	26
3.3.1.	HTTP Port	26
3.3.2.	NIPP(Network Image Provider Protocol) Port [FW-5450 Only]	26
3.3.3.	NVCP-Rx(Network Video Control Protocol) Port [FW-5450 Only].....	27
3.3.4.	NVCP-Tx(Network Video Control Protocol) Port [FW-3450 & FW-1130 & FW-3150 Only]	27
3.3.5.	Audio Port.....	27
3.3.6.	Network Ports Configuration	28
3.4.	WAN-Modem	28
3.4.1.	PPP Server (Dial-In).....	28
3.4.2.	PPP Client (Dial-Out)	30
3.5.	Bandwidth Control.....	30

3.5.1.	Bandwidth Control Configuration	31
3.6.	View Network Status.....	32
3.7.	Network Status Notify	32
3.7.1.	Network Status Notify Configuration	33
3.8.	AOIP™ Setup	35
3.8.1.	AOIP™ Configuration.....	35
3.8.2.	AOIP™ Port Setup	36
3.9.	NTP Setup	37
3.9.1.	NTP Setup Configuration	37
3.9.2.	FlexWATCH® Server Time.....	38
4.	Device Configuration	40
4.1.	Serial Ports	40
4.1.1.	Serial Input Mode	40
4.1.2.	Serial Output Mode	42
4.1.3.	Transparent Mode	43
4.1.4.	PTZ Mode.....	43
4.2.	Camera & Motion [FW-3450 & FW-5450 Only]	47
4.2.1.	Camera & Motion Configuration.....	47
4.2.2.	Camera Configuration	49
4.2.3.	Motion Detection Area Configuration	50
4.3.	Camera & Motion [FW-1130 & FW-3150 Only]	51
4.4.	Audio Configuration [FW-3450 & FW-5450 Only].....	55
4.5.	Audio Configuration [FW-1130 & FW-3150 Only].....	56
4.6.	Input/Output Setup [FW-3450 & FW-5450 Only]	57
4.6.1.	Input / Output Type Configuration.....	57
4.7.	Input/Output Setup [FW-1130 & FW-3150 Only]	58
4.7.1.	Input / Output Type Configuration	58
4.8.	Alarm Output Control [FW-3450 & FW-5450 Only]	58
4.9.	Alarm Output Control [FW-1130 & FW-3150 Only]	58
5.	Advanced Configuration	59
5.1.	Advanced Services	59
6.	Recording Configuration [FW-5450 Only]	60
6.1.	HDD Configuration.....	60
6.1.1.	HDD Format	60
6.2.	Recording Configuration	63
6.2.1.	Recording Configuration	63
6.3.	View Recording Profile.....	66
6.4.	Recording Mode.....	67
6.5.	HDD Status report.....	68

6.6.	Clear Recording Config.....	69
6.7.	Delete Recorded Data	70
7.	Utilities	71
7.1.	Save Configuration	71
7.2.	Reboot	71
7.3.	Factory Default.....	72
7.4.	System Update	73
7.4.1.	All(Kernel, RAM disk, System, Web) Update	74
7.4.2.	System and Web Update	76
7.4.3.	Web Only Update	76


1. Admin Menu

Admin menu is for the administrator of FlexWATCH® Server. The administrator can manage the FlexWATCH® Server by this Admin menu. To access to Admin menu, you need to have Admin ID & Password. Factory default is “root” (Admin ID)/“root” (Admin Password). You can change the Admin password in Admin Menu.


1.1. Access to Admin Menu

You can access to Admin Menu by following steps.


1. You can see the main page of FlexWATCH® Server by Web browser as below.



2. If you click Admin, you will be asked to enter ID & Password.

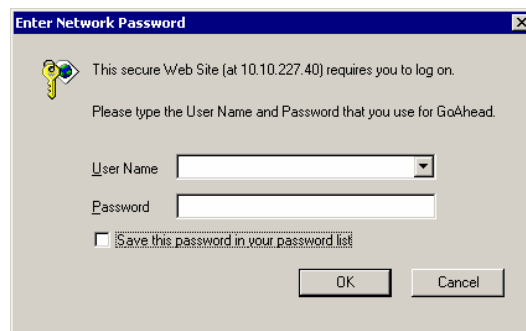

3. Please enter default ID:root & Password:root if you access to Admin page for the first time. If you changed the Password, please enter the changed password to log in. Please notice that Admin ID can't be changed.
 - A. Configuration Menu in Admin Menu. There are System, Network, Device, Advanced, Recording, Utilities group menus.
 - B. If you click group menu (System Configuration, Network Configuration, Device Configuration, Advanced Configuration, Recording Configuration, Utilities), you can see sub menu for each group menu.

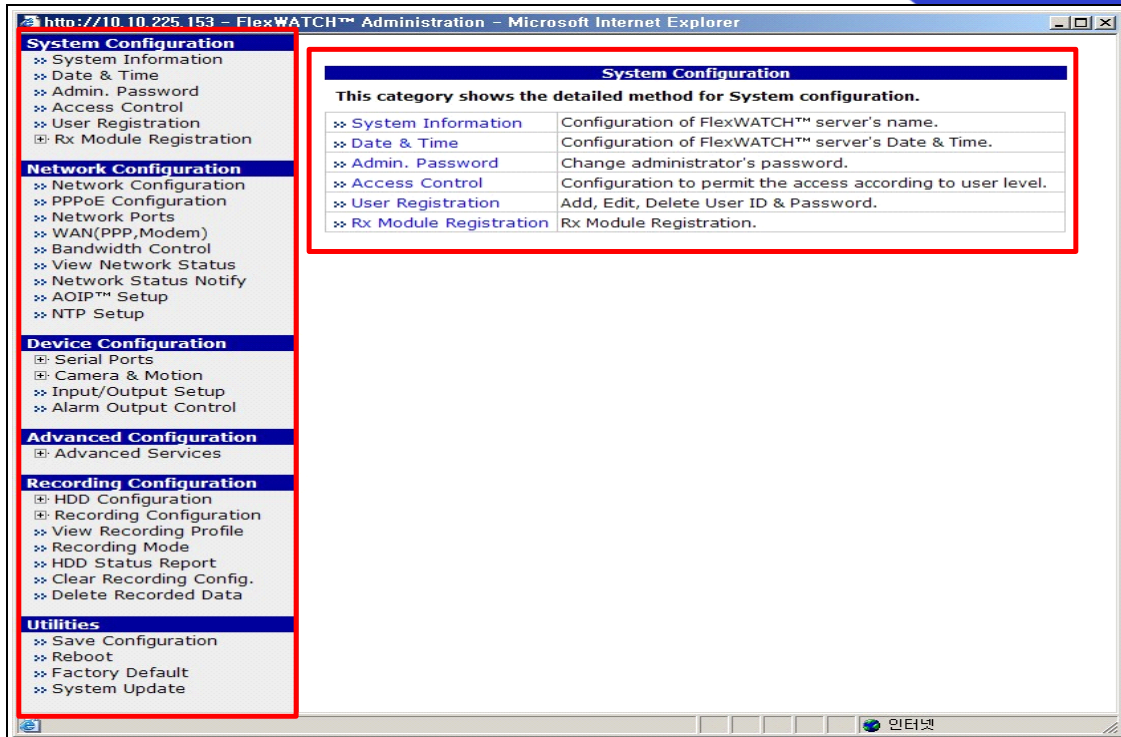

1.2. Admin Menu Structure

Category	Main Menu	Level 1 Sub-Menu	Level 2 Sub-Menu
System Configuration	System Information	n/a	n/a
	Date & Time		
	Admin. Password		
	Access Permission		
	User Registration		
	Rx Module Registration	Rx Module 0 to 15	n/a
Network Configuration	Network Configuration	n/a	n/a
	PPPoE Configuration		
	Network Ports		
	WAN(PPP, Modem)		
	Bandwidth Control		
	View Network Status		
	Network Status Notify		
	AOIP™ Setup		
	NTP Setup		
Device Configuration	Serial Ports	Serial Input Mode Serial Output Mode Transparent Mode PTZ Mode Voice Mode	n/a
	Camera & Motion	Camera 1 Camera 2 Camera 3 Camera 4	n/a
	Input/Output name	n/a	n/a
	Alarm Output Control	n/a	n/a
	Advanced Services	Buffering Service	E-mail

Configuration			FTP(Buffed) Alarm Buffering
		Non-Buffering Service	FTP(Periodic) Sensor Notification Alarm Output
Recording Configuration	HDD Configuration	HDD Format HDD Information	
	Recording Configuration	Server Module 0 Recording Configuration	Camera 1 Camera 2 Camera 3 Camera 4
	View Recording Profile	n/a	n/a
	Recording Mode		
	HDD Status Report		
	Clear Recording Config		
	Delete Recorded Data		
Utilities	Save Configuration	n/a	n/a
	Reboot		
	Factory Default		
	System Update		

2. System Configuration Menu

System configuration is to set up basic functions that help you properly run and manage the system. It is highly recommended to set up the configuration before any other configurations. This menu includes System Information, Date & Time, Administration account set up, Video relay management, and so on.

2.1. System Information

You can see current FlexWATCH® Server name, Serial number, Model name, and Firmware version.

System Information	
Server name	FlexWATCH
Serial number	00:30:6F:81:01:EB
Model	FW-5450-S
Version	3.0.070325-mpeg

Back Apply


Notice : The server name can be 21-alpha-numeric or 10-unicode.
(It means your own characters.)

Following menu will be provided. You can change Server Name while the other information can't be changed.

Server Name	FlexWATCH® Server Name. User definable and Identifier of the system when the system is accessed by third party program such as NDVR software.
Serial Number	FlexWATCH® Server Serial number(MAC Address).This information must be submitted for RMA or Warranty claim
Model	FlexWATCH® Server Model name. This information also needs to be submitted for technical support request.
Version	FlexWATCH® Server firmware version. This information also needs to be submitted for technical support request.

2.1.1. Server Name Configuration

1. Click "System Information" of System Configuration group.

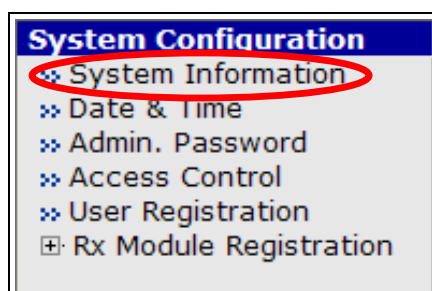

2. Please Input proper Server Name as you wish.
 - A. Server name should be less than 21 alpha-numeric letters or 10 Unicode letters. You can't use Space, Tab, or special characters.
 - B. Since Serial Number, Model, Version are read only, you can't change them.

System Information

Server name	FlexWATCH
Serial number	00:30:6F:81:01:EB
Model	FW-5450-S
Version	3.0.070325-mpeg

Notice : The server name can be 21-alpha-numeric or 10-unicode.
(It means your own characters.)

3. After changing the server name, please click Apply button.

2.2. Date & Time

Local Date & Time Configuration

Date (yyyy/mm/dd)	2007 / 4 / 2
Time (hh:mm:ss)	17 : 24 : 40
Time Zone	☐ Change Time Zone Asia/Seoul
NTP Server	ntp.ewha.net
NTP Status	Disable NTP Setup

Notice : If you change the 'Time Zone' and click 'Apply' button, we strongly recommend to reboot this FlexWATCH™.


Date & Time Menu

Date (yyyy/mm/dd)	Current Date (year/month/day)
Time (hh:mm:ss)	Current Time (hour/minute/second)
Time Zone	Current Time Zone
NTP Server	Current NTP Server
NTP Status	If you click NTP Setup, you can check the current status of NTP Server. It will refresh the current server time with NTP server time once a day.

- ✓ NTP (Network Time Protocol) Server: provides you with exact date & time via Internet.

2.2.1. Date & Time Configuration

1. Click "Date & Time" of System Configuration group.

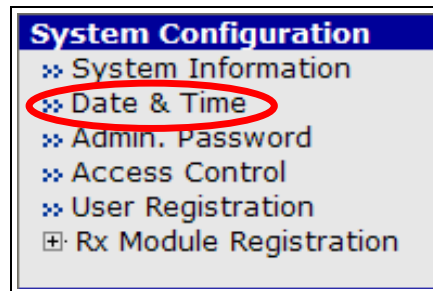

2. Please enter your desired Date and Time. In order to change Time Zone, please check on check box and click on list box. Then you can choose your desired Time Zone. (After the Time Zone change, please click Apply button and **Reboot** the FlexWATCH® server)

Local Date & Time Configuration

Date (yyyy/mm/dd)	2007 / 4 / 2
Time (hh:mm:ss)	17 : 24 : 40
Time Zone	☐ Change Time Zone Asia/Seoul
NTP Server	ntp.ewha.net
NTP Status	Disable » NTP Setup

Notice : If you change the 'Time Zone' and click 'Apply' button, we strongly recommend to reboot this FlexWATCH™.

3. Without Time Zone change, if you click Apply button, then changed time will be applied to the system.
4. If you want to reload the time from FlexWATCH®, please click "Reload" button.

Local Date & Time Configuration

Date (yyyy/mm/dd)	2007 / 4 / 2
Time (hh:mm:ss)	17 : 24 : 40
Time Zone	☐ Change Time Zone Asia/Seoul
NTP Server	ntp.ewha.net
NTP Status	Disable » NTP Setup

Notice : If you change the 'Time Zone' and click 'Apply' button, we strongly recommend to reboot this FlexWATCH™.




If you want to set current Date & Time by NTP Server, please click "NTP Setup". Please refer to 3.9

2.3. Admin Password

You can change the administrator's Password. Administrator ID is always "root".

2.3.1. Admin Password Configuration

1. Click "Admin. Password" of System Configuration group.

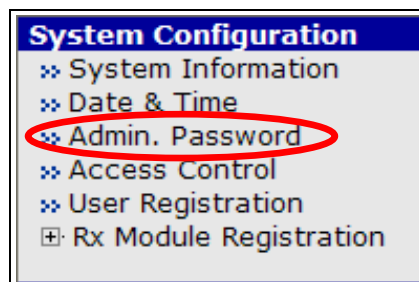

2. Please input current Password in Old Password.

Administrator's Password Configuration

Administrator's ID	root
Old Password	
New Password	
Confirm Password	

Notice : The password must be alpha-numeric, within 4 ~ 23 characters.

3. Input new Password in both New Password and Confirm Password. The Password shall consist of 4-23 alpha-numeric letters.

Administrator's Password Configuration

Administrator's ID	root
Old Password	
New Password	
Confirm Password	


Notice : The password must be alpha-numeric, within 4 ~ 23 characters.

4. After the password change, please click Apply button. At this time, the new password will take

effect and the current connection to FlexWATCH® Server's Web Page will be disconnected. Therefore, you need to re-login with new Password.

2.4. Access permission

You can set up user accounts for the access to FlexWATCH® Server.

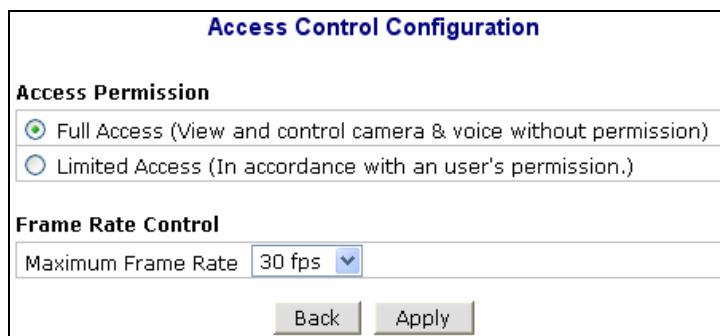


The screenshot shows the 'Access Control Configuration' window. It has two sections: 'Access Permission' and 'Frame Rate Control'. Under 'Access Permission', there are two radio buttons: 'Full Access (View and control camera & voice without permission)' which is selected, and 'Limited Access (In accordance with an user's permission.)'. Under 'Frame Rate Control', there is a label 'Maximum Frame Rate' followed by a dropdown menu showing '30 fps'. At the bottom, there are 'Back' and 'Apply' buttons.

Access Permission Menu


Full Access	To allow system access by anyone who knows the IP address. PTZ, Audio and Relay output device can be controlled by anyone. Thus, if security for video is important, it is highly recommended to user limited access mode below
Limited Access	To limit server access to the authorized user only. Through this mode, you can create multi level access accounts for each camera, not system level, with different control authority. Once Limited Access option is selected, User registration should be followed to effectively use Limited Access function.
Maximum Frame Rate	Available display rate for each channel of the FlexWATCH server. You can choose among 30,15,10,5,2 and 1. Frame rate for the display will be based on the chosen number. This function is only for M-JPEG mode.

2.4.1. How to set Access permission

1. Click "Access Control" of System Configuration group.

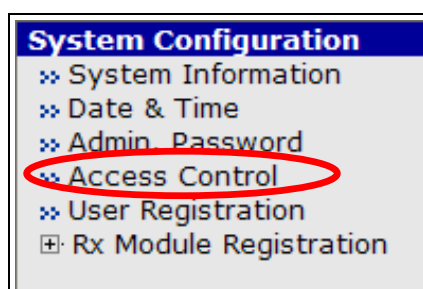

2. Please select either Full Access or Limited Access.

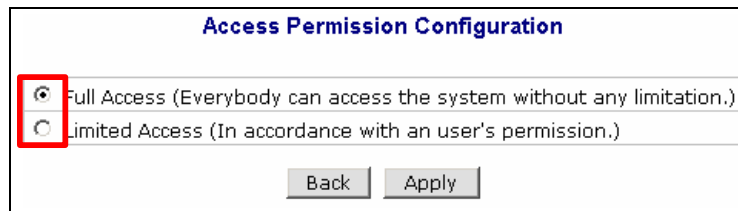

Access Permission Configuration

☒ Full Access (Everybody can access the system without any limitation.)
☐ Limited Access (In accordance with an user's permission.)

Back Apply

- Click Apply button to have the current setting to take effect.


2.5. User Registration

You can register, edit and delete user accounts for FlexWATCH® Server. Registered users are valid only when Access Permission is selected as Limited Access.

2.5.1. Add

You can add a new user by entering user ID, Password, User Name and System Resource Access Permission.


- Click "User Registration" of System Configuration group.

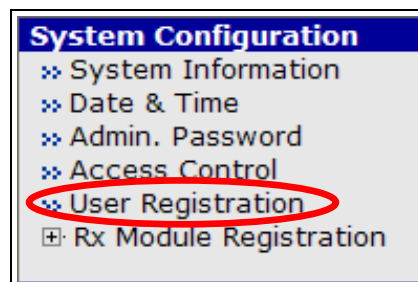

System Configuration

- System Information
- Date & Time
- Admin. Password
- Access Control
- User Registration**
- Rx Module Registration


- Select Add.



User Registration (Add)

Add Edit Delete

- Input User ID in User ID field. User ID shall be less than 23 alpha-numeric letters.

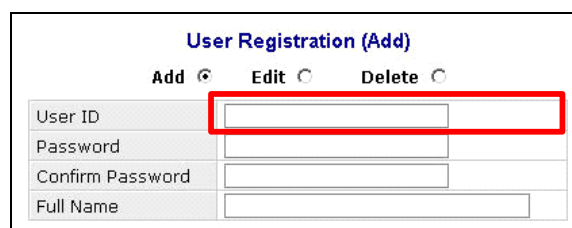

User Registration (Add)

Add Edit Delete

User ID	
Password	
Confirm Password	
Full Name	

- Please Input User password in both Password and Confirm fields. Password shall also be less than 23 alpha-numeric letters.

User ID	
Password	
Confirm Password	
Full Name	

5. Enter User's name in Name field. You can enter less than 31 alpha-numeric letters or less than 15 other special letters.

User ID	
Password	
Confirm Password	
Full Name	

6. Please choose the level of authority for the chosen user.

System Resource Access Permission	
☒	Full Access
☐	No Access
☐	Selective Access

Full Access	If full access is selected, anybody can access the server and control the video except for Admin menu.																																																																																																
No Access	This is to temporally restrict camera access by specific user without deleting user account to temporally block access to the camera. The user can access to Live View but can't see video.																																																																																																
Selective Access	This is to give a user some limitation on cameras. Enable boxes will be activated.																																																																																																
	<table><tr><th colspan="7">System Resource Access Permission</th></tr><tr><td>☒</td><td colspan="6">Full Access</td></tr><tr><td>☐</td><td colspan="6">No Access</td></tr><tr><td>☐</td><td colspan="6">Selective Access</td></tr><tr><th>Enable</th><th>VS Module ID</th><th>Camera No.</th><th>Alarm Control</th><th>PTZ Control</th><th>Voice Control</th><th></th></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr><tr><td>☐</td><td>0</td><td>1</td><td>☐</td><td>☐</td><td>☐</td><td></td></tr></table>						System Resource Access Permission							☒	Full Access						☐	No Access						☐	Selective Access						Enable	VS Module ID	Camera No.	Alarm Control	PTZ Control	Voice Control		☐	0	1	☐	☐	☐		☐	0	1	☐	☐	☐		☐	0	1	☐	☐	☐		☐	0	1	☐	☐	☐		☐	0	1	☐	☐	☐		☐	0	1	☐	☐	☐		☐	0	1	☐	☐	☐		☐	0	1	☐	☐	☐	
System Resource Access Permission																																																																																																	
☒	Full Access																																																																																																
☐	No Access																																																																																																
☐	Selective Access																																																																																																
Enable	VS Module ID	Camera No.	Alarm Control	PTZ Control	Voice Control																																																																																												
☐	0	1	☐	☐	☐																																																																																												
☐	0	1	☐	☐	☐																																																																																												
☐	0	1	☐	☐	☐																																																																																												
☐	0	1	☐	☐	☐																																																																																												
☐	0	1	☐	☐	☐																																																																																												
☐	0	1	☐	☐	☐																																																																																												
☐	0	1	☐	☐	☐																																																																																												
☐	0	1	☐	☐	☐																																																																																												
Enable	You can select VS Module, Camera No, Alarm Control, PTZ Control, and Voice Control. By selecting each function, you can give a user some limitation of accessing FlexWATCH® Server.																																																																																																

System Resource Access Permission						
☐ Full Access ☐ No Access ☒ Selective Access						
Enable	VS Module ID	Camera No.	Alarm Control	PTZ Control	Voice Control	
☒	0	1	☐	☐	☐	
☐	0	1	☐	☐	☐	
☐	0	1	☐	☐	☐	
☐	0	1	☐	☐	☐	
☐	0	1	☐	☐	☐	
☐	0	1	☐	☐	☐	
☐	0	1	☐	☐	☐	
☐	0	1	☐	☐	☐	

VS Module ID	FlexWATCH® server ID which is recognized by the server. Default # is 0. Please disregard other VS Module ID appeared in the drop down menu. Other module numbers is for future use, which is not currently workable. However, VS Module 1 ~15 can be workable for NVR such as FW5xxx series since VS Module is for Network devices(Network Storage Server or NVS) connecting to NVR
Camera No	You can select Camera No for each VS Module (1~4 ch)
Alarm Control	To allow a user to control Alarm function
PTZ Control	To allow a user to control PTZ function (PTZ : Pan Tilt Zoom control)
Voice Control	To allow a user to control Audio function

7. Please click Apply button.

2.5.2. Edit

You can edit the existing user's Password, name, level of authority. However, you can't change user ID. Editing procedure is similar to that of Add function.

1. Select Edit

User Registration (Edit)
 Add ☐ **Edit ☒** Delete ☐

2. Select User ID from the User ID list box.

User Registration (Edit)
 Add ☐ **Edit ☒** Delete ☐

User ID	Select UserId
Password	Select UserId
Confirm Password	Run
Full Name	Someone

3. Please edit user password, level of authority and click Apply button.


2.5.3. Delete

You can delete the existing user's account.

1. Select Delete.



2. Select User ID from the User ID box.

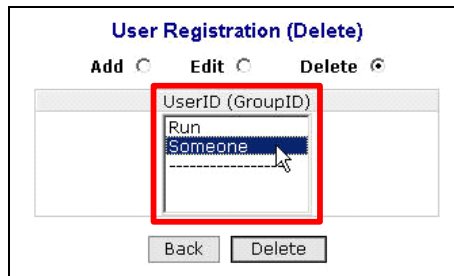


3. Click Delete button. Then the selected user account will be deleted

2.6. Rx Module Registration [FW-5450 Only]

You can register remote NVS (Network Video Server) or NCS (Network Camera Server) into NVR (Network Video Recorder; FW-5450, etc.) as remote channels by Rx Module Registration.

1. Click "Rx Module Registration" of System Configuration group.

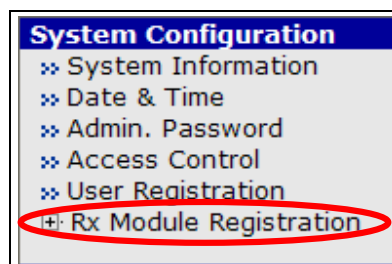

2. Please select one of Server Modules in the list and register desired FlexWATCH® Server. You can register up to 12 channels. For example, you can register up to 12 one channel servers while you can register up to 3 four channel servers.

Rx Module Registration				
This is to register Network camera or video server into NVR server to establish communication between the servers. Up to 16 Video Server modules can be registered.				
VS Module ID	Name	Connection Type	IP Address	MAC Address
Server Module 0	Local Device 0	Local Device	0.0.0.0	
Server Module 1		Not Used	-	
Server Module 2		Not Used	-	
Server Module 3		Not Used	-	
Server Module 4		Not Used	-	
Server Module 5		Not Used	-	
Server Module 6		Not Used	-	
Server Module 7		Not Used	-	
Server Module 8		Not Used	-	
Server Module 9		Not Used	-	
Server Module 10		Not Used	-	
Server Module 11		Not Used	-	
Server Module 12		Not Used	-	
Server Module 13		Not Used	-	
Server Module 14		Not Used	-	
Server Module 15		Not Used	-	

Back Apply

- After addition of Server Module, please click Apply button.

2.6.1. Addition of Rx Server Module

- Click any of Server Modules.
- Please select Enable. Then all the other fields will be activated. If you don't want to use this VS Module, please select Disable.

Rx Module Registration	
VS Module ID 1	☐ Enable ☒ Disable
Connection Type	☐ Active (Static IP) ☐ Using AOIP™ Server ☐ Local (Built-in) ☐ Passive
Name	
Model	
IP Address	VS Module ID
MAC Address	- - - - -
NVCP Port (Destination Tx Port)	(Default:50200, ~ upto 65535)
NVCP Password	
Confirm Password	

Back Save

- Please choose proper Connection Type.

Rx Module Registration

VS Module ID 1 ☐ Enable ☒ Disable

Connection Type

- ☐ Active (Static IP)
- ☐ Using AOIP™ Server
- ☐ Local (Built-in)
- ☐ Passive

Name

Model

IP Address

MAC Address

NVCP Port (Destination Tx Port) (Default:50200, ~ upto 65535)

NVCP Password

Confirm Password

Back Save

Active (Static IP)	In case of the server has static IP. Please enter IP address of the server.
Using AOIP Server	In case of the server has dynamic IP and the server is registered in AOIP server, which is provided for dynamic IP support. Please enter MAC address of the server to be registered.
Local(Built-in)	Local 4 channels of FW-5450. User can't change this.
Passive	When the server has dynamic IP and the FW5450 has static IP, please enter MAC address of the server to be registered.

- Please input a server name in Name field. And select the right type of series of model. No specific model can be selected. Note that some series of model is not available right now such as 4200, 4600, 5800, etc. IP Address field will be activated when the Connection Type is Active (Static IP) whereas MAC Address field will be activated when the Connection Type is either Using AOIP Server or Passive.

Following is information about the series of FlexWATCH Models.

FW-1100 Series = FW-1100, FW-1110L, FW-1110LW, FW-1110, FW-1110D, FW-1110W, FW-1120, FW-1130, FW-1130W, FW-1131, FW-1132, FW-1150, FW-1160, FW-1160E, FW-1160S, FW-1160SE, FW-1161S, FW-1161SE.

FW-1200 Series = FW-1200

FW-1400 Series = FW-100A

FW-3100 Series = FW-200A, FW-3110, FW-3150

FW-3200 Series = FW-3210

FW-3400 Series = FW-3400, FW-3440, FW-3450

FW-3600 Series = FW-500A

FW-5000 Series = FW-5000, FW-5050

FW-5400 Series = FW-5440, FW-5450

Rx Module Registration

VS Module ID 1 ☐ Enable ☒ Disable

Connection Type ☐ Active (Static IP)
☐ Using AOIP™ Server
☐ Local (Built-in)
☐ Passive

Name

Model

IP Address

MAC Address

NVCP Port (Destination Tx Port) (Default:50200, ~ upto 65535)

NVCP Password

Confirm Password

VS Module ID

Back Save

5. NVCP Port (Destination Tx Port) should be the same as the service port number of remote NVS or NCS you are about to register here. Default value is 50200 and the value can be up to 65535. NVCP port field will only be activated when Connection Type is Active (Static IP).

Rx Module Registration

VS Module ID 1 ☒ Enable ☐ Disable

Connection Type ☒ Active (Static IP)
☐ Using AOIP™ Server
☐ Local (Built-in)
☐ Passive

Name

Model FW-3400 Series

IP Address

MAC Address

NVCP Port (Destination Tx Port) 50200 (Default:50200, ~ upto 65535)

NVCP Password

Confirm Password

VS Module ID 0

Back Save


6. VS Module ID is the number of the built-in module of NVS or NCS, which provides remote channels. VS Module ID is always 0(default value) for any 1, 2, or 4 channel server. If you select any other number, it won't work properly.
7. NVCP Password should be the same as that of remote NVS or NCS you are about to register here. The default NVCP password of FlexWATCH server is "nvcp".

8. Once configuration is done, click “Save” button. If you don’t want to register it, please click “Back” button.
9. After Rx Module registration by “Save” button, please click “Apply” button to take effect.

2.7. Tx Module Registration [FW-3450 & FW-1130 & FW-3150 Only]

Tx Module Registration is to provide NVR (Network Video Recorder; FW-5450, etc.) with remote channels from NVS (Network Video Server) or NC (Network Camera).

1. Please Click Tx Module Registration of System Configuration group.

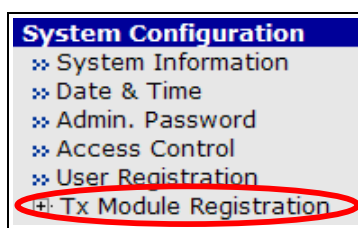

2. The total number of Tx Module is 16. Thus **Up to 16 different NDVR servers** can simultaneously work with FlexWATCH server. Default setting for Tx Module is “passive”, so if NVR’s Rx Module is “active” the NVS can connect to NVR right away.
3. You can select one Tx Module and change it to “active”.

Tx Module Registration

NVCP Password Configuration

New Password

Confirm Password

It is security code to authenticate communication between the video server and NVR server.
The default password is "nvcp". The new password automatically replaces old one.
If the NVCP password is changed, that nvcp password should be assigned to NVR server. Otherwise, no communication can be set up between the devices.

Please click the below link to configure Tx Module.

Tx Module	Tx module Name	Connection Type	IP Address	MAC Address
Tx Module 0		Passive Mode		00-30-6F-00-00-00
Tx Module 1		Passive Mode		00-30-6F-00-00-00
Tx Module 2		Passive Mode		00-30-6F-00-00-00
Tx Module 3		Passive Mode		00-30-6F-00-00-00
Tx Module 4		Passive Mode		00-30-6F-00-00-00
Tx Module 5		Passive Mode		00-30-6F-00-00-00
Tx Module 6		Passive Mode		00-30-6F-00-00-00
Tx Module 7		Passive Mode		00-30-6F-00-00-00
Tx Module 8		Passive Mode		00-30-6F-00-00-00
Tx Module 9		Passive Mode		00-30-6F-00-00-00
Tx Module 10		Passive Mode		00-30-6F-00-00-00
Tx Module 11		Passive Mode		00-30-6F-00-00-00
Tx Module 12		Passive Mode		00-30-6F-00-00-00
Tx Module 13		Passive Mode		00-30-6F-00-00-00
Tx Module 14		Passive Mode		00-30-6F-00-00-00
Tx Module 15		Passive Mode		00-30-6F-00-00-00

Tx module registration is to set up the server to transmit video streams to external device such as FW-5440 or 5000 NVR server over the TCP/IP network.
Video can be transmitted up to 16 different external devices simultaneously.

- After Tx Module registration, please click "Apply" button so that the new configuration can take effect.

2.7.1. Tx Module Change

- Please click one of Tx Module on the list.

Tx Module

[Tx Module 0](#)

[Tx Module 1](#)

[Tx Module 2](#)

[Tx Module 3](#)

- Select Enable in Tx Module field. If you don't want to use this module, please select Disable. The factory default is Enable.

Tx Module Registration

Tx Module 0

☒ Enable ☐ Disable

Connection Type

☒ Passive ☐ Active(Static IP)

IP Address

NVCP Port
(Destination Rx Port)

(Default:50100, ~ upto 65535)

VS Module ID

Back

Save

Notice

- "Destination Rx Port" is TCP port number of Rx Module on remote device which is counterpart of this Tx Module.
- There is no any relationship between Tx Module and VS module numbers.

3. Select the Connection Type with NVR.

Tx Module Registration

Tx Module 0

☒ Enable ☐ Disable

Connection Type

☒ Passive ☐ Active(Static IP)

IP Address

NVCP Port
(Destination Rx Port)

(Default:50100, ~ upto 65535)

VS Module ID

Back


Save

Notice

- "Destination Rx Port" is TCP port number of Rx Module on remote device which is counterpart of this Tx Module.
- There is no any relationship between Tx Module and VS module numbers.

Passive	Factory Default value. You can select this when NVR with dynamic IP and this NVS with static IP. In this case, IP address and NVCP Port fields won't be activated.
Active (Static IP)	You can select this when NVR with static IP and this NVS with dynamic IP. Please enter IP address and NVCP port.

4. IP Address field will be activated when the Connection Type is Active (Static IP). You can enter IP address of NVR.

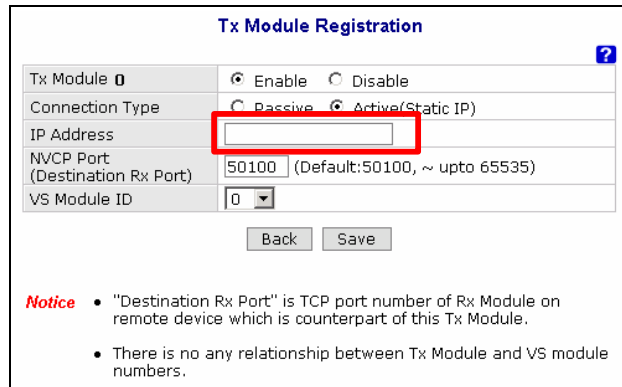

Tx Module Registration

Tx Module 0 ☒ Enable ☐ Disable

Connection Type ☐ Passive ☒ Active(Static IP)

IP Address

NVCP Port (Destination Rx Port) 50100 (Default:50100, ~ upto 65535)


VS Module ID 0

Back Save

Notice

- "Destination Rx Port" is TCP port number of Rx Module on remote device which is counterpart of this Tx Module.
- There is no any relationship between Tx Module and VS module numbers.

5. NVCP Port field will be activated only when Connection Type is "Active (Static IP)". NVCP Port (Destination Rx Port) should be the same as the service port number of Rx Module of NVR. Default value is 50100 and the value can be up to 65535. NVCP port field will only be activated when Connection Type is Active (Static IP).

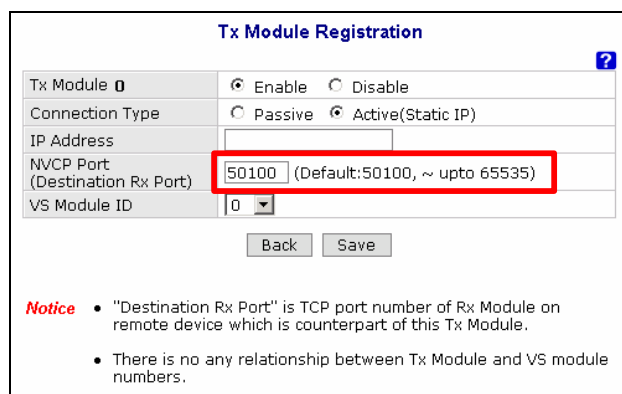

Tx Module Registration

Tx Module 0 ☒ Enable ☐ Disable

Connection Type ☐ Passive ☒ Active(Static IP)

IP Address

NVCP Port (Destination Rx Port) 50100 (Default:50100, ~ upto 65535)


VS Module ID 0

Back Save

Notice

- "Destination Rx Port" is TCP port number of Rx Module on remote device which is counterpart of this Tx Module.
- There is no any relationship between Tx Module and VS module numbers.

6. VS Module ID is the number of the built-in module of NVS or NCS, which provides remote channels. VS Module ID is always 0(default value) for any 1, 2, or 4 channel server. If you select any other number, it won't work properly.
7. If you want change NVCP Password instead of default password "nvcp", please enter new password in New Password and Confirm Password fields.

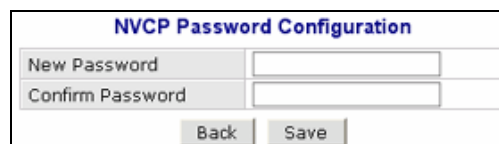

NVCP Password Configuration

New Password

Confirm Password

Back Save

8. After the configuration is done, please click Save, otherwise please click Back button.
9. After Tx Module change, please click "Apply" button so that the new configuration can take effect.

3. Network Configuration

You can do general network configuration for FlexWATCH® Server and can check current setting values. Network configuration mode provides interface for the server to be connected to broadband network or PSTN line. In addition to basic network, application port such as HTTP, NVCP, Voice port configuration and IP filtering options are provided.


3.1. Network Configuration

You can configure the network settings in accordance with your network services such as Static IP, DHCP Client, PPPoE, etc. LAN port must be used for network configuration. You can consult ISP for more information.

1. Static IP: you can use this configuration if you have a static IP address for a FlexWATCH server.
2. DHCP Client: you can use this configuration if you use DHCP service. For example, most ISPs' services (Cable modem or ADSL, VDSL) are DHCP type, under which you are assigned IP address automatically.
3. PPPoE: Some DSL or Cable Modem based ISP provides PPPoE based internet connection service. If FlexWATCH server must directly be connected to the external DSL or Cable modem, PPPoE option must be enabled. You need to enter ID & Password to connect to the Internet.

3.1.1. Static IP Configuration

1. Please click "Network Configuration" of Network Configuration group.

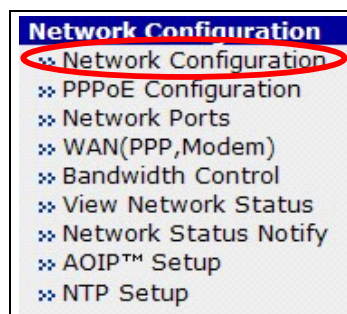

2. If you select Static IP, then you will be able to enter IP Address, Netmask, Gateway, DNS1, and DNS2.

Network Configuration : Static IP

☒ **Static IP**
☐ **DHCP Client**

IP Address	10.10.225.153
NetMask	255.255.0.0
GateWay	10.10.1.1
DNS 1	168.126.63.1
DNS 2	168.126.63.2

3. Please enter proper values into IP address, Netmask, Gateway, DNS1 and DNS2 fields.
4. Click Apply button to save new setting values. If you click Reset, the values will be restored with old values. If you don't apply new settings, please click Back to go back to previous page.

3.1.2. DHCP Client Configuration

DHCP Client is selected as factory default.

1. Select DHCP Client under dynamic IP environment.

Network Configuration : DHCP Client

☐ **Static IP**
☒ **DHCP Client**


Notice : Please make sure to set up "Network Status Notify" option to get IP address through e-mail when DHCP option is selected.

2. Click Apply button to save the current setting. Please click Back to go back to previous page.

3.2. PPPoE Configuration

Under PPPoE, you need to be authenticated by ID & Password to use Internet service.

1. When you click PPPoE, you can enter User ID, User Password, confirm Password.

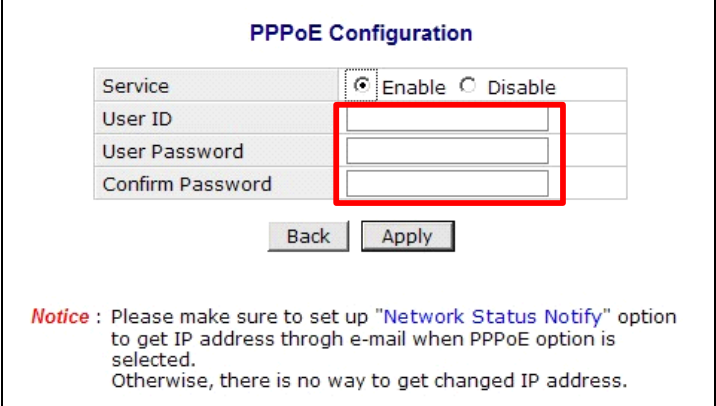

PPPoE Configuration

Service	☒ Enable ☐ Disable
User ID	
User Password	
Confirm Password	

Notice : Please make sure to set up "Network Status Notify" option to get IP address through e-mail when PPPoE option is selected. Otherwise, there is no way to get changed IP address.

2. Please enter your ID & Password provided by your ISP.
3. Enter your Password again in Confirm Password field.

Please click Apply button to save new setting values. If you don't apply new settings, please click Back to go back to previous page.

3.3. Network Ports

You can enter various Port numbers, which are used by FlexWATCH® Server, in order to communicate with Client PC. Currently FlexWATCH® Server uses HTTP Port, NIPP Port, NVCP-Rx Port, and Audio Port.

3.3.1. HTTP Port

1. HTTP Port is used for Web communication between Client PC and FlexWATCH® Server. By assigning different HTTP port number for each server and configure port-forwarding feature of Router, you can install more than one server behind the router. For more information about this, please contact your local vendor.
2. Default value is 80 and it can be up to 65535.



** If HTTP Port number is changed, you should enter HTTP Port number with your IP address in URL section of Web browser.*

(ex. If FlexWATCH® Server IP address is 192.168.1.100 and HTTP Port: 8080, then it should be like <http://192.168.1.100:8080>)

3.3.2. NIPP (Network Image Provider Protocol) Port [FW-5450 Only]

1. This is a port through which archived video can be playback through Internet. If NIPP Port is not open to Internet no recorded video can be played back.
2. Default value is 50000 and can be between 10000 and 65535.

3.3.3. NVCP-Rx (Network Video Control Protocol) Port [FW-5450 Only]

1. Rx port is a TCP port number through which NVR server can communicate with FlexWATCH® server so that video can be transmitted into NVR server.
2. Default value is 50100 and can be between 10000 and 65535.
3. Active mode: NVR actively connects to other FlexWATCH® Servers on the network and receives data from them.

3.3.4. NVCP-Tx (Network Video Control Protocol) Port [FW-3450 & FW-1130 & FW-3150 Only]


1. Tx port is a TCP port number through which FlexWATCH server can communicate with other devices such as FW-5440 or FW-5000 NVR servers.
2. Default value is 50200 and can be between 10000 and 65535.
3. Passive mode: Other FlexWATCH® Servers on the Network connect to your NVS and they receive data from your NVS.

3.3.5. Audio Port

Audio Port is a network port that gets audio input from user's PC and sends out to audio out port of FlexWATCH® Server. The default value is UDP 32001 and can be between 10000 and 65535.

3.3.6. Network Ports Configuration

1. Click "Network Ports" of Network Configuration group.

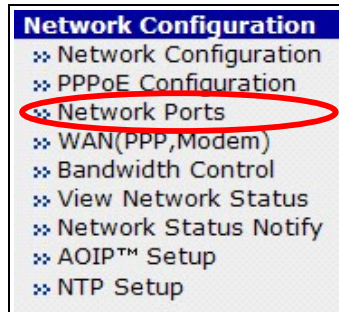

2. Please enter HTTP Port, NIPP Port, NVCP-Rx Port and Audio Port.

Network Ports Configuration

HTTP Port	80	(Default:80, 80 ~ 65535)
NIPP Port	50000	(Default:50000, 10000 ~ 65535)
NVCP-Rx Port	50100	(Default:50100, 10000 ~ 65535)
Audio Port	32001	(Default:32001, 10000 ~ 65535)

Notice

- HTTP Port : For web access and video transmission.
- NIPP Port : Network Image Provider Protocol.
This is TCP port for search and playback of archived video in the NVR server by remote player.
- NVCP Rx port : This is another video control and communication TCP port besides HTTP server port to receive video data from Network camera or Video server, when the NVR server is set to Passive mode. If NVR is set to Active Mode, no need to open NVCP port.
- Audio Port : This is UDP port to send Audio data from a remote client to FW-server.

3. Click Apply button to save new setting values.

3.4. WAN-Modem

Server is designed to make a call to ISP or can receive a call from outside so that server can establish Internet connect to send FTP, e-mail or send video & data through PSTN line or other medium. This is best alternative when the broadband Internet access is not available. You will have a PSTN modem installed for FlexWATCH® to establish PPP connection through PSTN modem. The network interface through PPP connection will work as WAN port.

3.4.1. PPP Server (Dial-In)

This mode is that FlexWATCH® works as a PPP Server. There will be a call from a client PC to FlexWATCH® and FlexWATCH® will receive the call to establish the PPP connection.

1. Local IP Address will be assigned to FlexWATCH® and Remote IP Address will be assigned to the other party's device. Therefore, if Client PC makes a call to FlexWATCH®, FlexWATCH® gets the Local IP Address whereas Client PC gets the Remote IP Address.

Local IP address:

System default IP address (**192.168.2.1**) resides in the FlexWATCH® server for **modem connection** only. So when you connect the FlexWATCH® server from remote PC using dial-up networking and physical connection is made, you need to run your web browser and enter this system default IP address (**192.168.2.1**) to view live video. You can change this system default IP address as well. But it is recommended not to change system default IP address for modem connection to prevent any possible error.

Remote IP address:

IP address which is automatically given to remote client PC by FlexWATCH® server when FlexWATCH® server is connected by remote client PC using dial-up networking. This IP address (**192.168.2.2**) is for data communication between FlexWATCH® server and Remote client PC. So **you do not need to change this IP address**. But if you change default IP address of FlexWATCH® server (**192.168.2.1**) for modem connection to different class of IP address, you need to change remote IP address to the same class of IP to match the IP class.

Notice) Note that when Local IP address is change, remote IP address should be changed into the same class of the IP address.

PPP Server		PPP Client	
Local IP Address	192.168.2.1		
Remote IP Address	192.168.2.2		
Authentication Mode	☐ PAP ☐ CHAP ☒ NONE		

2. You can select Authentication Mode among PAP, CHAP, or None

PAP	Connection is made by User ID & Password registered below sections.
CHAP	With User ID, Password, it applies another encryption method for higher security.
NONE	Do not use authentication mode.

3. In order to use PAP or CHAP authentication mode you need to register at least one user. You can register up to 3 users for this service.

Authentication mode: ☐ PAP ☐ CHAP ☒ NONE

User 1
 ID:
 Password:

User 2
 ID:
 Password:

User 3
 ID:
 Password:

Back Apply Reset

Notice : User name and password are limited within 13 Characters.

3.4.2. PPP Client (Dial-Out)

This mode is that FlexWATCH® works as a PPP Client. You can connect to the Internet or other PPP Server through the Modem installed at FlexWATCH® (RS-232).

WAN-Modem : PPP Client (Dial Out)

PPP Server ☐ PPP Client ☒

TEL #	
User ID	
User Password	
Confirm User's Password	
Default Route	☒
DNS1	168.126.63.1
DNS2	168.126.63.2
RS-232 Line Speed	115200
User Defined AT-Command1	
	AT
User Defined AT-Command2	
	AT

Notice :If you check "Default Route", all data pass through WAN-Modem port.

1. Please select "PPP Client" in "WAN (PPP, Modem)" menu.
2. Enter Telephone number in PPP Server field.
3. Enter User ID provided by ISP.
4. Enter User Password provided by ISP.
5. Enter DNS Server IP recommended by ISP.
6. Enter AT command for initializing the communication. (Initializing command is normally 'AT'. But it may sometimes vary based on modems. Please refer to the modem manual for the recommended command for your modem.)



'3COM U.S.Robotics 56K' modem is recommended.

3.5. Bandwidth Control

You can control the bandwidth for FlexWATCH® Server. If out-going data is more than network bandwidth limit, FlexWATCH® will throw away some network data packets.

Bandwidth Control Configuration

Service	☐ Enable ☒ Disable
Bandwidth Limit	0 Kbps

Notice : The bandwidth limit should be over 32.

3.5.1. Bandwidth Control Configuration

1. Please specify whether you use Bandwidth control or not. If you want to use Bandwidth Control, please select Enable.

Bandwidth Control Configuration

Service	☐ Enable ☒ Disable
Bandwidth Limit	0 Kbps

Notice : The bandwidth limit should be over 32.

2. Please input Bandwidth Limit in kbps. This function supports both M-JPEG & MPEG4.

Bandwidth Control Configuration

Service	☐ Enable ☒ Disable
Bandwidth Limit	0 Kbps

Notice : The bandwidth limit should be over 32.



In MPEG4, you might see unstable video streams due to Packet loss, it is strongly recommended

that you use CBR and frame rate control to control data transmission instead of Bandwidth control. This function is recommended for M-JPEG.



This Network Bandwidth control may cause to slow down the access to admin page of FlexWATCH server.

- Click Apply button to save the new value of the bandwidth limit.

3.6. View Network Status

You can view the current values of Network settings for FlexWATCH® Server.

Network Status

Common Status

Gateway: 10.10.1.1
 Gateway Device: eth0
 DNS1: 168.126.63.1
 DNS2: 168.126.63.2

LAN Status

IP Address: 10.10.225.153
 Netmask: 255.255.0.0
 MAC Address: 00:30:6F:81:01:EB

PPPoE Status

Connection Status: Link is down
 IP Address:
 Netmask:

WAN-Modem Status

Connection Type: PPP Server (Dial In)
 Connection Status: Link is down
 Local IP:
 Remote IP:
 Netmask:

Back Reload

If you click Reload button, current setting values will be reloaded.

3.7. Network Status Notify

If network setting of FlexWATCH® Server is changed, E-mail is automatically sent to the recipient. When you select Enable for Mail Notification, under the following situations, FlexWATCH Server will send e-mails of current network settings to pre-registered recipients.

- When the server is connected to PSTN Modem connection with Dial-up to ISP by event
- When the DHCP option is selected
- When the PPPoE option is selected

Network Status Notification

Mail Notification

☐ Enable ☒ Disable

SMTP Server

Authentication Login

☐ Enable ☒ Disable

User ID

Password

Sender

1st Recipient

2nd Recipient

3rd Recipient

===== User-Defined Message =====

Back

Apply


Reload

Network Status Notification Menu

Mail Notification	Enable : using E-mail Disable : not using E-mail
SMTP Server	SMTP Server address
Authentication Login	Select whether you use Authentication login or not
User ID	User ID for Authentication Login
Password	User Password for Authentication Login
Sender	Sender's E-mail address
Recipient1's Email Address	Recipients' E-mail addresses (Max. 3 Recipients)
Recipient2's Email Address	
Recipient3's Email Address	
User Defined Message	User defined message attached to E-mail

3.7.1. Network Status Notify Configuration

1. Click "Network Status Notify" of Network Configuration group.

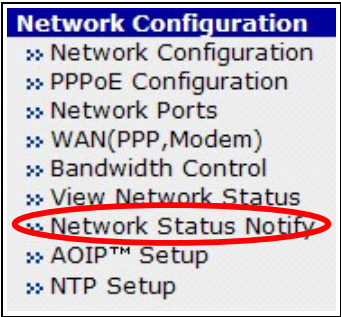

2. Select Enable if you want to use Mail Notification function.

Mail Notification	☐ Enable ☒ Disable
SMTP Server	
Authentication Login	☐ Enable ☒ Disable
User ID	
Password	
Sender	
1st Recipient	
2nd Recipient	
3rd Recipient	

3. Enter address of SMTP Server.

- ✓ SMTP Server gets sender's e-mail and relays it to recipients.

Mail Notification	☐ Enable ☒ Disable
SMTP Server	
Authentication Login	☐ Enable ☒ Disable
User ID	
Password	
Sender	
1st Recipient	
2nd Recipient	
3rd Recipient	

4. Select Enable for Authentication Login and please enter User ID & Password provided by SMTP server.

Mail Notification	☐ Enable ☒ Disable
SMTP Server	
Authentication Login	☐ Enable ☒ Disable
User ID	
Password	
Sender	
1st Recipient	
2nd Recipient	
3rd Recipient	


5. Enter Sender's e-mail address in Sender field and Recipients' e-mail address in Recipient field. You can enter up to 3 recipients.

Sender	
1st Recipient	
2nd Recipient	
3rd Recipient	

6. Enter User Defined Message, which will be attached the notification e-mail.

===== User-Defined Message =====

- Click Apply button to save new setting values. Reload button will restore the previous values.




3.8. AOIP™ Setup

AOIP (Always-On-IP) is an IP gateway through which user can access the FlexWATCH server when it is connected to Dynamic IP address. Thus, if the server should be connected to the Dynamic IP network and you want to view live video from anywhere, it is the right solution for you. First, you need get a User account provided by supplier. Secondly, you need to configure your FlexWATCH server to be registered at AOIP server by AOIP™ Port Setup.

3.8.1. AOIP™ Configuration

- Click AOIP™ Setup of Network Configuration group.

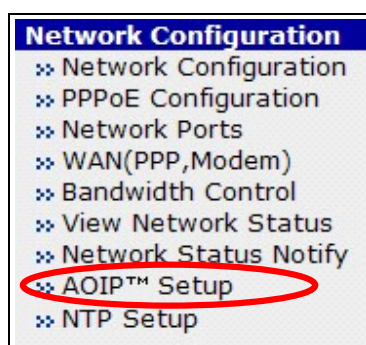

- Select Enable in AOIP Service.
- Please enter the address of AOIP™ Server, in which your account is registered. For example, if you use AOIP™ Server in Korea provided by Seyeon Tech Co., Ltd., you may enter www.aoip.co.kr. If your local supplier runs their own AOIP™ Server, you shall enter the address of their local AOIP™ Server.

AOIP Service	☒ Enable ☐ Disable
AOIP Server IP	www.aoip.co.kr
HTTP Port	☒ Enable ☐ Disable
NIPP Port	☒ Enable ☐ Disable
NVCP-Rx Port	☐ Enable ☒ Disable

- ✓ The address of AOIP™ Server in Korea is www.aoip.co.kr.


- Select which ports you want to use.

AOIP Service	☒ Enable ☐ Disable
AOIP Server IP	www.aoip.co.kr
HTTP Port	☒ Enable ☐ Disable
NIPP Port	☒ Enable ☐ Disable
NVCP-Rx Port	☐ Enable ☒ Disable


- Please click Apply button to save new settings.

3.8.2. AOIP™ Port Setup

- Click AOIP™ Setup of Network Configuration group.

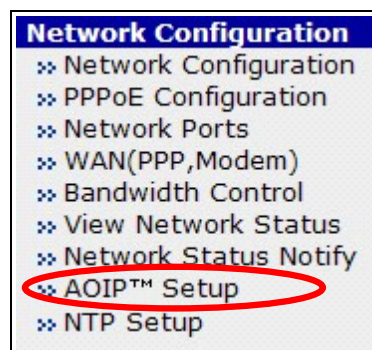

- Click Setting Button in AOIP™ Port Setup.

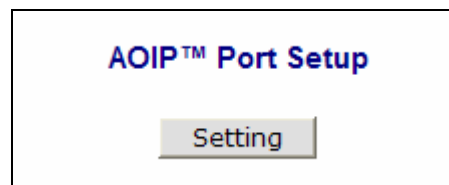

- Please enter your AOIP user ID & password in pop-up window.

A screenshot of the 'Enter Network Password' dialog box. It has a title bar with the text 'Enter Network Password' and a key icon. The text inside says 'Please type your user name and password.' Below this are fields for 'Site' (www.aoip.co.kr), 'Realm' (WebSever), 'User Name', and 'Password'. There is a checkbox labeled 'Save this password in your password list' which is unchecked. At the bottom are 'OK' and 'Cancel' buttons.

- Please Click More button for more ports to be set.

AOIP Port Registration

Video (Default:80, 80 ~ 65535) **More**

Apply

5. Enter the port number you want to use for each service port.

AOIP Port Registration

Video		(Default:80, 80 ~ 65535)	More
Player		(Default:50000, 10000 ~ 65535)	
Log		(Default:53000, 10000 ~ 65535)	
Video-Rx (NVCP-Rx)		(Default:50100, 10000 ~ 65535)	
Video-Tx (NVCP-Tx)		(Default:50200, 10000 ~ 65535)	

Apply

6. Click Apply button to save new setting values




This AOIP Port Registration can also be done in AOIP™ Server. AOIP™ Server provides you with Registration, Search, Delete, Edit service, etc.

3.9. NTP Setup

FlexWATCH® Server can get time information from a NTP server and FlexWATCH® Server can be set by that time.

3.9.1. NTP Setup Configuration

1. Click "NTP Setup" in Network Configuration group.

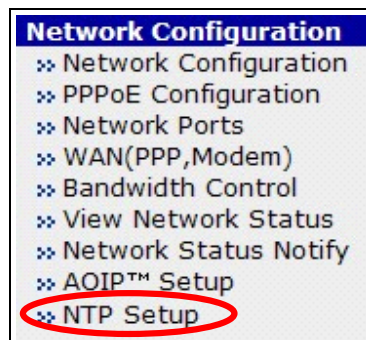

2. If Service is selected as Enable, FlexWATCH® server will synchronize its time with acquiring time from Time Server when booting. Please enter the address of a Time Server in NTP Server address field.

3. If you want to set FlexWATCH® server time manually with acquiring time from Time Server, please click 'Get NTP Server time'. You can check out the changed time in Date & Time menu in System Information group.
4. Click Apply button to save new setting values.
5. If NTP service is enabled, FlexWATCH® server time will be synchronized with time from NTP Server once a day.

3.9.2. FlexWATCH® Server Time

In general, most cases of OS, when booting, its time needs to be set. So does Linux. There are two ways of getting current time. First one is by system's RTC and the other one is by Time Server via network.

RTC time itself has some inaccuracy, meaning that as time goes by, the inaccuracy will be bigger. However, acquiring time from Time Server is more accurate than RTC time even though there may be some inaccuracy due to network latency. FlexWATCH® server provides you with these two ways of setting its time.

3.9.2.1. Daylight Saving Time

If you use FlexWATCH® Server in a country where Daylight Saving time applies, please select Change Time Zone and change the time zone to that area. Then

3.9.2.2. UTC & Local Time

UTC (Universal Time) means the standard time while local time means your local area time. The internal time of Linux is in UTC and this UTC will be converted to local time based on Time Zone.

3.9.2.3. NTP

The acquiring time from NTP server is UTC. FlexWATCH server converts this UTC to local time by Time Zone. Thus NTP server which is not from your local area can be used for NTP service. However, there may be some network latency in case that you use a NTP server in long distance.

4. Device Configuration

You can configure camera related settings for FlexWATCH®.

4.1. Serial Ports

Basically COM port is for Console and AUX is for PTZ; however, they can be used for other functions.

Serial Ports Configuration

COM Mode	Console ▼
AUX Mode	PTZ ▼

Back
Apply

Please click below link to configure more details.


❖ Console Mode	When COM port is connected to console. (Baud Rate : 115200)
❖ Modem Mode	When AUX port is connected to modem. (Baud Rate : 115000)
❖ Serial Input Mode	When COM or AUX port is connected to serial input device.
❖ Serial Output Mode	When COM or AUX port is connected to serial output device.
❖ PTZ Mode	When COM or AUX port is connected to PTZ devices.
❖ Transparent Mode	When COM or AUX port is connected to UART device.

4.1.1. Serial Input Mode

Serial Input Mode is for getting inputs from various sensors through AUX port of FlexWATCH® Server and sending you Camera's images by E-mail, FTP or Alarm Output. For example, when the water level of a dam reaches the specific level, FlexWATCH Server can send you the image of the water level. Or after checking the speed of cars on highway, if it reaches the speed limit, FlexWATCH server can send the image of car plate number to you. These kinds of functions can be managed by COM and AUX ports.

1. Serial Input Mode configuration

In web Admin page, please go to Device Configuration group. And click Serial Ports and select Serial Input in COM Mode. Click Apply button.

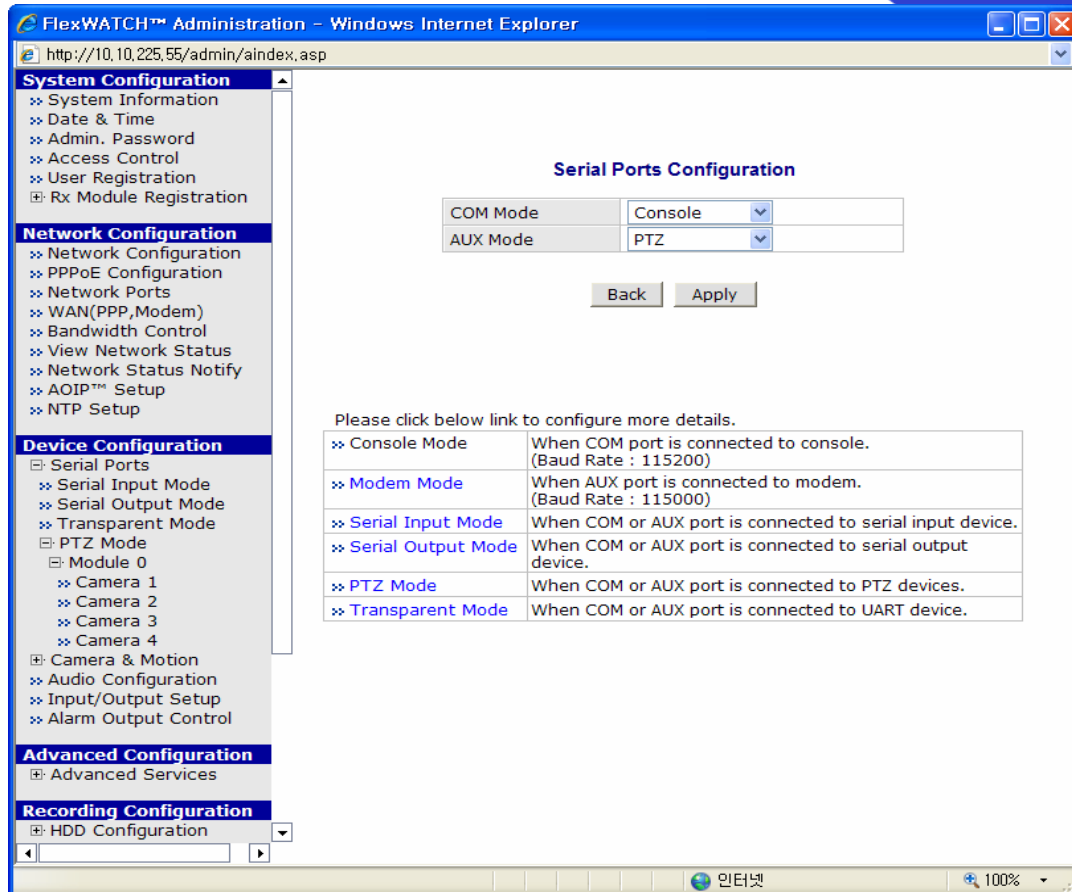

2. When you click Serial Input Mode, you will see below menu.

Serial Input Mode Configuration	
Select the serial input device supported by the system.	
Current Port	None
Current Protocol	None
Serial Input Model	Not Installed
Back Apply	

- Current Port: current port number will appear.
- Current Protocol: current protocol will appear.
- Serial Input Model: Please Select Model name for Serial Input mode.

Below is the screen for Speed sensor AGILIS-HE820-SINGAPORE model.



Serial Input device protocol can separately be uploaded into the system per customer needs. User can upload serial input device protocol file which is provided by manufacturer only. This function is not for general use. Thus, if you need more close information about this, please contact your local distributor or manufacturer for further information, sales@flexwatch.com.

Serial Input Mode Configuration

Select the serial input device supported by the system.

Current Port	None
Current Protocol	None
Serial Input Model	AGILIS-HE820-SINGAPORE
Upper Limit	-1
Lower Limit	-1
Initial String Length	0
Initial String Data	
(Speed) Delay configuration	
(Speed)Delay	☐ Enable ☒ Disable
Internal process delay	0
Sensor Aiming Position	0
Camera Aiming Position	0
Add Vehicle length to calculate delay time	☐ Add ☒ Ignore

- Upper Limit: Maximum value
- Lower Limit: Minimum value
- Initial String Length: Initial string length of Sensor
- Initial String Data: Initial string data of Sensor
- (Speed)Delay: Delay enable/disable selection for sensor input
- Internal process delay: Value of sensor input delay
- Sensor Aiming Position: Value of Sensor Aiming Position
- Camera Aiming Position: Value of Camera Aiming Position
- Add Vehicle length to calculate delay time: Vehicle length add/ignore selection

4.1.2. Serial Output Mode

The system supports to relay third party command to target device through Serial output device control mode. Through this, user defined message can be reached to target device.

The system supports two different modes. One is X10 protocol for PLC (Power Line Communication) and UART (Universal Asynchronous Receiver Transmitter) device.

By using Serial Output Mode, you can send UART (Universal Asynchronous Receipt and Transmission) device commands to FlexWATCH® Servers. FlexWATCH® can control PTZ devices,

Multiplexer, Access control box, X10 Protocol, z256 protocol, etc. by RS-232 or RS-485(422) communication.

You can use By-Pass, X10, and Z256 in Serial Output Mode.

Serial Output Mode Configuration	
Current Port	None
Line Mode	RS-232
Baud Rate	38400
Data Bit	8 bit
Stop Bit	1 bit
Parity Bit	None
Mode	☒ By-Pass ☐ X10 ☐ Z256
Back Apply	

4.1.3. Transparent Mode

If you use Transparent Mode, you can use 2 FlexWATCH® servers to relay the signal from one UART device to another UART device. It is like direct communication between two UART devices. .

Transparent Mode Configuration	
Current Port	None
Line Mode	RS-485
Baud Rate	9600
Data Bit	8 bit
Stop Bit	1 bit
Parity Bit	None
Network Protocol	UDP
Peer IP	127.0.0.1
Network Port	32000 (Default: 32000, 10000 ~ 65535)
Data Start Pattern	☐
Data Size	0
Back Apply	

- Line Mode: Communication protocol
- Baud Rate: Communication rate
- Data Bit: Data bit size
- Stop Bit: Stop bit size
- Parity Bit: Parity bit type
- Network Protocol: Network Protocol type for data transmission
- Peer IP: IP of the other connected FlexWATCH server
- Network Port: Network Port number to be used
- Data Start Pattern: Data Start pattern selection. If you don't want to use, uncheck it.
- Data Size: Data size to be transmitted. If you don't use, do not enter a value.

4.1.4. PTZ Mode

PTZ (Pan/Tilt/Zoom) device connected to the server can be controlled through either standard web browser or specific application program over IP network.

When you install a RS-485/422 interfaced PTZ model:

PTZ device has to be connected to **RS422/485** in AUX port.

When you install a RS-232 interfaced PTZ model:

PTZ device has to be connected to **RS232** in AUX port.

After making connection to AUX port, please select PTZ camera or Receiver model in the PTZ list. And click “Apply” button to save new settings.

PTZ Mode Configuration

Current Port	AUX
Current Protocol	RS232
PTZ Model	Not Installed

↓

RS422/485				RS232		
RX-	RX+	TX-	TX+	GND	RXD	TXD
AUX						

COM						
-----	--	--	--	--	--	--

Please click the below link to configure PTZ module.

- After selecting the model name, click “Module 0”. And then, please check channel number which PTZ camera is connected to.



** Before you purchase a Receiver or PTZ camera, please contact your local supplier or Seyeon Tech Co., Ltd. to check if the PTZ device is supported by FlexWATCH Server or not.*



** You can see current supported PTZ protocol by looking at the PTZ model list. (Currently 34 PTZ camera models are supported and more PTZ devices would be added later.)*

PTZ Mode Configuration

Current Port	AUX
Current Protocol	RS485
PTZ Model	Not Installed Not Installed Pelco-D : Spectra Dome Pelco-P : Spectra Dome Seyeon Tech : SRX-500/SPT-102 Seyeon Tech : FSD-230/270 Seyeon Tech : FSD-301 ELMO : ELDOME SANTEC : Santec Dome Honeywell : HSDN-230/251(H) Honeywell : HSDN-230/251(P) SAMSUNG : SCC641/643A SAMSUNG : SCC641/643A(RS422) SAMSUNG : MRX-1000 VICON : V-1311RB VICON : Surveyor-1000/2000 SAMSUNG Techwin : SPD1600 SAMSUNG Techwin : SRX-100B SAMSUNG Techwin : SRX-100-R American Dynamics : DELTA DOME KALATEL : CYBER DOME(KTA-xxxx) Panasonic : WV-CS854 SONY : EVI-D30 CANON : VC-C4 RNK : RNK-DOME ERNITEC : BDR-510 Inter-M : VSD-640/625L KODICOM : KRE-301 FINE : CRR-1600I Dongyang : DY-XXXX Bosch : Auto Dome Sungjin : SJ2000/3000RX Honeywell : HRX-2000 Inter-M : VRX-2201 LG : Speed Dome

AUX 232

Please click the below link

PTZ Module 0

Base Address	PTZ Install Flag			
0 (0~128)	Ch 1	Ch 2	Ch 3	Ch 4
	☒	☐	☐	☐

Notice : Check the camera PTZ camera port. To use "Base address" option, refer to help menu by clicking ? above.

Please click the below link to configure Preset Name for each PTZ camera.

» Camera 1	» Camera 2
» Camera 3	» Camera 4

4. Base Address + CH # should be equal to PTZ camera address.
 Example) Base Address: 0
 FW3450 ch1 ~ ch4: value of 1~4.
 PTZ camera address connected to CH1: 1
 PTZ camera address connected to CH2: 2
 PTZ camera address connected to CH3: 3
 PTZ camera address connected to CH4: 4
5. After checking channel numbers, please click Save button to save new setting values. The above figure is when only CH1 has a PTZ device connected.)
6. If PTZ camera or Receiver has preset function. You can configure preset positions by clicking

Camera number.

Preset Name at PTZ Camera 1


No.	¹ Preset Name	No.	Preset Name
1	Preset #1	17	Preset #17
2	Preset #2	18	Preset #18
3	Preset #3	19	Preset #19
4	Preset #4	20	Preset #20
5	Preset #5	21	Preset #21
6	Preset #6	22	Preset #22
7	Preset #7	23	Preset #23
8	Preset #8	24	Preset #24
9	Preset #9	25	Preset #25
10	Preset #10	26	Preset #26
11	Preset #11	27	Preset #27
12	Preset #12	28	Preset #28
13	Preset #13	29	Preset #29
14	Preset #14	30	Preset #30
15	Preset #15	31	Preset #31
16	Preset #16	32	Preset #32

²

Notice : The preset name can be 63-alpha-numeric or 31-unicode.
(It means your own characters.)

³

7. Maximum 32 preset positions can be configured and you can change their names.
8. After changing preset names for each preset position, please click "Save" button.
9. Then, please click "Preset & Menu" to set preset position for each preset. You can see below image in a pop-up window and please set your desired position by PTZ function. Click "Set" to save new preset position.
10. After all the preset settings for each preset, Please click "Close" button to close the pop-up window.

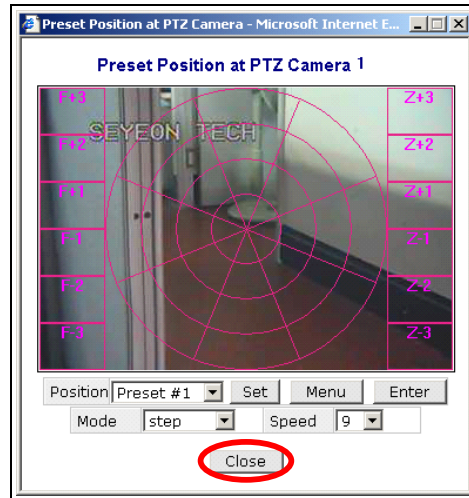


4.2. Camera & Motion [FW-3450 & FW-5450 Only]

This is to configure camera related settings such as camera value string and video quality setting. You can configure different setting values for each channel.

- ✓ Channel: Camera connected to FlexWATCH® Server.

4.2.1. Camera & Motion Configuration

1. Click "Camera & Motion" in Device Configuration group.

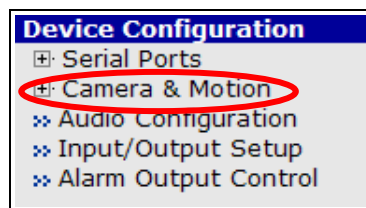

2. You can set various settings such as video data types and information attached to the image.

Camera & Motion Configuration	
Default Video Format	☒ NTSC ☐ PAL
Video with UART sensor data	☐ Enable
Video with user defined message	☐ Enable
Video with PPP status	☐ Enable
Video with camera name	☐ Enable
Video with server name	☐ Enable
Video with IP address	☐ Enable
Time Stamp	☐ Enable
Image Size	352x240 / 352x288 ▼
Frame Rate Control	30 fps ▼
Encoding Standard	☐ M-JPEG ☒ MPEG-4
Back Apply	

- Default Video Format: You can select NTSC or PAL for your camera attached to FlexWATCH® Server.
- Video with UART sensor Data: If you check Enable, UART sensor Data will be sent with its video data.
- Video with user defined message: If you check Enable, user defined message will be sent with its video data.
- Video with PPP status: If you check Enable, PPP status will be sent with its video data.
- Video with camera name: If you check Enable, camera name will be sent with its video data.
- Video with server name: If you check Enable, server name will be sent with its video data.
- Video with IP address: If you check Enable, IP address will be sent with its video data.
- Time Stamp: Time Stamp will be encoded with video data.
- Image Size: You can select Image Size which applies to all channels.

4 types of Image Sizes as below:

Video Format	Full	Large	Normal	Small
NTSC	704 * 480	704 * 240	352 * 240	176 * 112
PAL	704 * 576	704 * 288	352 * 288	176 * 144

- Frame Rate Control: You can select Frame Rate in FPS which applies to all channels. Thus, you can control server traffic by this parameter.
- Encoding Standard: You can select either M-JPEG or MPEG-4 which applies to all channels.



M-JPEG: each video frame or interlaced field of a digital video sequence is separately compressed as a JPEG image. Thus it requires more bandwidth than MPEG-4. However, the quality of a still image is better than MPEG-4.



MPEG4: It consists of I-Frame (standard frame) and P-Frame (difference between pictures). Thus it

requires less bandwidth than M-JPEG. However, if it loses I-Frame or P-Frame due to unstable network, it affects the motion streaming. And also it has lower quality of a still image than M-JPEG. You can control number of P-Frames in FlexWATCH Server.

3. Click "Save" button to save new setting values.

4.2.2. Camera Configuration

Through camera configuration mode, you can adjust the video quality to meet your requirement (FW-3450 & FW-5450 has 4 channels.) Each channel refers to cameras connected to FW-3450 & FW-5450.

1. Please click a Camera number in Camera & Motion Configuration.

Please click the below link to configure each camera.

» Camera 1	» Camera 2
» Camera 3	» Camera 4

Apply

2. Configure the Camera as you wish.

Camera Configuration

Camera Number	1
Camera Name	Cam_1
Camera Install	☒ Enable ☐ Disable
Video Source	☒ Color ☐ Gray
Rate Control Mode	VBR Mode
Image Quality	Normal
GOP Structure	4 [1~16]
Hue	0 (-100 ~ 100)
Saturation	0 (-100 ~ 100)
Contrast	0 (-100 ~ 100)
Brightness	0 (-100 ~ 100)
Motion Sensitivity	0 (-100 ~ 100 : 100 is hypersensitive.)
Motion Detection	☐ Enable ☒ Disable

Back Apply Default

In case of MPEG4

Camera Configuration

Camera Number	1
Camera Name	Cam_1
Camera Install	☒ Enable ☐ Disable
Video Source	☒ Color ☐ Gray
Image Quality	Normal
Hue	0 (-100 ~ 100)
Saturation	0 (-100 ~ 100)
Contrast	0 (-100 ~ 100)
Brightness	0 (-100 ~ 100)
Motion Sensitivity	0 (-100 ~ 100 : 100 is hypersensitive.)
Motion Detection	☐ Enable ☒ Disable

Back Apply Default

In case of M-JPEG

- Camera Number: Channel number, which can't be changed. (1 ~ 4)
- Camera Name: Channel's name with 21 Alpha-numeric letters or 10 Unicode letters.
- Camera Install: When a camera is connected to FlexWATCH server, if you select Enable you can see images from Camera, otherwise, you can't see images from camera.
- Video Source: If you select Gray, the images from camera will be in Gray mode.
- Image Quality settings

MPEG	Rate Control Mode : VBR (Variable Bit Rate) : A Frame is made based on	Image Quality You can control 6 levels (Low Compression, Highest, High, Normal, Low, and Lowest).
------	--	---

	Image quality & GOP Structure. Frame sizes vary depending on bandwidth.	GOP Length between I-Frame and next I-Frame. P-frame is filled up between them.
	Rate Control Mode : CBR (Constant Bit Rate) : A frame is made based on Bit Rate Control and GOP structure but the size of frames is the same.	Bit Rate Control Total number of bits being encoded in a second. The bigger Bit Rates, the better image quality.
		GOP Length between I-Frame and next I-Frame. P-frame is filled up between them.
JPEG		Image Quality You can control 6 levels (Low Compression, Highest, High, Normal, Low, and Lowest).

- ✓ Image Quality : Compressed Image quality

Low Compression	Highest	High	Normal	Low	Lowest
-----------------	---------	------	--------	-----	--------

- ✓ Going left means better image quality with higher network bandwidth.

- ✓ Going right means less network bandwidth with lower image quality.


- Hue: You can control color level of Image between –100 and 100.
 - Saturation: You can control saturation level between -100 and 100.
 - Contrast: You can control contrast level between -100 and 100.
 - Brightness: You can brightness saturation level between -100 and 100.
 - Motion Sensitivity: You can control motion sensitivity under Motion Detection Area.
–The value can be between -100 and 100. (100 is most sensitive.)
 - Motion Detection: If you select Enable, you can set desired motion detected area by yourself.
3. After all settings have been done, click Apply button. If you click Default, all the values will be restored with factory default values.

4.2.3. Motion Detection Area Configuration

1. Select Enable in Motion Detection.



2. You can set motion detected area by clicking each block.

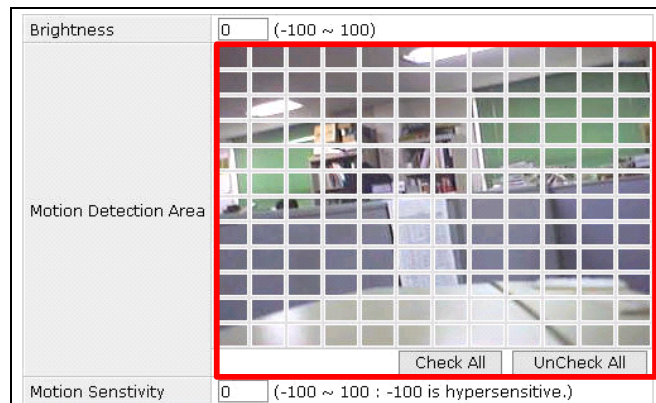


- Check All: you can set all the motion detected area at once.
- UnCheck All: Clear all the motion detected area.
- Motion Sensitivity: you can change motion Sensitivity between -100 and 100. (100 is most sensitive.)

4.3. Camera & Motion [FW-1130 & FW-3150 Only]

This is to configure camera related settings such as camera value string and video quality setting. You can configure different setting values for each channel.

1. Click "Camera & Motion" in Device Configuration group.

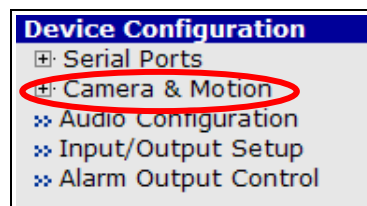

2. You can set various settings such as video data types and information attached to the image.

Camera & Motion Configuration	
Default Video Format	☒ NTSC ☐ PAL
Video with UART sensor data	☐ Enable
Video with user defined message	☐ Enable
Video with PPP status	☐ Enable
Video with camera name	☐ Enable
Video with server name	☐ Enable
Video with IP address	☐ Enable
Frame Rate Control	30 fps v
Primary Stream	Image Size
	352x240 / 352x288 v
Secondary Stream	Encoding Standard
	☒ M-JPEG ☐ MPEG-4
Secondary Stream	Image Size
	352x240 / 352x288 v
Secondary Stream	Encoding Standard
	☒ M-JPEG ☐ MPEG-4
Back Apply	

- Default Video Format: You can select NTSC or PAL for your camera attached to FlexWATCH® Server.
- Video with UART sensor data: If you check Enable, UART sensor Data will be sent with its video data.
- Video with user defined message: If you check Enable, user defined message will be sent with its video data.
- Video with PPP status: If you check Enable, PPP status will be sent in video data header.
- Video with camera name: If you check Enable, camera name will be sent with its video data.
- Video with server name: If you check Enable, server name will be sent with its video data.
- Video with IP address: If you check Enable, IP address will be sent in its video data header.
- Frame Rate Control: You can select Frame Rate in FPS which applies to all channels. Thus, you can control server traffic by this parameter. It applies to both Primary Stream and Secondary Stream.
- Image Size: You can select Image Size for each Stream.

✓ 4 types of Image Sizes as below :

	Full	Large	Normal	Small
NTSC	704 * 480	704 * 240	352 * 240	176 * 112
PAL	704 * 576	704 * 288	352 * 288	176 * 144

- Encoding Format: You can select either M-JPEG or MPEG-4 for Primary Stream and Secondary Stream.



*The Image Size of Primary Stream equals to the Maximum Image Size of Secondary Stream.
Because video source of Secondary Stream is from Primary Stream.*

✓ You can configure CCD functions for FW-1130 as below.

BUILT IN CAMERA CONTROL			
FLK	☐ Enable	AGC	☐ Enable
BLC	☐ Enable	ELC	☒ Enable
Apply			

- FLK (Flickerless): To protect video flickering caused by AC frequency.
- AGC (Automatic Gain Control): To control CCD sensitivity by Gain control.
- BLC(Back Light Compensation): To control the image quality under Back Light
- ELC (Electronic Light Control): To control brightness by automatic shutter speed.



Configuration of Secondary Stream is limited because video source of Secondary Stream is from Primary Stream. Configuration for Camera Install, Video Source to Gray, Hue, Saturation, Contrast, Brightness, and Motion Detection is dependent on Primary Stream's settings.

3. To configure Primary Stream, please click Primary Stream.

Please click the below link to configure each camera.

❖ Primary Stream

❖ Secondary Stream

Camera Configuration (Primary Stream)	
Camera Name	Camera 1
Camera Install	☒ Enable ☐ Disable
Video Source	☒ Color ☐ Gray
Rate Control Mode	VBR Mode
Image Quality	Normal
GOP Structure	4 [1~16]
Hue	0 (-100 ~ 100)
Saturation	0 (-100 ~ 100)
Contrast	0 (-100 ~ 100)
Brightness	0 (-100 ~ 100)
Motion Sensitivity	0 (-100 ~ 100 : 100 is hypersensitive.)
Motion Detection	☐ Enable ☒ Disable
Back Apply Default	

In case of MPEG4

- Camera Name: Channel's name with 21 Alpha-numeric letters or 10 Unicode letters.

Camera Configuration (Primary Stream)	
Camera Name	Camera 1
Camera Install	☒ Enable ☐ Disable
Video Source	☒ Color ☐ Gray
Image Quality	Normal
Hue	0 (-100 ~ 100)
Saturation	0 (-100 ~ 100)
Contrast	0 (-100 ~ 100)
Brightness	0 (-100 ~ 100)
Motion Sensitivity	0 (-100 ~ 100 : 100 is hypersensitive.)
Motion Detection	☐ Enable ☒ Disable
Back Apply Default	

In case of M-JPEG

- Camera Install: When a camera is connected to FlexWATCH server, if you select Enable you can see images from Camera, otherwise, you can't see images from camera.
- Video Source: If you select Gray, the images from camera will be in Gray mode.
- Image Quality settings

MPEG	Rate Control Mode : VBR (Variable Bit Rate) : A Frame is made based on Image quality & GOP Structure. Frame sizes vary depending on bandwidth.	Image Quality You can control 6 levels (Low Compression, Highest, High, Normal, Low, and Lowest).
		GOP Length between I-Frame and next I-Frame. P-frames are filled up between them.
	Rate Control Mode : CBR (Constant Bit Rate) : A frame is made based on Bit Rate Control and GOP structure but the size of frames is the same.	Bit Rate Control Total number of bits being encoded in a second. The bigger Bit Rates, the better image quality.
		GOP Length between I-Frame and next I-Frame. P-frames are filled up between them.
JPEG		Image Quality You can control 6 levels (Low Compression, Highest, High, Normal, Low, and Lowest).

- Image Quality: Compressed Image quality.

Low Compression	Highest	High	Normal	Low	Lowest
--------------------	---------	------	--------	-----	--------


- ✓ Going left means better image quality with higher network bandwidth. .
- ✓ Going right means less network bandwidth with lower image quality.

- Hue: You can control color level of Image between –100 and 100.
- Saturation: You can control saturation level between -100 and 100.
- Contrast: You can control contrast level between -100 and 100.
- Brightness: You can brightness saturation level between -100 and 100
- Motion Sensitivity: You can control motion sensitivity under Motion Detection Area.
–The value can be between -100 and 100. (100 is most sensitive.)
- Motion Detection: If you select Enable, you can set desired motion detected area by yourself.
- After all settings have been done, click Apply button. If you click Default, all the values will be restored with factory default values.

4. Select Enable in Motion Detection.



5. You can set motion detected area by clicking each block.

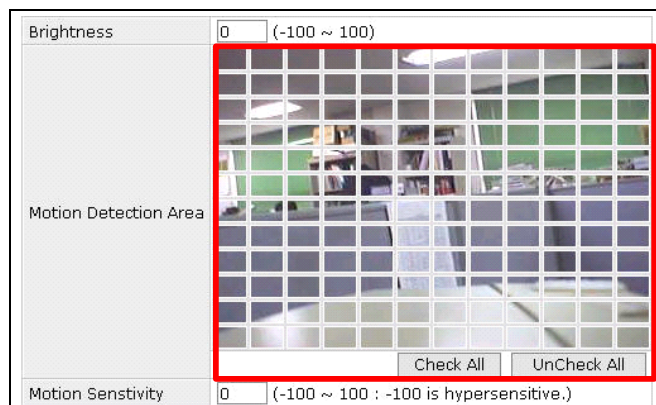

- Check All: can set all the motion detected area at once.
 - UnCheck All: Clear all the motion detected area.
 - Motion Sensitivity: you can change motion Sensitivity between -100 and 100. (100 is most sensitive.)
6. You can configure Secondary Stream.

Camera Configuration (Secondary Stream)	
Camera Name	Camera 2
Rate Control Mode	VBR Mode
Image Quality	Normal
GOP Structure	4 [1~16]
Back Apply Default	

In case of MPEG-4

Camera Configuration (Secondary Stream)	
Camera Name	Camera 2
Image Quality	Normal
Back Apply Default	

In case of M-JPEG



Almost all parameters are dependent on Primary Stream.

4.4. Audio Configuration [FW-3450 & FW-5450 Only]

FW-3450 & FW-5450 support 2-way audio streaming function. Firstly, they get the audio inputs from 4 channels and transmit the audio data with video. And FlexWATCH server also receives the audio data from user's PC and sends out through the Audio output of FlexWATCH server.

Without any external audio devices, you can not only use synchronized audio and video from each channel but also send user's voice or any other sounds to FW-3450 & FW-5450 by PC's microphone and you can hear this audio from FW-3450 & FW-5450 with a speaker.

You can configure the audio functions as below.

Audio Configuration		
Audio Port	32001	» Network Ports
Audio Channel 1	☐ Enable	☒ Disable
Audio Channel 2	☐ Enable	☒ Disable
Audio Channel 3	☐ Enable	☒ Disable
Audio Channel 4	☐ Enable	☒ Disable
Back Apply		

1. Audio Port is a network port that receives audio input from PC. Default value is 32001 and you can change the port number in Network Ports menu.
2. You can select Enable or Disable for each audio channel. If it is enabled, audio input will be transmitted with video data. Otherwise, no audio data will be streamed with video. The default is in Disable.

4.5. Audio Configuration [FW-1130 & FW-3150 Only]

Audio Configuration		
Audio Port	32001	» Network Ports
Audio Configuration	☐ Enable	☒ Disable
Back Apply		

1. Audio Port is a network port that receives audio input from PC. Default value is 32001 and you can change the port number in Network Ports menu. .
2. You can enable or disable the audio function.



FW-1130 / FW-3150 have one video input and audio input. Thus, the audio transmission of Primary Stream and Secondary Stream is identical and Enable/Disable will apply to both streams

4.6. Input/Output Setup [FW-3450 & FW-5450 Only]

FW-3450 & FW-5450 provide you with 4 serial input and output ports. For example, you can connect a sensor to serial input and a flashing light to serial output. In this case, you first install the physical devices and assign names to serial devices so that you can distinguish them later when you have many FlexWATCH servers.

Input / Output Setup

No	Input Name	Output Name
1	Di 1	Do 1
2	Di 2	Do 2
3	Di 3	Do 3
4	Di 4	Do 4

No	Input Type	Output Type
1	☐ Normal Open ☒ Normal Close	☒ Normal Open ☐ Normal Close
2	☐ Normal Open ☒ Normal Close	☒ Normal Open ☐ Normal Close
3	☐ Normal Open ☒ Normal Close	☒ Normal Open ☐ Normal Close
4	☐ Normal Open ☒ Normal Close	☒ Normal Open ☐ Normal Close

Notice : The input & Output name can be 31-alpha-numeric or 15-unicode.
(It means your own characters.)

You can enter Input Name and Output Name with up to 31 alpha-numeric letters or up to 15 Unicode letters. After entering names, please click "Apply" button.

4.6.1. Input / Output Type Configuration

- Please select Normal Open Type for normal open type sensor connected to DI. Normal Open means that a switch normally is off and when an event is occurred the switch turns on.
- Please select Normal Close Type for normal close type sensor connected to DI. Normal Close means that a switch normally is on and when an event is occurred the switch turns off.



Please select Input Type in accordance with Sensor Type and select Output Type in accordance with Alarm's working type. Specially, if you physically don't use DI, please select Normal Open for Input Type.

4.7. Input/Output Setup [FW-1130 & FW-3150 Only]

Input / Output Setup		
No	Input Name	Output Name
1	Di 1	Do 1
No	Input Type	Output Type
1	☐ Normal Open ☒ Normal Close	☒ Normal Open ☐ Normal Close
Back Apply		

4.7.1. Input / Output Type Configuration

- Please select Normal Open Type for normal open type sensor connected to DI. Normal Open means that a switch normally is off and when an event is occurred the switch turns on.
- Please select Normal Close Type for normal close type sensor connected to DI. Normal Close means that a switch normally is on and when an event is occurred the switch turns off.

● *Please select Input Type in accordance with Sensor Type and select Output Type in accordance with Alarm's working type. Specially, if you physically don't use DI, please select Normal Open for Input Type.*

4.8. Alarm Output Control [FW-3450 & FW-5450 Only]

FW-3450 & FW-5450 have 4 Alarm Outputs. If you select Enable for DO, it is arbeit contact; otherwise, it is break contact.

Alarm Output(DO) Control				
Alarm Output(DO) Port Number	1	2	3	4
Enable	☐	☐	☐	☐
Back Apply				

4.9. Alarm Output Control [FW-1130 & FW-3150 Only]

FW-3150 has 1 alarm Output. If you select Enable for DO, it is arbeit contact; otherwise, it is break contact.

Alarm Output(DO) Control	
Alarm Output(DO) Port Number	1
Enable	☐
Back Apply	

5. Advanced Configuration

You can use various advanced functions such as E-mail notification with pre & post alarm images, FTP notification with pre & post alarm images, Sensor notification and Alarm Output, etc.

5.1. Advanced Services

Advanced service configuration is intended to provide more sophisticated functions which are required by sophisticated users. Thus, if you are not familiar with or not good at advanced features, we recommend you to refer to separate Advanced Services Manual.

Advanced Service										
This category shows the detailed method for Advanced Service.										
» Buffering Service	This services are needed buffering space(e-mail, ftp and alarm buffering services). Post alarm buffer is defined in each service category. <table border="1"> <tr> <td>Total buffer size</td> <td>30300</td> <td>kb</td> </tr> <tr> <td>Email,Ftp(Buffered) buffer service</td> <td>30 %</td> <td></td> </tr> <tr> <td>Alarm buffer service</td> <td>70 %</td> <td></td> </tr> </table> Save Notice : If you change these spaces, you have to reboot after saving flash.	Total buffer size	30300	kb	Email,Ftp(Buffered) buffer service	30 %		Alarm buffer service	70 %	
Total buffer size	30300	kb								
Email,Ftp(Buffered) buffer service	30 %									
Alarm buffer service	70 %									
» Non-buffering Service	This services do not need buffering space.									
Status Start Back Stop Apply Notice : To apply new service configurations, click "Stop" button and click "Start" button again. Otherwise new configurations will not be applied although all service configurations are correctly set up.										

Buffering Service Configuration						
Total pre-alarm buffer size : 9090 kb						
Current used buffer size : 0 frames						
	Ch 1	Ch 2	Ch 3	Ch 4	Sum	
Pre-alarm Buffer Size (unit : frame(image))	0	0	0	0	0	
Delay between pre-alarm images (unit : 10 msec)	0	0	0	0		
Back Save Preview buffer configuration Notice : For pre-alarm, Sum of all data in the above table should be less than total buffer size. Pre-alarm buffer size is less than maximum number of pre-alarm images for the services(e-mail,ftp,buffer freezing). For post-alarm,post alarm buffer size is equal to the number of post-alarm images. *Pre-alarm : Number of pre-alarm images. *Post-alarm : Number of post-alarm images. *Delay : Delay between post-alarm images.						
» E-mail	Configuration of E-mail service to send pre-post alarm images conditions.					
» FTP(Buffered)	Configuration of ftp service conditions to send pre-post alarm images.					
» Alarm Buffering	Configuration to freeze pre-post alarm buffering mechanism, which is used with application software to pull buffered images at FlexWATCH™ server's pre-post buffers. It is also possible to preview the alarm buffered images using web browser.					

6. Recording Configuration [FW-5450 Only]

Only when you install a HDD into FlexWATCH® 5450, you can record & search images. Recording configuration menu won't be available if FW5450 is without a HDD. You can do HDD format, HDD information check, motion & event condition setup for recording, etc.

6.1. HDD Configuration

You can do HDD format and HDD information check in this menu.

6.1.1. HDD Format

1. Please turn off FW-5450.




*When you install a HDD (Hard Disk Drive), please **turn off** the FW5450. Otherwise, the HDD might have a problem.*


2. Install a HDD and turn on the FW-5450.
3. Please access to the web page of FW-5450 and go to "Admin" menu. Click "Recording Configuration".




4. Please check current format status of the HDD by Clicking "HDD Information".

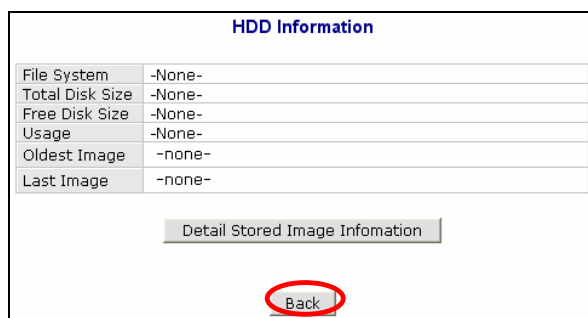

5. If HDD Information has "-None-", it hasn't been formatted yet. Thus, please click "Back" and click "HDD Format".

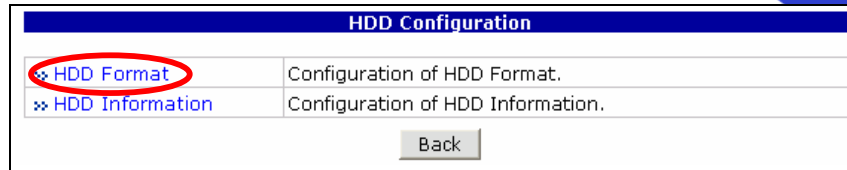


6. When you enable the “check Bad Block” option, the FlexWATCH will check the surface of the HDD for detecting bad blocks. This format takes longer format time and may be several hours depending on the size of HDD.

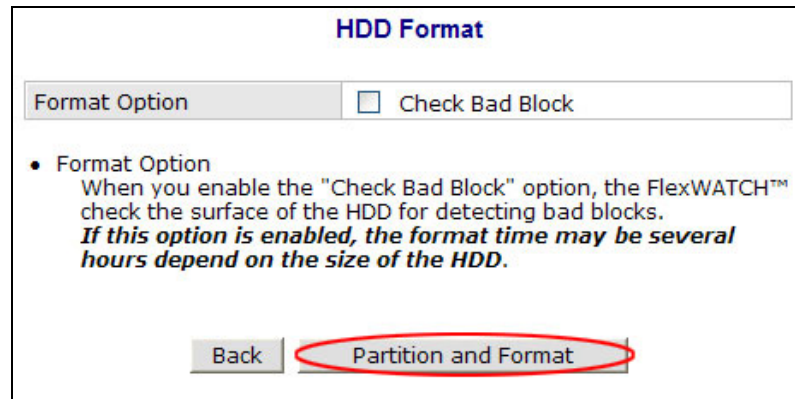


Format times are as follows:

- 80G HDD : about 3 minutes
- 120G HDD: about 5 minutes
- 160G HDD: about 7 minutes
- 250G HDD: about 10 minutes


7. When you click “Partition and Format” button, you will see a pop-up window as below. If you want to format the HDD, please click OK. Otherwise, click Cancel.

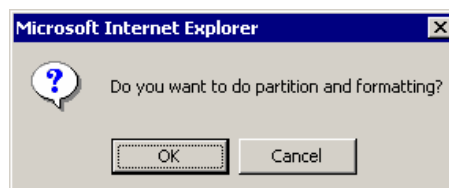


8. If you click OK, you will see the below pop-up window. Please click “Yes” to close the webpage.

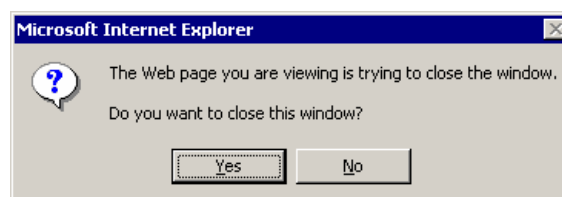

9. After closing webpage, you can check the status of HDD format as below image.

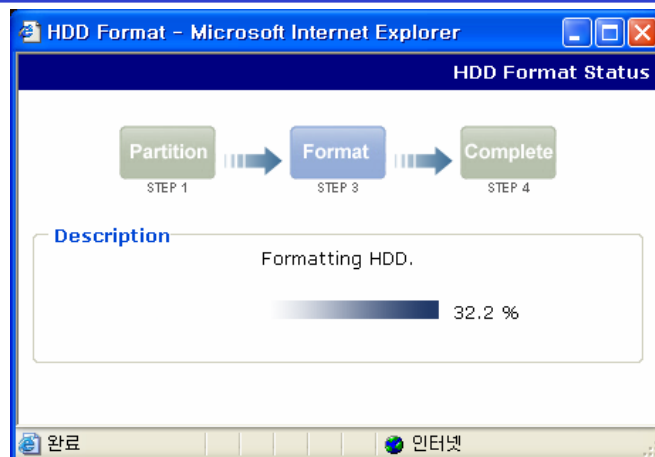

During HDD format, if FW-5450 is shut down abnormally, HDD would be damaged. After completion of HDD format, please click "Reboot" button.

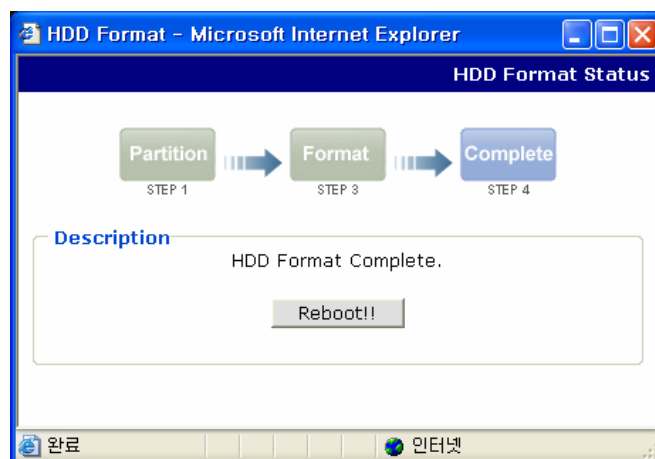

10. After rebooting, please check the current HDD status in HDD information menu as below.

HDD Information	
File System	Default format
Total Disk Size	230.09 Gb
Free Disk Size	218.37 Gb
Usage	5.094 %
Oldest Image	-none-
Last Image	-none-
Detail Stored Image Infomation	
Back	

6.2. Recording Configuration

You can configure recording conditions for each camera such as motion detection recording, 24 hours recording, schedule recording, event recording, etc. If you have cameras registered by “RX Module Registration”, you can also record images from those cameras.

6.2.1. Recording Configuration

When you click “Recording Configuration”, you can see available server list for recording. For example, if FW5450 has 2 FW3450s registered to “RX Module Registration”, VS Module ID shows you 3 servers in the list. Therefore, FW-5450 can record not only its 4 cameras but also other remote cameras attached the other FlexWATCH Server registered to FW-5450. Below is the example of motion detection recording setting.

1. Click “Recording Configuration” in Recording Configuration menu.



2. This menu shows you the list of VS Module ID, Server name, Connection Type, server IP address, and MAC address. You can configure each camera of VS modules. Below is the case that you select “Server Module 0” and select cameras connected to FW-5450 for recording configuration.

VS Module ID	Name	Connection Type	IP Address	MAC Address
Server Module 0	Local Device 0	Local Device	0.0.0.0	00-30-6f-48-64-86

Status: Stop

Back Record Apply

Notice : To start recording following your new recording configuration, click 'Record' button. Otherwise, recording with new configuration will not be started, although all the recording configurations are correctly set up.

3. “Server Module 0” refers to FW-5450 itself. Thus it shows you 4 cameras which can be configured. You can configure each camera by selecting it. If you want to configure the Camera 1, then Click “Camera 1”.

Server Module 0 Recording Configuration

Camera Number	Camera Name
Camera 1	- cam 1 -
Camera 2	- cam 2 -
Camera 3	- cam 3 -
Camera 4	- cam 4 -

[Back](#)

4. After Selecting “Camera 1”, you will see below configuration screen and you can set recording speed, camera name, etc. After changing the setting values, please click “Save” button.

Recording Configuration

Recording Service	☒ Enable ☐ Disable
Server Module ID	0
Server Module Name	
Camera Number	1
Camera Name	- cam 1 -
Pre-Recording Speed	5.0f/s
Pre-Alarm Count	0
Post-Recording Speed	5.0f/s
Post-Alarm Count	0

[Back](#) [Save](#)

Name	Description
Recording Service	If you want to record, please click “Enable”. Otherwise, click “Disable”.
Server Module ID	RX Module ID
Camera Number	Camera number
Camera Name	You can enter camera name with up to 31 alpha-numeric letter or 15 Unicode letters.
Pre-Recording Speed	Recording speed before the event occurs
Pre-Alarm Count	When Event Recording, up to 5 frames right before the event can be recorded.
Post-Recording Speed	Recording speed after the event occurs
Post-Alarm Count	When Event Recording, up to 5 frames right after the event can be recorded.

5. Below menu is for other recording conditions. Up to 4 conditions can be applied to each camera. For example, if you set Condition 1 & 2, FW-5450 will record when Condition 1 or Condition 2 is satisfied.

Please click below link to configure the recording configuration.

❖ Condition 1	[Not Used]
❖ Condition 2	[Not Used]
❖ Condition 3	[Not Used]
❖ Condition 4	[Not Used]

6. You can configure the recording conditions for each camera.

EX) Select Mode: Schedule and Event

Schedule: Tue.

Event: Motion Detection on CH 1

Condition 1: When motion is detected in CH1 on every Tuesday, FW-5450 will do recording.

Condition 1

Service: Recording

Module ID: 0

Camera ID: 1

Enable ☒ **Disable** ☐

Select Mode

- ☐ Always
- ☐ Schedule Only
- ☒ Event Only
- ☐ Schedule and Event

Schedule

Week: Sun Mon Tue Wed Thu Fri Sat

☐ ☐ ☐ ☐ ☐ ☐ ☐

☐ Time (hh:mm) : ~ :

☐ Date (mm/dd) / ~ /

Event

	1	2	3	4	5	6
Alarm Sensor	☐	☐	☐	☐	☐	☐
Motion Detection	☒	☐	☐	☐	☐	☐
Camera Connected	☐	☐	☐	☐	☐	☐
Camera Disconnected	☐	☐	☐	☐	☐	☐

Back **Save**

Menu	Options	Description
Select Mode	Always	24hours 365days recording
	Schedule Only	Recording by Date, Time or Day
	Event Only	Recording by Events such as Alarm, Motion, and Camera Disconnection.
	Schedule and Event	Recording by Schedule and Events
Schedule	Week	You can set from Sunday to Saturday
	Time	You can set Time
	Date	You can set Date
Event	Alarm Sensor	Recording by Alarm sensor from DI
	Motion Detection	1,2,3,4 refer to Camera number. If 1 is checked, when motion is detected in CH1, FW-5450 will record images. For example, if all 1,2,3,4 are checked, then when all of Ch1, Ch2, Ch3, and Ch4 have detected motions, FW-5450 will record images from Camera 1 in the above case.
	Camera Connected	When Camera is physically connected to FW-5450, it will record.
	Camera Disconnected	When Camera is physically disconnected to FW-5450, or power of Camera is off, it will record.

- After recording condition settings, please click “Save” and click “Back” to go back to the previous page to check the status of Condition 1 as following image.

Please click below link to configure the recording configuration.

❖ Condition 1	[M1,]
❖ Condition 2	[Not Used]
❖ Condition 3	[Not Used]
❖ Condition 4	[Not Used]

- After completion of all of recording configuration, Please click “Record” button to start recording. Click “Apply” button to put new setting values into Flash memory.

Recording Configuration - Server				
To configure recording condition for the registered video server module.				
VS Module ID	Name	Connection Type	IP Address	MAC Address
Server Module 0	Local Device 0	Local Device	0.0.0.0	00-30-6f-48-64-86
Status		Recording		
		Back Stop Apply		



When you click Record button, the record button becomes Stop button. If you want to stop Recording, you can click Stop button.

6.3. View Recording Profile

You can see all the setting values that you have set for all the cameras in a pop-up window.

- Click View Recording Profile.

Recording Configuration
⊕ HDD Configuration
⊕ Recording Configuration
❖ View Recording Profile
❖ Recording Mode
❖ HDD Status Report
❖ Clear Recording Config.
❖ Delete Recorded Data

- Then you will see a pop-up window.

Recording Profile																													
Server	Camera	Status	Start Date		End Date		Start Time		End Time		Week							Alarm Sensor						Motion Detection					
			Month	Day	Month	Day	Hour	Min	Hour	Min	Sun	Mon	Tue	Wed	Thu	Fri	Sat	1	2	3	4	5	6	1	2	3	4	5	6
Local Device 0 Unknown (10.10.225.56)	Cam 1 - cam 1 -	☒	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
	[Cam 2]	☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
	[Cam 3]	☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
	Cam 4 - cam 4 -	☒	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	
		☐	XX	XX	XX	XX	XX	XX	XX	XX	XX	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	


6.4. Recording Mode

You can select either Circulation mode or Pause at full mode.

1. Click Recording Mode in Recording Configuration menu.



2. You will see below menu. If you want to keep recording when HDD is full, you can select Circulation mode. FW-5450 will continuously be recording from the beginning of the HDD. If you select "Pause at full" mode, when HDD is full, FW-5450 will stop recording. After recording mode selection, please click "Save". To apply recording, go to "Recording Configuration" menu.

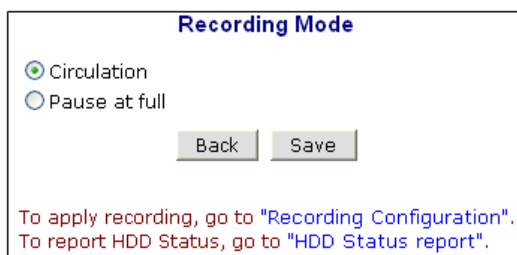

Circulation	Each recorded file is 630Mbytes. When HDD is full, the oldest file of 630Mbytes will be deleted.
Pause at full	When HDD is full, Recording status will become STOP. You can receive email notification by HDD Status Report function.

6.5. HDD Status report

HDD status can be sent to user defined e-mail accounts so that user can get HDD status from the server. Disk full and Periodic status information can be sent to user's e-mail account.

1. Click "HDD Status Report" in Recording Configuration menu.



2. Please enable the services you want. You can choose Day & Time for Periodic Notification.

HDD Status Report							
Disk Full Notification	☒ Enable ☐ Disable						
Periodic Notification	☒ Enable ☐ Disable						
Day	SUN	MON	TUE	WED	THU	FRI	SAT
	☐	☒	☐	☒	☐	☐	☐
Time (hh:mm)	15	:	00				
HDD Error Notification	☒ Enable ☐ Disable						
HDD Error Beep Sound	☒ Enable ☐ Disable						

Disk Full Notification	When HDD is full, you will get an email notification.
Periodic Notification	You will get a periodic report of HDD status based on schedule.
Day & Time	You can choose Day & Time for periodic Notification. In the above setting, you will get a report on every Monday & Wednesday 3 P.M.
HDD Error Notification	When HDD error occurs, you will get an email notification.
HDD Error Beep Sound	When HDD error occurs, you will hear Beep sound by enabling.

3. Please write all the necessary information of your email services such as SMTP server, ID&PW, etc.

SMTP Server	kornet.net
Authentication Login	☒ Enable ☐ Disable
User ID	abcd
Password	*****
Sender	dhhong@seyeon.co.kr
1st Recipient	seyeon@hanmail.net
2nd Recipient	flexwatch@shinbiro.com
3rd Recipient	fw5440@hotmail.com
===== User-Defined Message =====	
It is necessary to disk space confirmation.	
Back Save	

SMTP Server	SMTP Server address
Authentication Login	Select whether you use Authentication login or not
User ID	User ID for Authentication Login
Password	User Password for Authentication Login
Sender	Sender's E-mail address
1st Recipient	Recipients' E-mail addresses (Max. 3 Recipients)
2nd Recipient	
3rd Recipient	
User Defined Message	User defined message attached to E-mail

6.6. Clear Recording Config

This function will initialize the Recording setting values in Recording configuration menu for FW-5450.

1. Click "Clear Recording Config" in Recording Configuration menu.



2. If you click Clear button, you will be asked once again to make sure.


Clear Recording Configuration

- Click 'Clear' to completely delete all the recording configuration you have made in the system and start new configuration.
- Please be more careful not to loose your current recording configuration.

Back

Clear

3. If you click OK, the Recording setting values will be cleared.

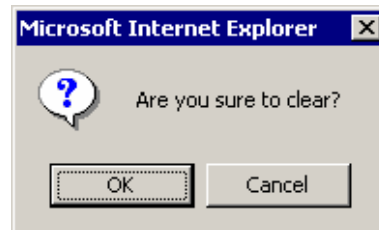**6.7. Delete Recorded Data**

This function is to totally delete all the recorded data in HDD.

1. Click "Delete Recorded Data" in Recording Configuration menu.



2. Click "Delete" button to delete all the data in HDD.


Delete Recorded Data

- Click 'Delete' button to completely delete all the archived video stream in the system.
- If you want to keep all the archived video, please back up the files in the system before proceeding.

Back

Delete

3. You will be asked once again to make sure that you really want to delete all data. If you click "OK", FW-5450 will delete all data in HDD.

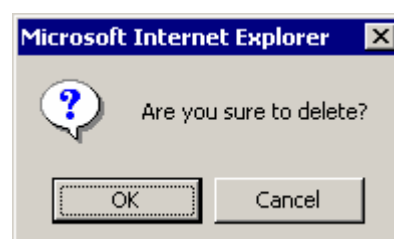


7. Utilities

Flash memory update, rebooting, factory default, system upgrade, etc.


7.1. Save Configuration

This function saves current all settings into Flash Memory. It is highly recommended that you do Save Configuration if you configure something in FlexWATCH® Server.

1. Click "Save Configuration" in Utilities group.

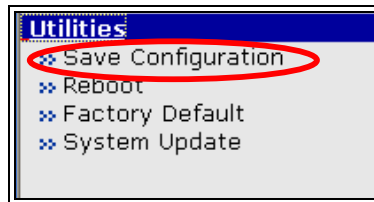


2. Click "Save Configuration" button to save current setting values. Otherwise, click Back button.

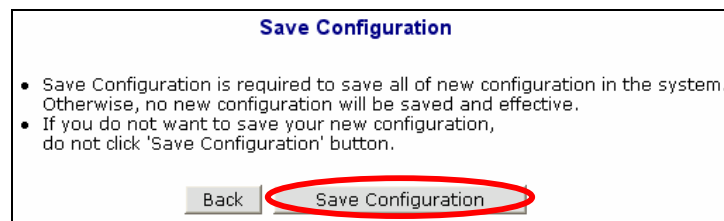

7.2. Reboot

It reboots the FlexWATCH server. It is recommended that you reboot the system, if you configure something and do Save Configuration.


1. Click Reboot in Utilities group.

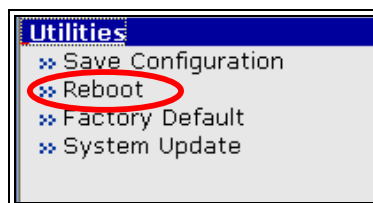

2. Click Reboot button.



3. You will be asked once again to make sure that you really want to reboot the system. If you click "OK", FlexWATCH server will be rebooted.

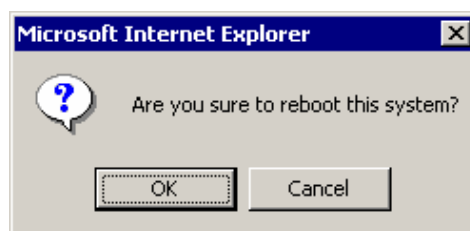


4. After confirmation, It will ask you whether you want to close the web browser or not. You won't be able to access to webpage of FlexWATCH server Until rebooting is completed,


7.3. Factory Default

This function will revert to factory default for FlexWATCH® server except for network related values.

1. Click "Factory Default" in Utilities group.

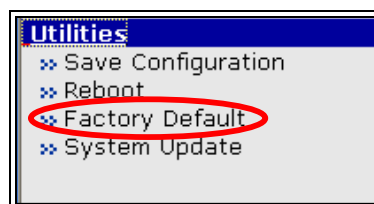

2. Click Factory Default button.

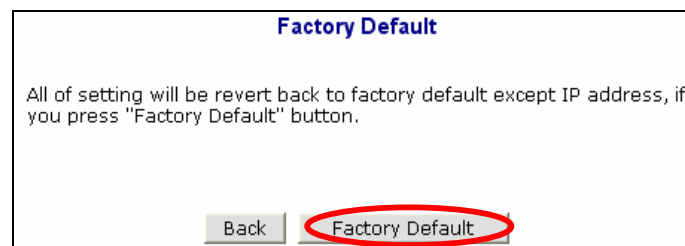


3. You will be asked once again to make sure. If you click "OK" the factory default values will be restored.



7.4. System Update

Here you can update internal program and data for FlexWATCH® Server. Internal program and data of FlexWATCH® Server is saved in Flash Memory. It consists of 4 files including Kernel Image, Ram disk Image, System Image, and Web Image.

You should have 4 separate firmware files in your PC so that you can update your FlexWATCH server with them.

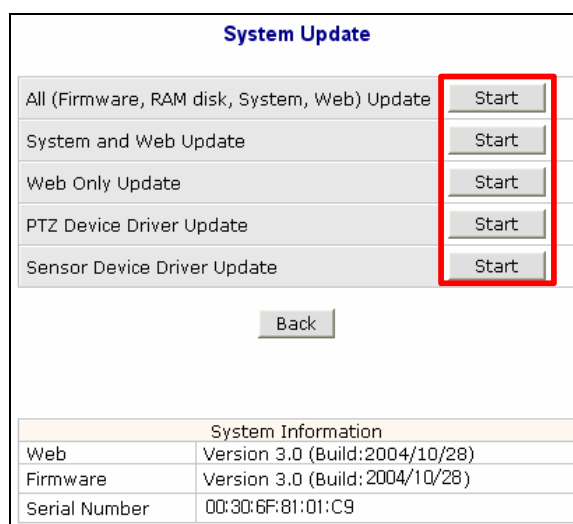

1. All (Firmware, RAM disk, System, Web) Update: You can update all 4 firmware files (Firmware, RAM Disk, System, and Web).
2. System and Web Update: You can update System and Web.
3. Web Only Update: when you want to update Web only.
4. File name reference for FlexWATCH server.



Kernel Image	a_ker_mx [FW-3450 & FW-1130 & FW-3150] a_ker_ms [FW-5450]
RAM Disk Image	a_rfs_x4.gz [FW-3450 & FW-5450] a_rfs_x1.gz [FW-1130 & FW-3150]
System Image	a_sys_m4.tar.gz {FW-3450 & FW-5450} a_sys_m1.tar.gz [FW-1130 & FW-3150]
Web page Image	a_web_xx.tar.gz

- ✓ You can download the latest version of firmware files in download menu of Seyeon Tech Website (www.flexwatch.co.kr, www.seyeon.co.kr).


5. Reboot the system after Update is finished.

7.4.1. All(Kernel, RAM disk, System, Web) Update

1. When you click Start button in All (Firmware, RAM disk, System, Web) Update, you will be asked if you want to keep Update.

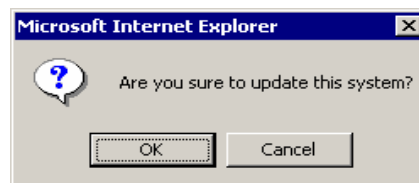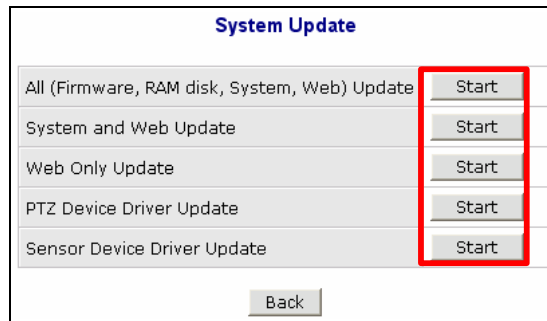


2. You will get a pop-up window where you need to select the firmware image file located in your PC.

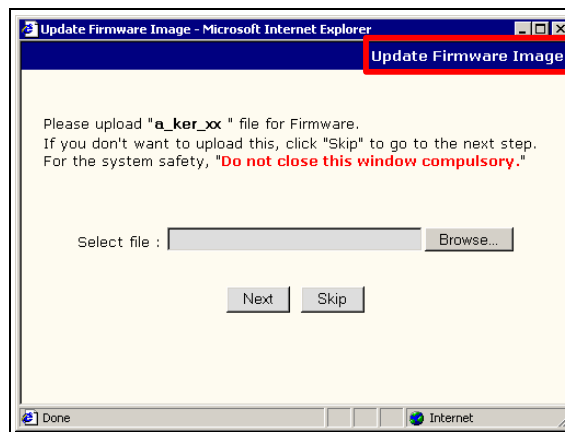


If user's PC has pop-up block function, above window may not be popped up. Thus, please do not use pop-up block function when you do system update in Web page.


3. By Clicking "Browse" button, you can find the firmware image file in your PC.

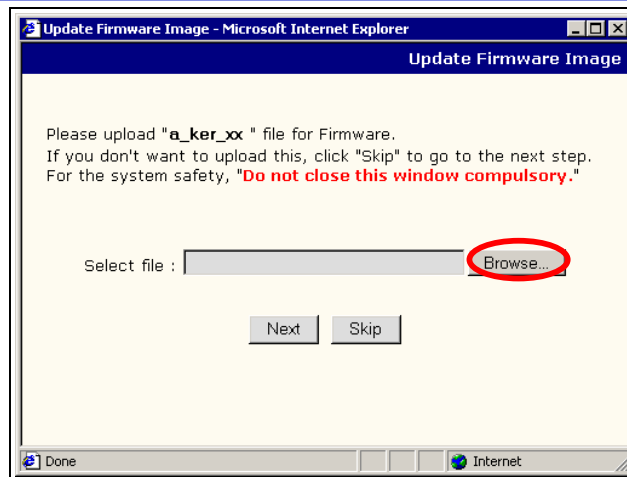

4. To update with selected file, please click “Next” button. Otherwise, click “Skip” to skip the current file update.
5. If you click “Next” button, you can check File Name & File Size.

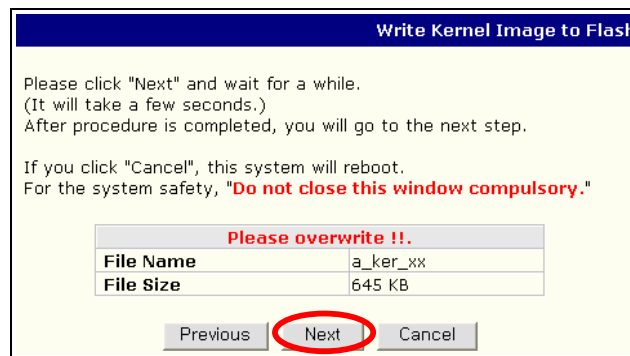


6. If you click “Previous”, you can go to step 2. If you click “Next”, then new firmware will be uploaded to FlexWATCH server. “Cancel” button will stop the Update procedure.
7. Next stage, you can update RAM Disk Image.

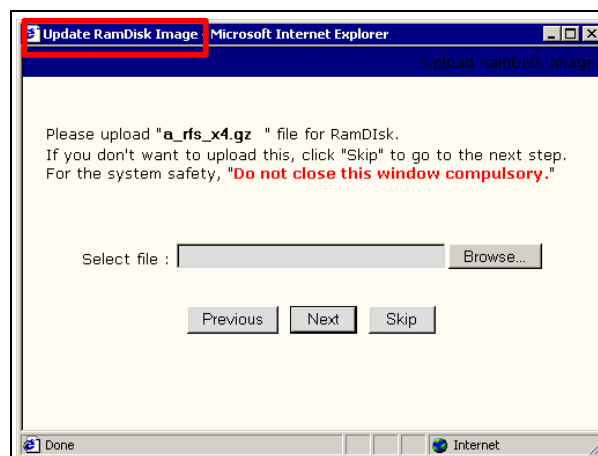

8. The update procedure is the same as step 2~step 5.
9. Next Stage will be update of System Image & Web page. This update procedure is also same


as step 2~step

10. After all update procedure is done, you will see a “Reboot” window. Please click Reboot button to reboot the system.

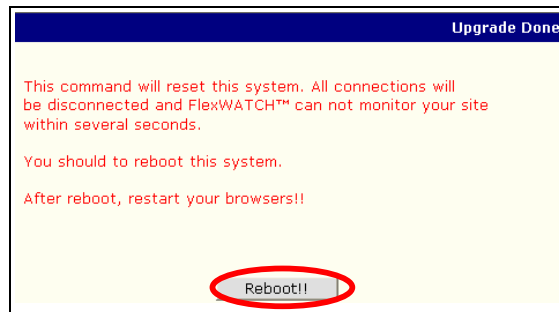

7.4.2. System and Web Update


1. When you click Start button in System and Web Update, you will be asked if you want to keep Update.

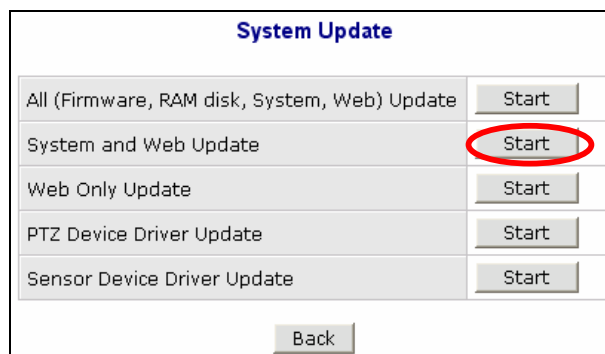

2. The rest of update procedure is the same as All Update procedure.
3. After all update procedure is done, Please click Reboot button to reboot the system.

7.4.3. Web Only Update

1. When you click Start button in Web Only Update, you will be asked if you want to keep Update.

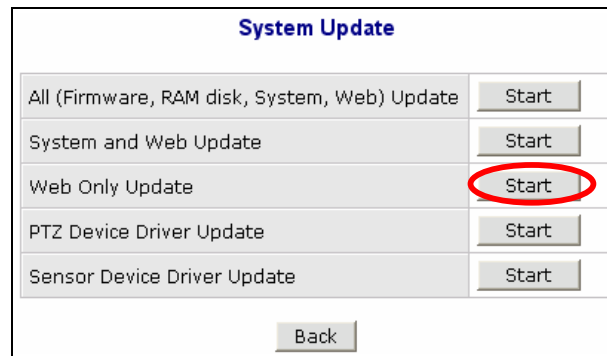

The image shows a 'System Update' window with a title bar. Inside, there is a table with two columns: update options and 'Start' buttons. The options are: 'All (Firmware, RAM disk, System, Web) Update', 'System and Web Update', 'Web Only Update', 'PTZ Device Driver Update', and 'Sensor Device Driver Update'. The 'Web Only Update' row is highlighted with a red circle around its 'Start' button. Below the table is a 'Back' button.

System Update	
All (Firmware, RAM disk, System, Web) Update	Start
System and Web Update	Start
Web Only Update	Start
PTZ Device Driver Update	Start
Sensor Device Driver Update	Start

Back

2. The rest of update procedure is the same as All Update procedure.